### New Electromechanical Icemaker

Electromechanical WR30X10093 *Supersedes* Electronic WR30X10061

Note: The two icemakers are *interchangeable*. The WR30X10061 operates in refrigerators produced with the electromechanical model. The WR30X10093 operates in all refrigerators, including models with the older electronic icemaker.



#### NEW

### WR30X10093



### OLD

### WR30X10061



# WR30X10093 Specifications

- 7 cube mold
- 2 lbs ice production per 24 hours (approximately 70 – 100 cubes)
- Normal cube height 3/4" at midpoint
- Normal water fill is 95 cc's per cycle (approximately 3 ounces)
- Normal fill time is 5.1 seconds
- Normal cycle time is 3 minutes
- Water fill adjustment screw
- On/Off slide lever





### **On/Off Slide Lever**

New design On/Off slide lever holds feeler arm in "OFF" position or allows free movement in "ON" position





### **On/Off Slide Lever**

On Position: Lever allows feeler arm to move normally





### **On/Off Slide Lever**

Off Position: Notched area secures feeler arm in off position. —





### Water Fill Adjustment

Pry off cover to expose adjustment screw





Factory fill time is 5.1 seconds and fill quantity is approximately 95 cc's

#### Maximum fill time is 8 seconds



### Water Fill Adjustment

Switch plate linkage —



*The adjustment screw moves the switch plate linkage forward and backward to adjust water switch contact with cam* 

 Water adjustment screw (side view)

1 complete revolution of the adjustment screw is approximately 1 second or 18 cc's of water

imagination at work

# Manually Starting A Cycle

Pull the rake arm forward as seen in the photo

The further it is pulled forward, the shorter the initial cycle time

#### Normal cycle time is 3 minutes

Pulling the rake arm completely forward reduces cycle time to 1.5 minutes (from 9:00 to 3:00)





### **Icemaker Switches**



#### NOTE: The icemaker is replaced as a complete assembly



### **Heater and Sensors**



Heater The heater is in series with the water valve

Replacing the water valve is not necessary

#### NOTE: The icemaker is replaced as a complete assembly



### **Feeler Arm Operation**



# Engages feeler arm switch with this post

#### Backside of On/Off lever

Feeler arm screws into bottom of the post



### **Feeler Arm Operation**



#### This arm rides on the gear shaft

Inside area with yellow arrows acts like a clutch to allow for easy turning of the rake arm to initiate a service mode (The gear with the teeth does not turn during initiation of the service mode, however once the motor starts it engages the gear)



imagination at work

# Schematic



Note the mold heater is in series with the water valve.



# Installation



Depending upon the original configuration, some of the components shown above may need to be transferred to the new Icemaker.

