

LED 1	LED 2		
Pots Pans	Normal Wash	Service Cycle Only	Error Code
1	1		Moisture sensor disconnect
1	2		Motor Control Status Error
1	4		Diverter Timeout
1	5		Drain Error
2	2		Fill Error
3	1		User Interface - Main Control Communication Error
3	2	YES	Pump Flow Error
3	3		Drain Pump Error
3	4		N/A
3	5		N/A
4	1		Temperature Sensor Error
4	2	YES	Wash Heater Error
4	3	YES	Dispenser Error
4	4	YES	Inlet Valve Error
4	5		
5	4	YES	Current Sense Error
5	5		Internal Error
Flash both LED1 and LED2			Moisture Sensor - water detection
Flash all LEDs but start and run continuously			AC Power Loss