



April 23, 2008

Attn: Field Service Team


Ref: MDW24 Dishwasher "CF" Failure

Under normal circumstances the MDW24 dishwasher may display a clean filter "CF" in the digital display window. This will occur normally if the removable filter system needs cleaning.

We have discovered that in rare circumstances, the low water pressure switch can also trigger the "CF" indication. If the consumer has already cleaned the filter and you continue to experience the problem, please remove the front/lower access panel and locate pressure switch assembly on the right side. As illustrated below: make sure that all wires leading to the "low pressure switch" are firmly located in place as shown. Take corrective action as is necessary to either repair, re-attach or tighten all wires.



Low Pressure Switch

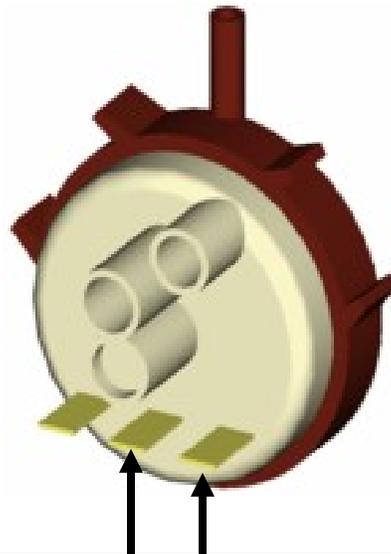

Check these 2 terminals
Normally Open Circuit
Close's when water fills sump