


## DISPENSER DISASSEMBLY



Dispenser disassembly  
Remove drip catch tray. Friction fit  
Remove two ¼" hex head screws

## REMOVING THE BEZEL

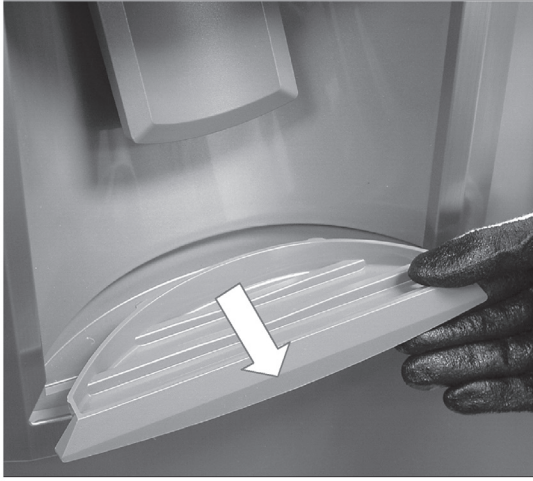

Grasp both sides of the fascia and pull out and lift



## REMOVING THE BEZEL (continued)



Remove the four ¼" hex head screws.




Release the catches on the sides of the clear plastic light shield and remove.

# REMOVING THE BEZEL (continued)



Remove the water tube from the dispenser assembly.

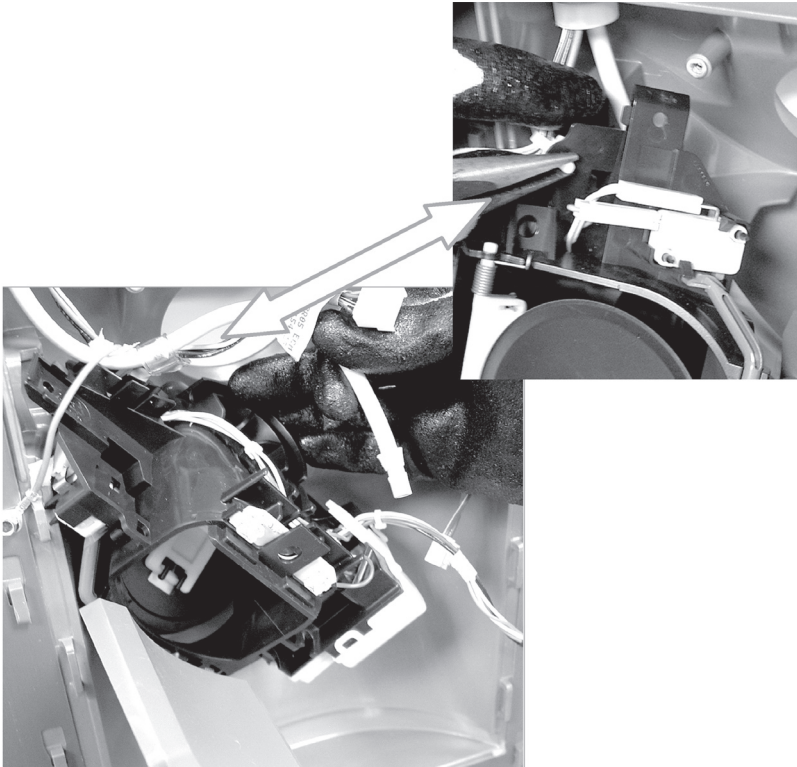

Use needle nose pliers to depress the ears on the wire tie harness and remove harness from the dispenser assembly.