



LG

<http://biz.lgservice.com>

SXS REFRIGERATOR

SERVICE MANUAL

CAUTION

**PLEASE READ CAREFULLY THE SAFETY PRECAUTIONS OF THIS BOOK
BEFORE CHECKING OR OPERATING THE REFRIGERATOR.**



**MODEL: LRSPC2051AB / LRSPC2051BM
LRSPC2051ST**

**COLOR: ATLANTIC BLUE
BLACK MIRROR
STAINLESS STEEL**

CONTENTS

WARNINGS AND PRECAUTIONS FOR SAFETY	3
SPECIFICATIONS.....	4
PARTS IDENTIFICATION	12
HOW TO INSTALL THE REFRIGERATOR	18
HOW TO ADJUST DOOR HEIGHT OF THE REFRIGERATOR.....	18
HOW TO CONTROL THE AMOUNT OF WATER SUPPLIED TO THE ICEMAKER	20
MICOM FUNCTION	22
EXPLANATION FOR MICOM CIRCUIT	30
EXPLANATION FOR PWB CIRCUIT	30
COMPENSATION CIRCUIT FOR TOO WARM, TOO COLD AT FREEZER.....	44
PWB PARTS DRAWING AND LIST	47
PWB CIRCUIT DIAGRAM	57
ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD.....	61
WORKING PRINCIPLES.....	61
FUNCTION OF ICE MAKER	62
ICEMAKER TROUBLESHOOTING.....	65
ICEMAKER CIRCUIT PART	66
CIRCUIT.....	67
TROUBLE DIAGNOSIS	69
TROUBLE SHOOTING	69
FAULTS	79
COOLING CYCLE HEAVY REPAIR.....	96
HOW TO DEAL WITH CLAIMS	103
HOW TO DISASSEMBLE AND ASSEMBLE	108
DOOR.....	108
HANDLE	109
SHROUD, GRILLE FAN	109
ICEMAKER.....	109
DISPENSER.....	110
WATER TANK AND WATER LINE.....	112
HOME BAR.....	112
EXPLODED VIEW.....	113
REPLACEMENT PARTS LIST	122

WARNINGS AND PRECAUTIONS FOR SAFETY


Please observe the following safety precautions to use the refrigerator safely and correctly and to prevent accident or injury when servicing.

1. Be careful of an electric shock. Disconnect power cord from wall outlet and wait for more than three minutes before replacing PWB parts. Shut off the power whenever replacing and repairing electric components.
2. When connecting power cord, please wait for more than five minutes after power cord was disconnected from the wall outlet.
3. Please check if the power plug is pressed down by the refrigerator against the wall. If the power plug was damaged, it may cause fire or electric shock.
4. If the wall outlet is overloaded, it may cause fire. Please use a dedicated circuit for the refrigerator.
5. Please make sure the outlet is properly grounded, particularly in a wet or damp area.
6. Use standard electrical components.
7. Make sure the hooks are correctly engaged. Remove dust and foreign materials from the housing and connecting parts.
8. Do not fray, damage, machine, heavily bend, pull out, or twist the power cord.
9. Please check for evidence of moisture intrusion in the electrical components. Replace the parts or mask with insulation tape if moisture intrusion was confirmed.
10. Do not touch the icemaker with hands or tools to confirm the operation of geared motor.
11. Do not suggest that customers repair their refrigerator themselves. This work requires special tools and knowledge. Non-professionals could cause fire, injury, or damage to the product.
12. Do not store flammable materials such as ether, benzene, alcohol, chemicals, gas, or medicine in the refrigerator.
13. Do not put anything on top of the refrigerator, especially something containing water, like a vase.
14. Do not put glass bottles with full of water into the freezer. The contents will freeze and break the glass bottles.
15. When you scrap or discard the refrigerator, please remove the doors and dispose of it where children are not likely to play in or around it.


SPECIFICATIONS

1. Ref No. : GR-P247

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×847(D)×1756(H)mm (35 ¹ / ₃ ×33 ¹ / ₃ ×69 ¹ / ₈ in.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
NET WEIGHT	151kg (332 ⁷ / ₈ lbs.)	FIRST DEFROST	4 - 5 Hours
COOLING SYSTEM	Fan Cooling	DEFROST CYCLE	13 - 15 Hours
TEMPERATURE CONTROL	Micom Control	DEFROSTING DEVICE	Heater, Sheath Heater, L - Cord
DEFROSTING SYSTEM	Full Automatic Heater Defrost	ANTI SWEAT HEATER	Dispenser Duct Door Heater Dispenser Heater Home Bar Heater
INSULATION	Cyclo-Pentane	ANTI-FREEZING HEATER	Water Tank Heater Damper Heater
COMPRESSOR	P.T.C. Starting Type	FREEZER LAMP	40W (1 EA)
EVAPORATOR	Fin Tube Type	REFRIGERATOR LAMP	40W (1 EA)
CONDENSER	Wire Condenser	DISPENSER LAMP	15W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)		
LUBRICATING OIL	FREOL @15G (320 cc)		
DRIER	1Ø0.83		

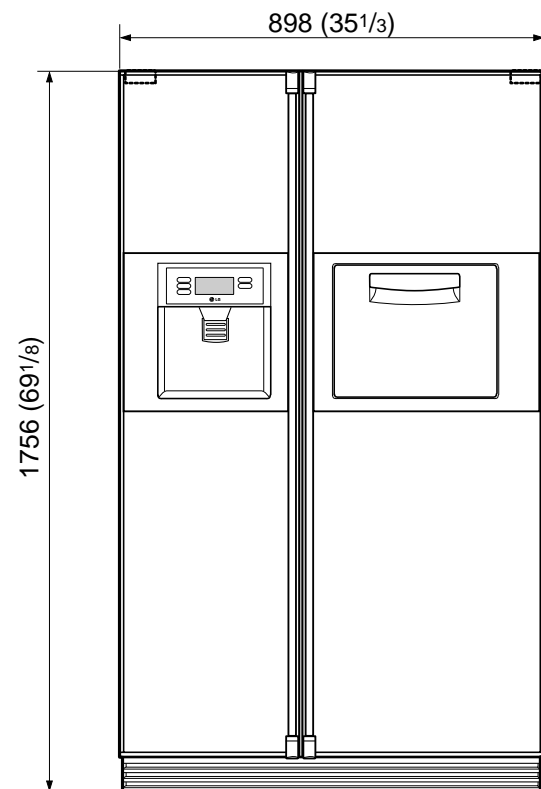

<Front View>

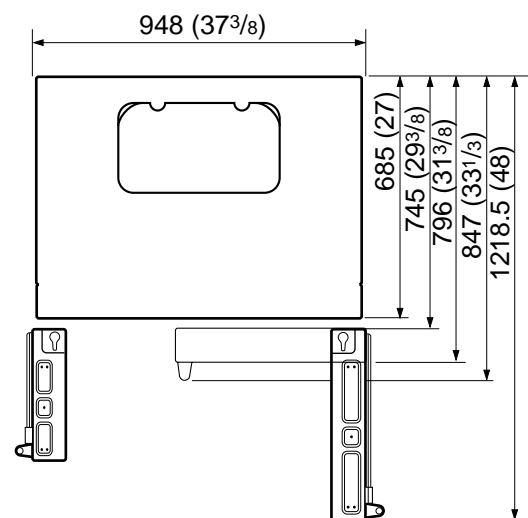


<Plane View>


SPECIFICATIONS

2. Ref No. : GR-P207

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×762(D)×1756(H)mm (35 ¹ / ₃ ×30×69 ¹ / ₈ in.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
NET WEIGHT	146kg (321 ⁷ / ₈ lbs.)	FIRST DEFROST	4 - 5 Hours
COOLING SYSTEM	Fan Cooling	DEFROST CYCLE	13 - 15 Hours
TEMPERATURE CONTROL	Micom Control	DEFROSTING DEVICE	Heater, Sheath Heater, L - Cord
DEFROSTING SYSTEM	Full Automatic Heater Defrost	ANTI SWEAT HEATER	Dispenser Duct Door Heater Dispenser Heater Home Bar Heater
INSULATION	Cyclo-Pentane	ANTI-FREEZING HEATER	Water Tank Heater Damper Heater
COMPRESSOR	P.T.C. Starting Type	FREEZER LAMP	40W (1 EA)
EVAPORATOR	Fin Tube Type	REFRIGERATOR LAMP	40W (1 EA)
CONDENSER	Wire Condenser	DISPENSER LAMP	15W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)		
LUBRICATING OIL	FREOL @15G (320 cc)		
DRIER	1Ø0.83		

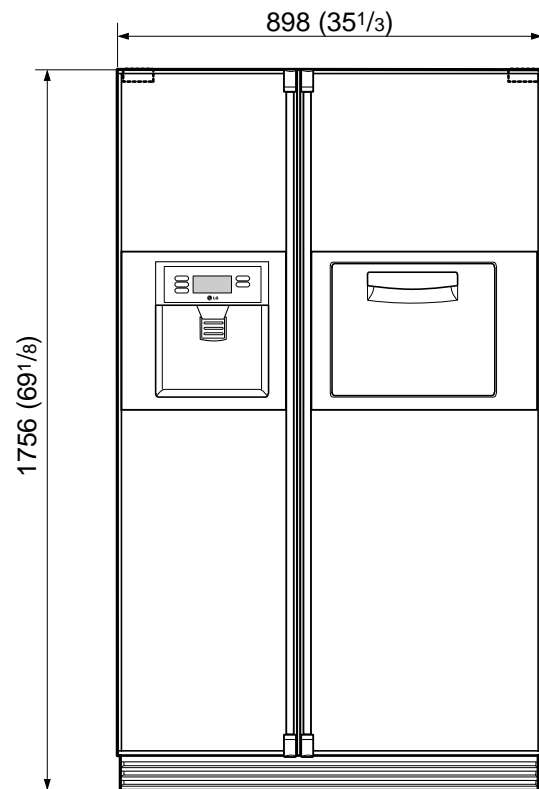

<Front View>

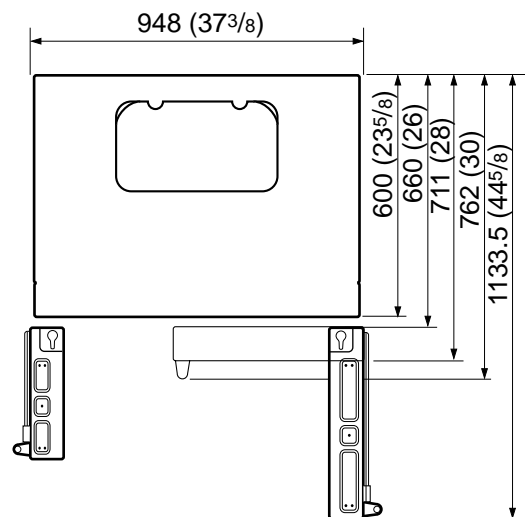


<Plane View>


SPECIFICATIONS

3. Ref No. : GR-L247

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×847(D)×1756(H)mm (35 ¹ / ₃ ×33 ¹ / ₃ ×69 ¹ / ₈ in.)	DRIER	1∅0.83
NET WEIGHT	145kg (319 ² / ₃ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic	DEFROSTING DEVICE	Heater, Sheath
	Heater Defrost		Heater, L-Cord
INSULATION	Cyclo-Pentane	ANTI SWEAT HEATER	Dispenser Duct Door Heater
COMPRESSOR	P.T.C. Starting Type		Dispenser Heater
EVAPORATOR	Fin Tube Type	ANTI-FREEZING HEATER	Water Tank Heater
CONDENSER	Wire Condenser		Damper Heater
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)	FREEZER LAMP	40W (1 EA)
LUBRICATING OIL	FREOL @15G (320 cc)	REFRIGERATOR LAMP	40W (1 EA)
		DISPENSER LAMP	15W (1 EA)

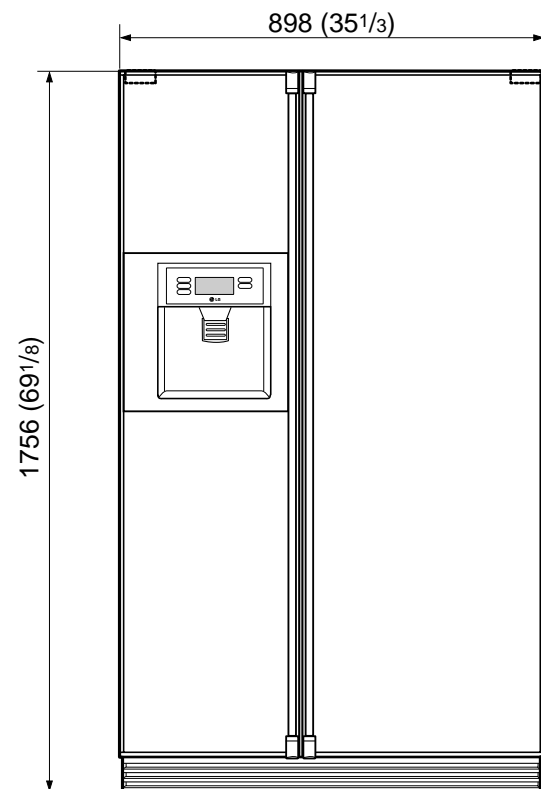

<Front View>

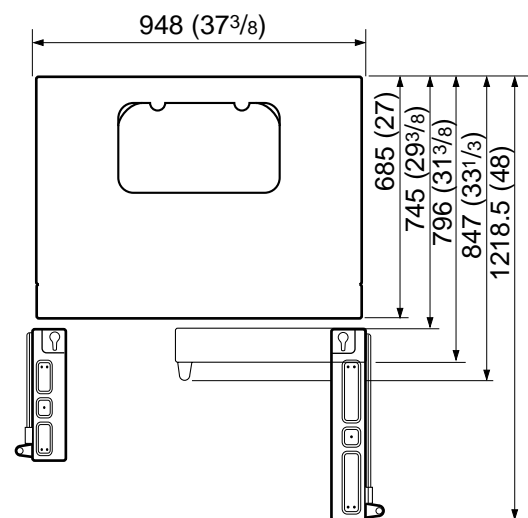


<Plane View>


SPECIFICATIONS

4. Ref No. : GR-L207

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×762(D)×1756(H)mm (35 ¹ / ₃ ×30×69 ¹ / ₈ in.)	DRIER	1∅0.83
NET WEIGHT	140kg (308 ¹ / ₃ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic	DEFROSTING DEVICE	Heater, Sheath
	Heater Defrost		Heater, L-Cord
INSULATION	Cyclo-Pentane	ANTI SWEAT HEATER	Dispenser Duct Door Heater
COMPRESSOR	P.T.C. Starting Type		Dispenser Heater
EVAPORATOR	Fin Tube Type	ANTI-FREEZING HEATER	Water Tank Heater
CONDENSER	Wire Condenser		Damper Heater
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)	FREEZER LAMP	40W (1 EA)
LUBRICATING OIL	FREOL @15G (320 cc)	REFRIGERATOR LAMP	40W (1 EA)
		DISPENSER LAMP	15W (1 EA)

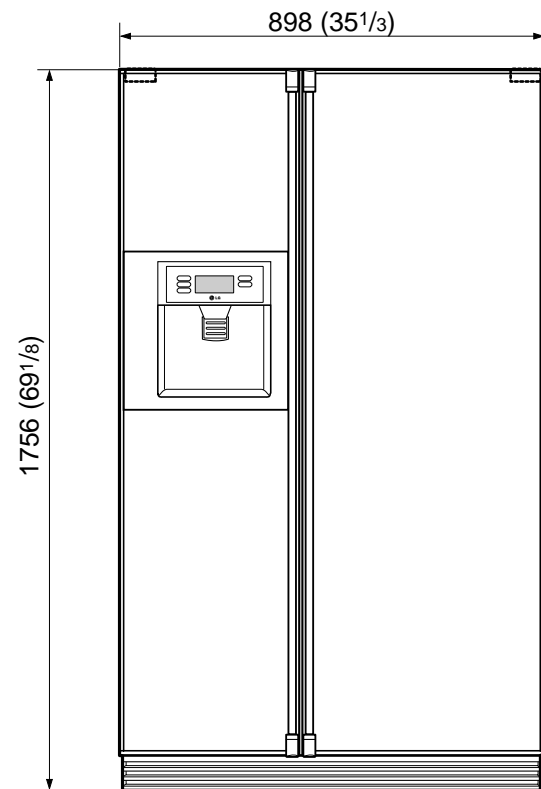

<Front View>

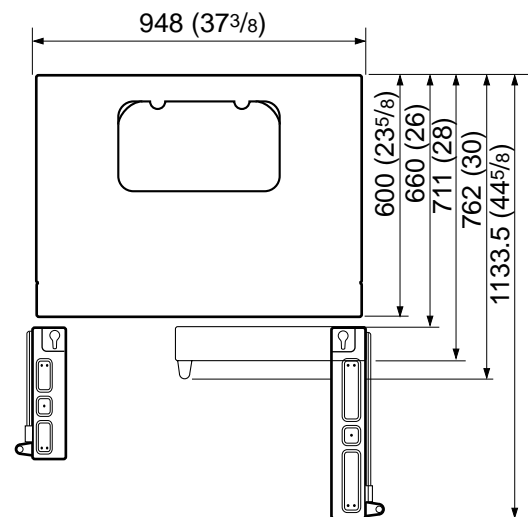


<Plane View>


SPECIFICATIONS

1. Ref No. : GR-C247

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×847(D)×1756(H)mm (35 ¹ / ₃ ×33 ¹ / ₃ ×69 ¹ / ₈ in.)	DRIER	1∅0.83
NET WEIGHT	142kg (313 ¹ / ₂ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic	DEFROSTING DEVICE	Heater, Sheath
	Heater Defrost		Heater, L - Cord
INSULATION	Cyclo-Pentane	ANTI SWEAT HEATER	Home Bar Heater
COMPRESSOR	P.T.C. Starting Type	ANTI-FREEZING HEATER	Damper Heater
EVAPORATOR	Fin Tube Type	FREEZER LAMP	40W (1 EA)
CONDENSER	Wire Condenser	REFRIGERATOR LAMP	40W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)	DISPENSER LAMP	15W (1 EA)
LUBRICATING OIL	FREOL @15G (320 cc)		

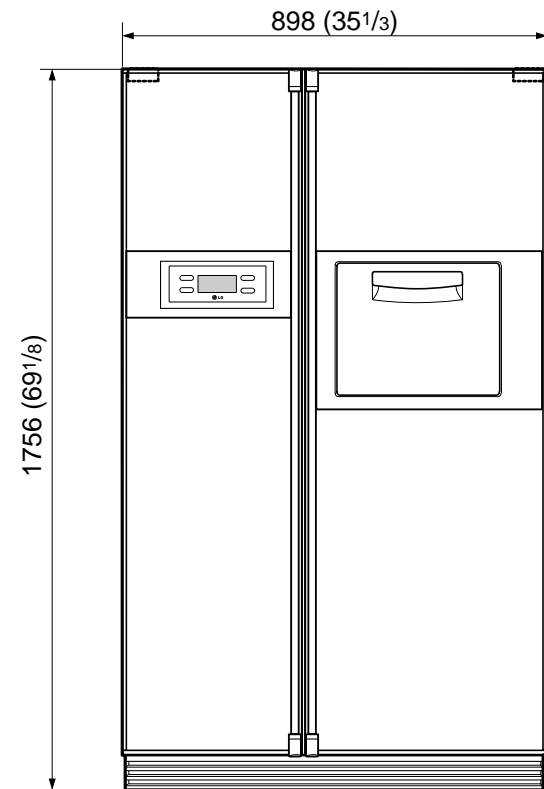

<Front View>

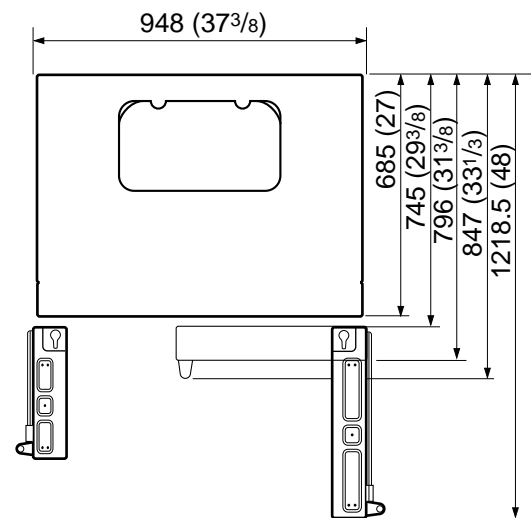


<Plane View>


SPECIFICATIONS

2. Ref No. : GR-C207

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×762(D)×1756(H)mm (35 ¹ / ₃ ×30×69 ¹ / ₈ in.)	DRIER	1Ø0.83
NET WEIGHT	137kg (302 ² / ₇ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic Heater Defrost	DEFROSTING DEVICE	Heater, Sheath Heater, L - Cord
INSULATION	Cyclo-Pentane	ANTI SWEAT HEATER	Home Bar Heater
COMPRESSOR	P.T.C. Starting Type	ANTI-FREEZING HEATER	Damper Heater
EVAPORATOR	Fin Tube Type	FREEZER LAMP	40W (1 EA)
CONDENSER	Wire Condenser	REFRIGERATOR LAMP	40W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)	DISPENSER LAMP	15W (1 EA)
LUBRICATING OIL	FREOL @15G (320 cc)		

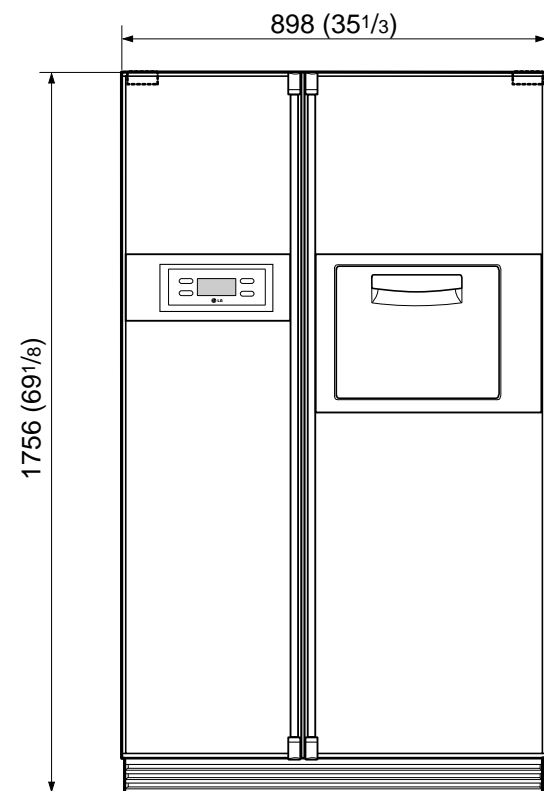

<Front View>

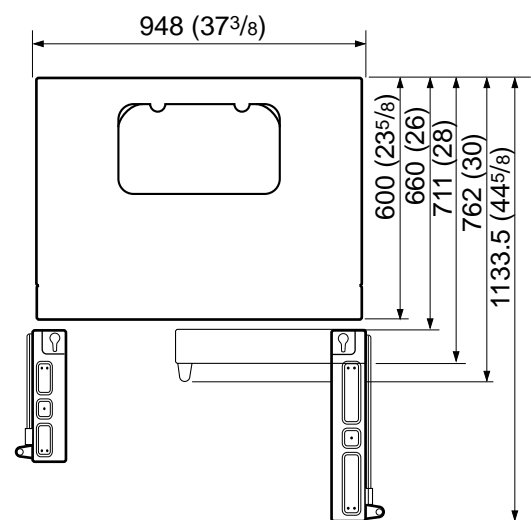


<Plane View>


SPECIFICATIONS

3. Ref No. : GR-B247

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)x847(D)x1756(H)mm (35 ¹ / ₃ x33 ¹ / ₃ x69 ¹ / ₈ in.)	DRIER	1Ø0.83
NET WEIGHT	140kg (308 ¹ / ₃ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic	DEFROSTING DEVICE	Heater, Sheath
	Heater Defrost		Heater, L-Cord
INSULATION	Cyclo-Pentane	ANTI-FREEZING HEATER	Damper Heater
COMPRESSOR	P.T.C. Starting Type	FREEZER LAMP	40W (1 EA)
EVAPORATOR	Fin Tube Type	REFRIGERATOR LAMP	40W (1 EA)
CONDENSER	Wire Condenser	DISPENSER LAMP	15W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)		
LUBRICATING OIL	FREOL @ 15G (320 cc)		

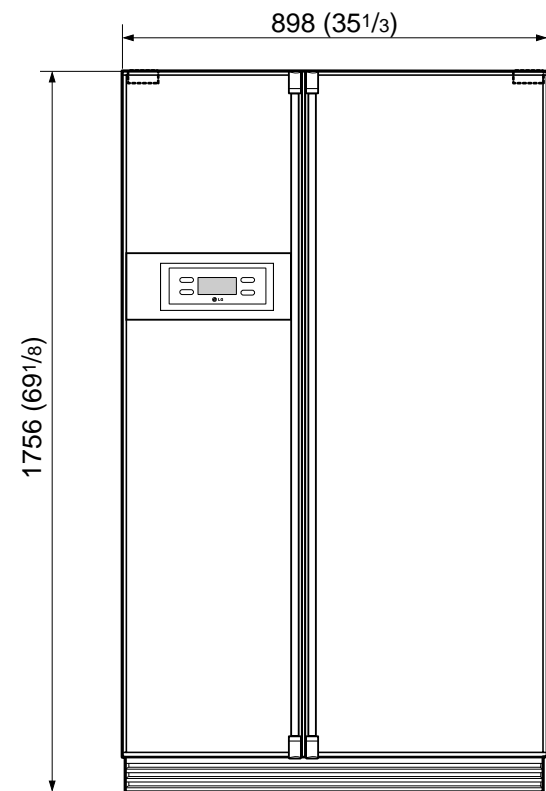

<Front View>

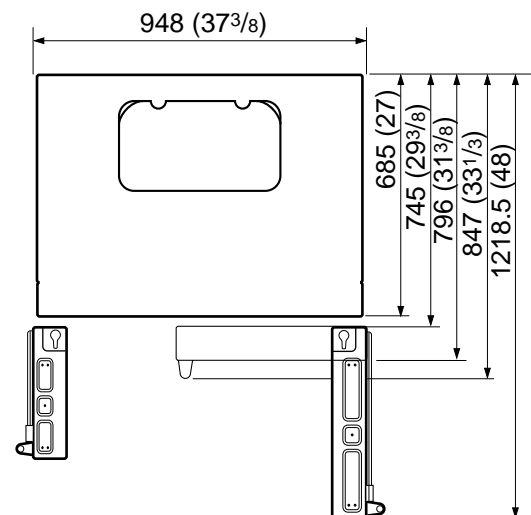


<Plane View>


SPECIFICATIONS

4. Ref No. : GR-B207

ITEMS	SPECIFICATIONS	ITEMS	SPECIFICATIONS
DIMENSIONS	898(W)×762(D)×1756(H)mm (35 ¹ / ₃ ×30×69 ¹ / ₈ in.)	DRIER	1∅0.83
NET WEIGHT	135kg (297 ⁵ / ₈ lbs.)	CAPILLARY TUBE	MOLECULAR SIEVE XH-7
COOLING SYSTEM	Fan Cooling	FIRST DEFROST	4 - 5 Hours
TEMPERATURE CONTROL	Micom Control	DEFROST CYCLE	13 - 15 Hours
DEFROSTING SYSTEM	Full Automatic	DEFROSTING DEVICE	Heater, Sheath
	Heater Defrost		Heater, L-Cord
INSULATION	Cyclo-Pentane	ANTI-FREEZING HEATER	Damper Heater
COMPRESSOR	P.T.C. Starting Type	FREEZER LAMP	40W (1 EA)
EVAPORATOR	Fin Tube Type	REFRIGERATOR LAMP	40W (1 EA)
CONDENSER	Wire Condenser	DISPENSER LAMP	15W (1 EA)
REFRIGERANT	R134a (185g) (6 ¹ / ₂ oz.)		
LUBRICATING OIL	FREOL @ 15G (320 cc)		

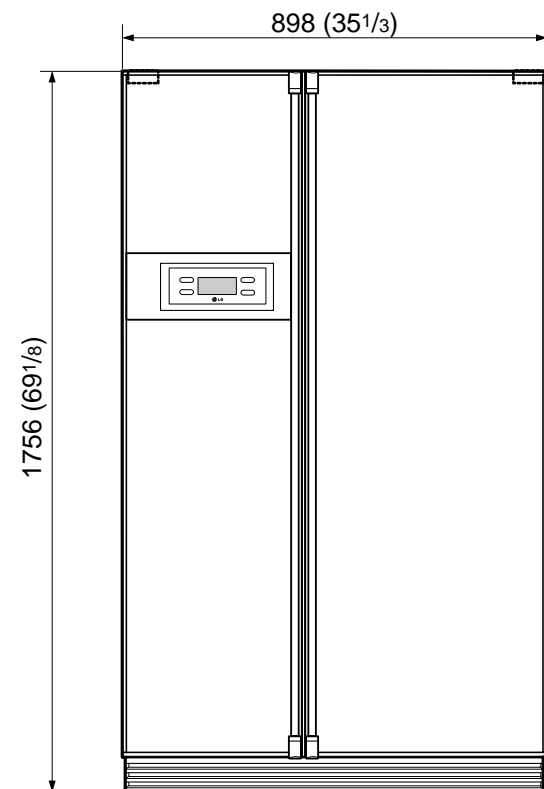



<Front View>

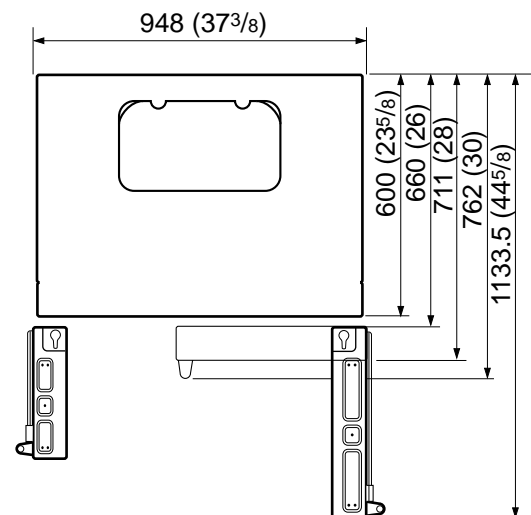

<Plane View>



PARTS IDENTIFICATION

3. Ref No. : GR-L247, GR-L207

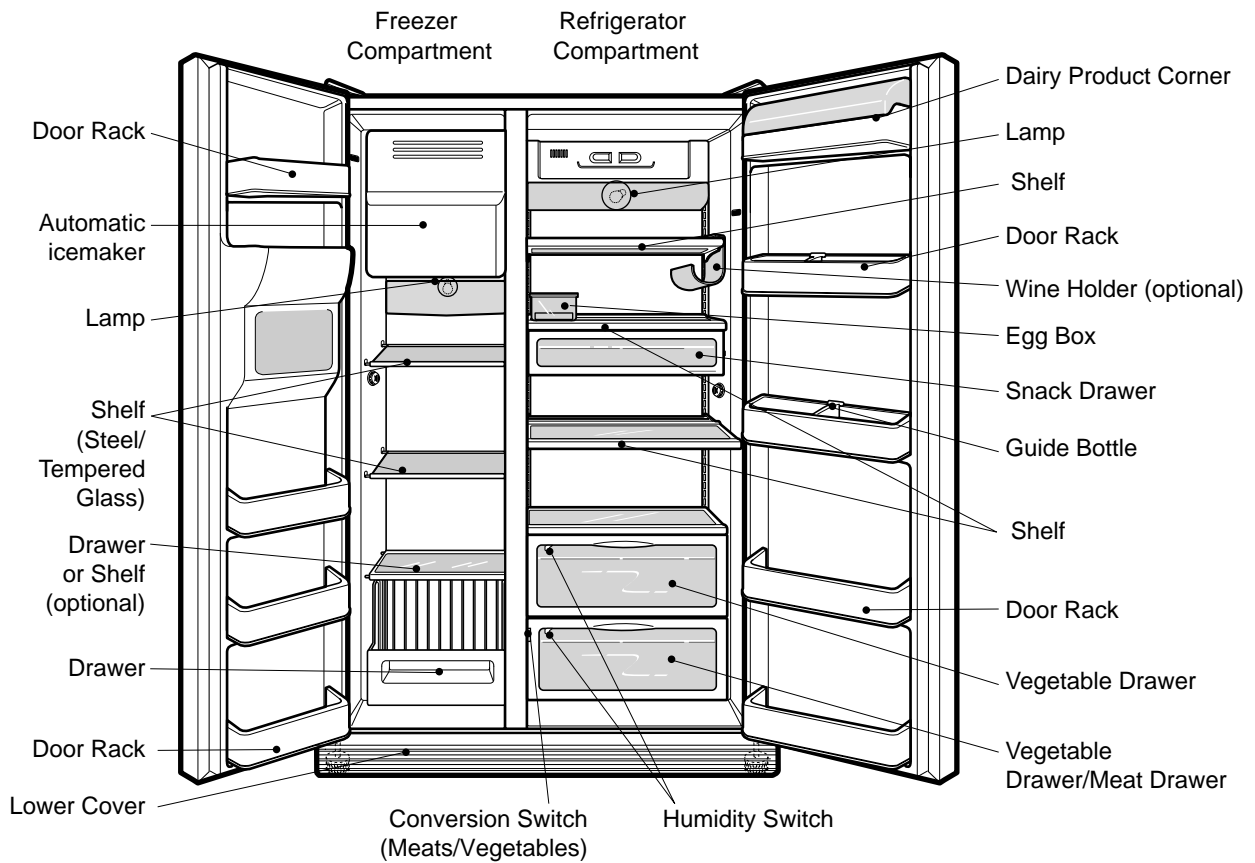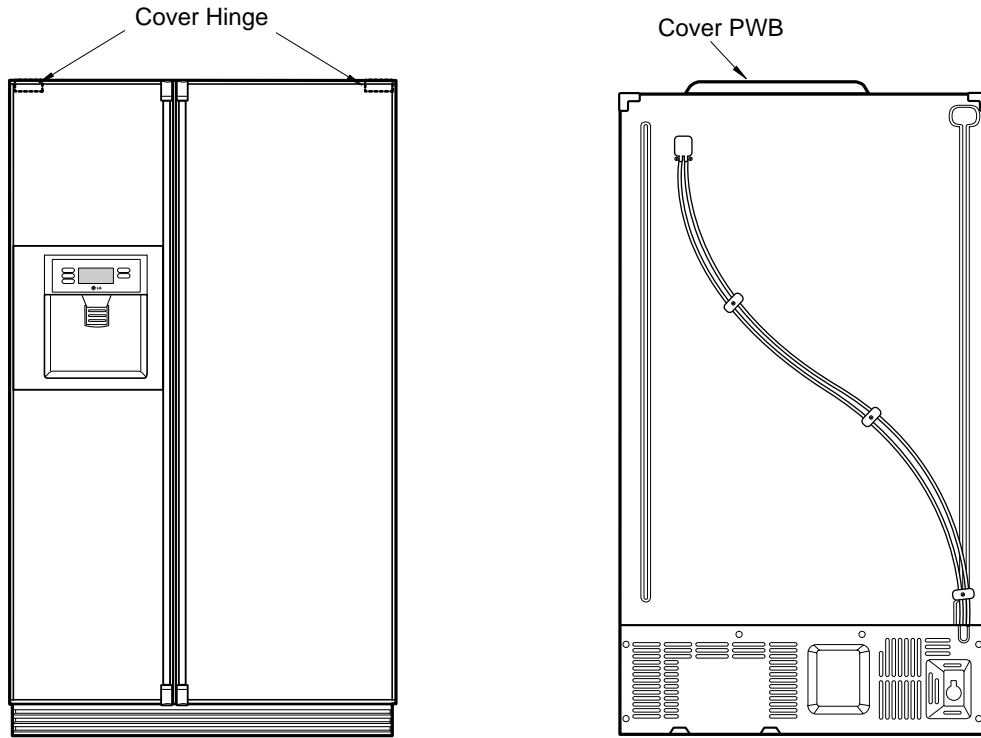



PARTS IDENTIFICATION

4. Ref No. : GR-L247, GR-L207

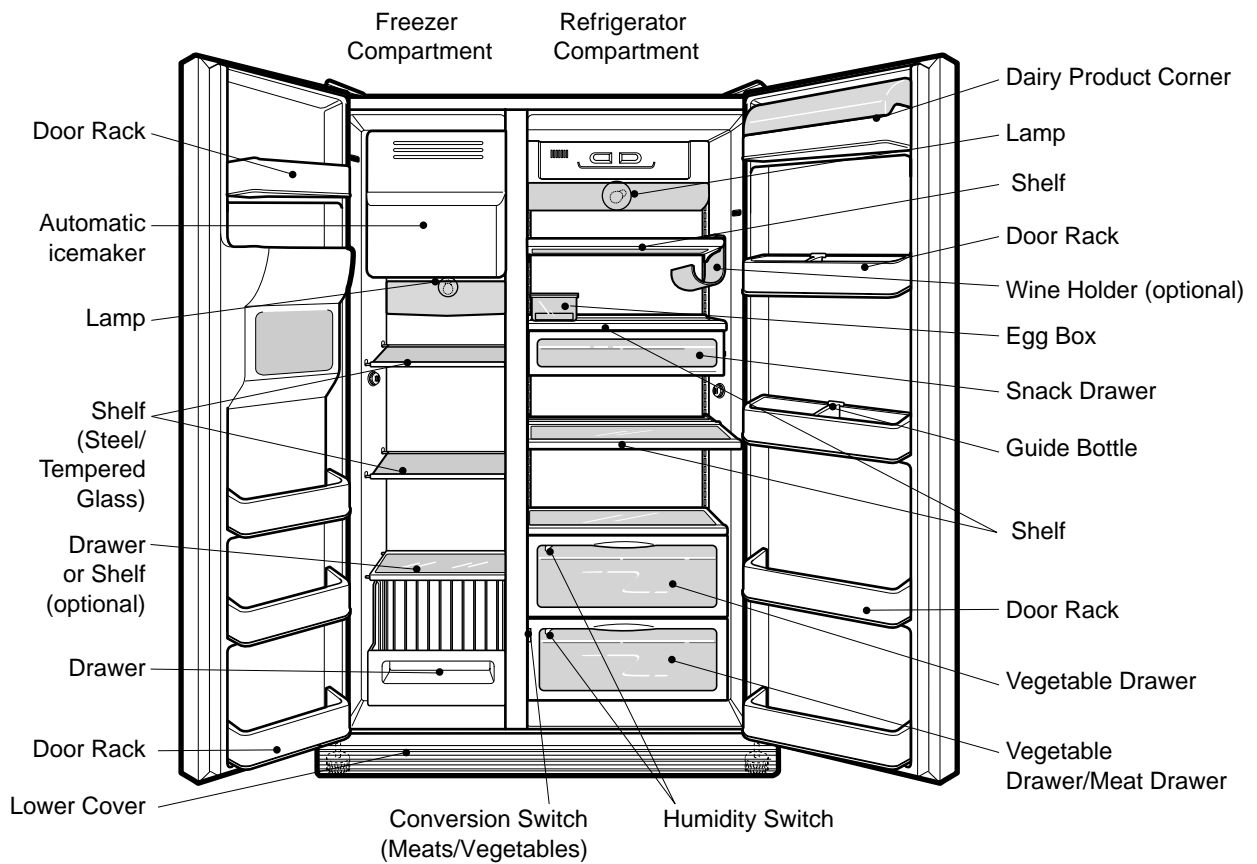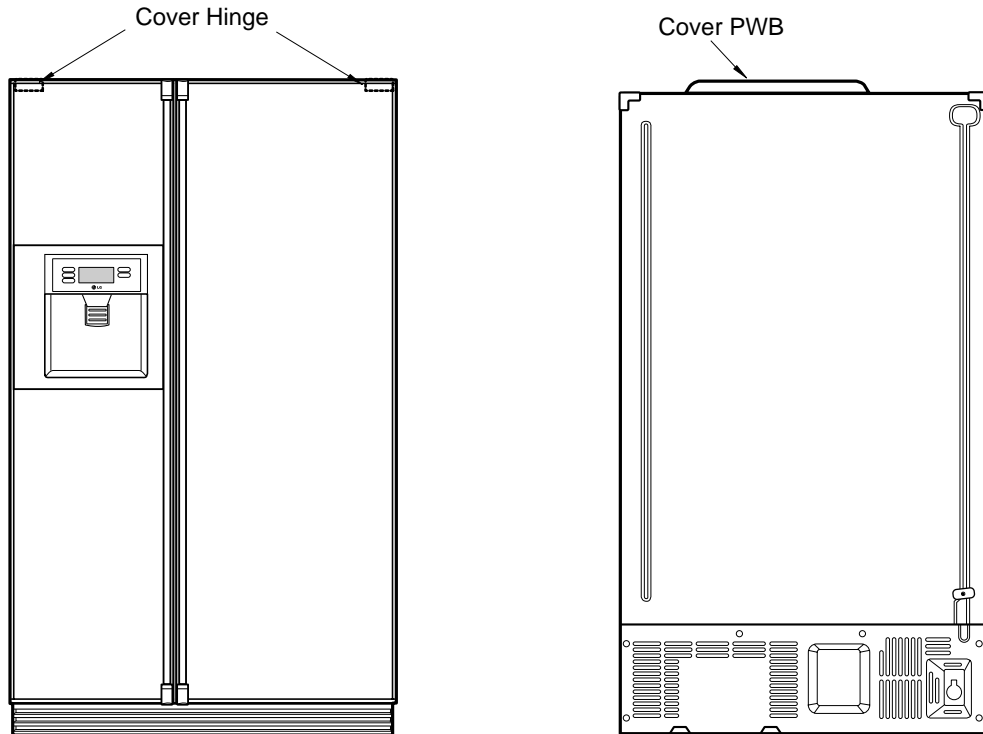



PARTS IDENTIFICATION

1. Ref No. : GR-C247, GR-C207

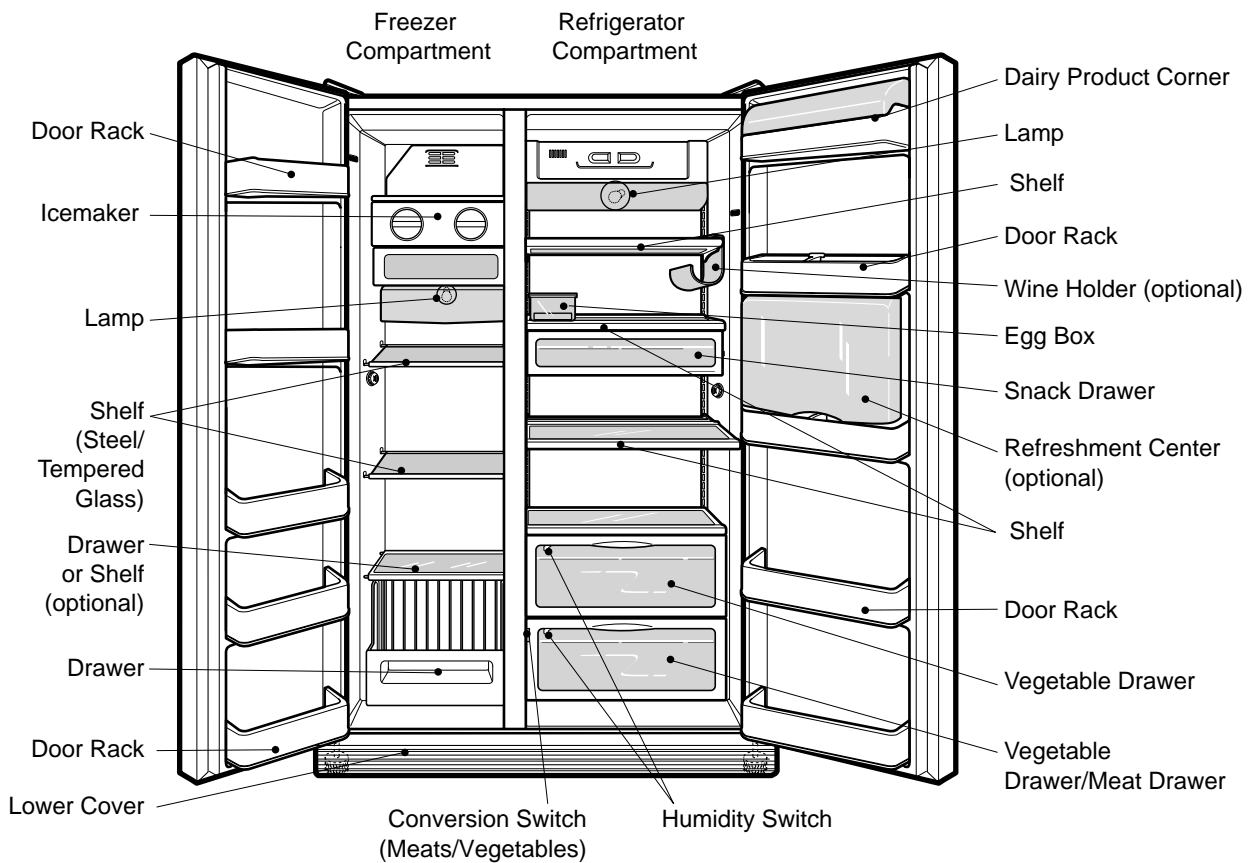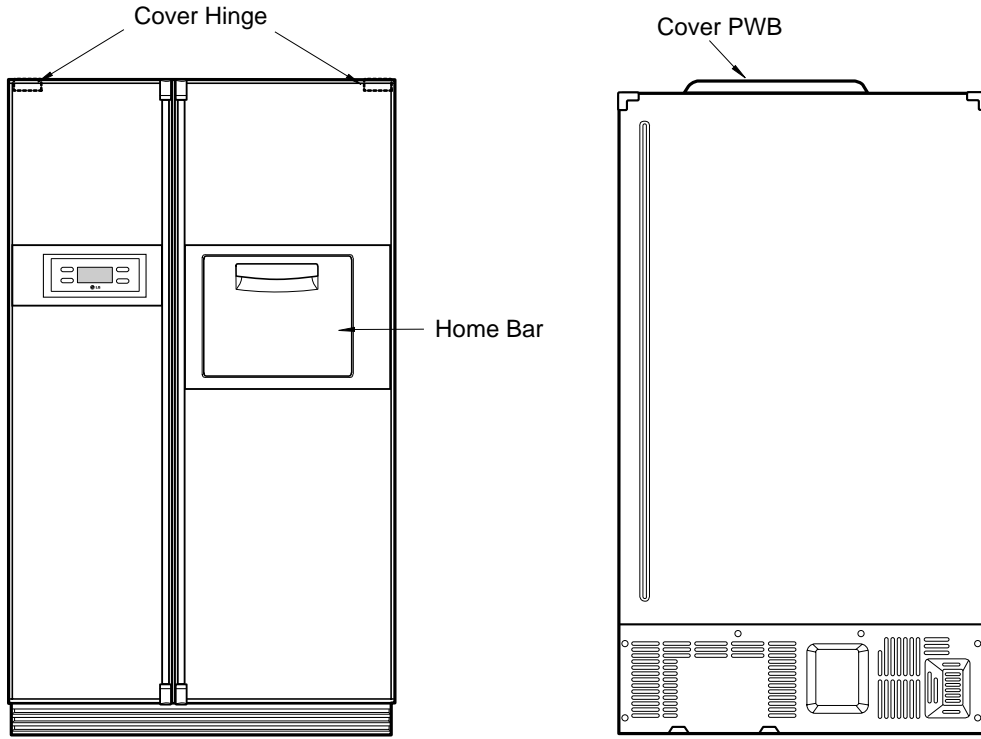

PARTS IDENTIFICATION

3. Ref No. : GR-B247, GR-B207

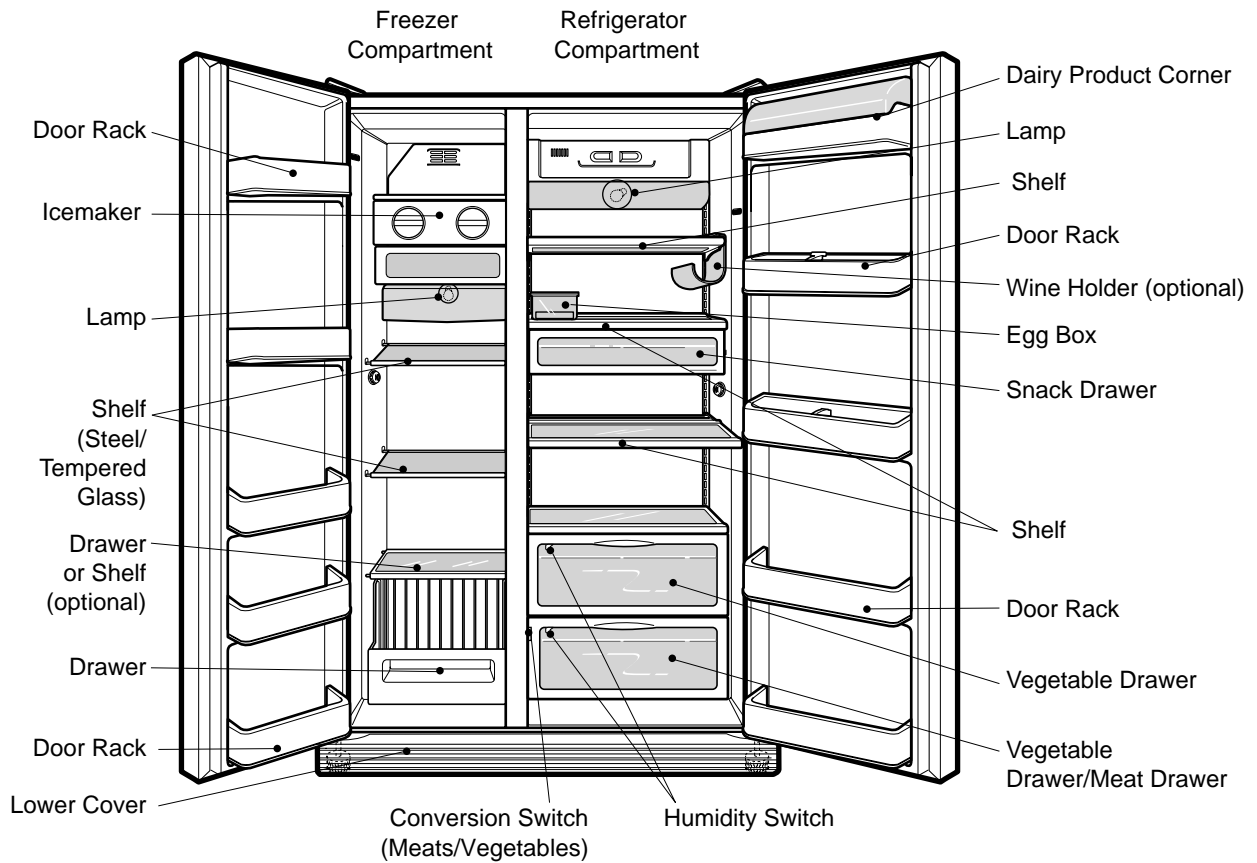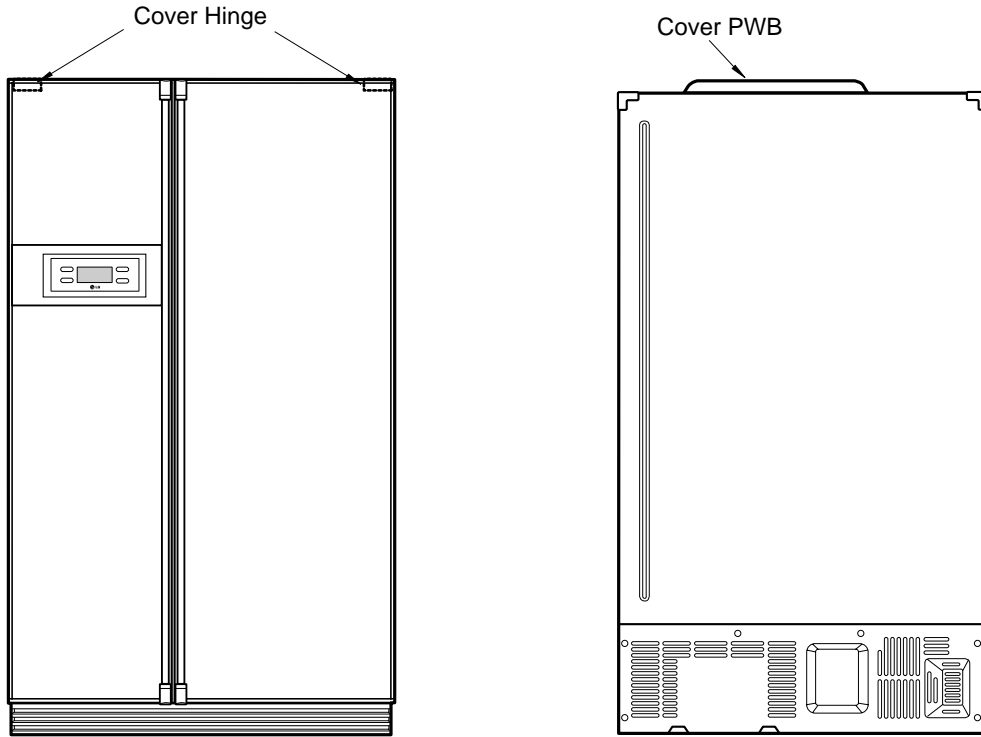


HOW TO INSTALL REFRIGERATOR

1. How to Adjust Door Height of Refrigerator

- Make the refrigerator level first. (If the refrigerator is not installed on a flat floor, the height of freezer and refrigerator door may not be the same.)

1. If the freezer door is lower than the refrigerator door:

2. If the height of freezer door is higher than the refrigerator door:

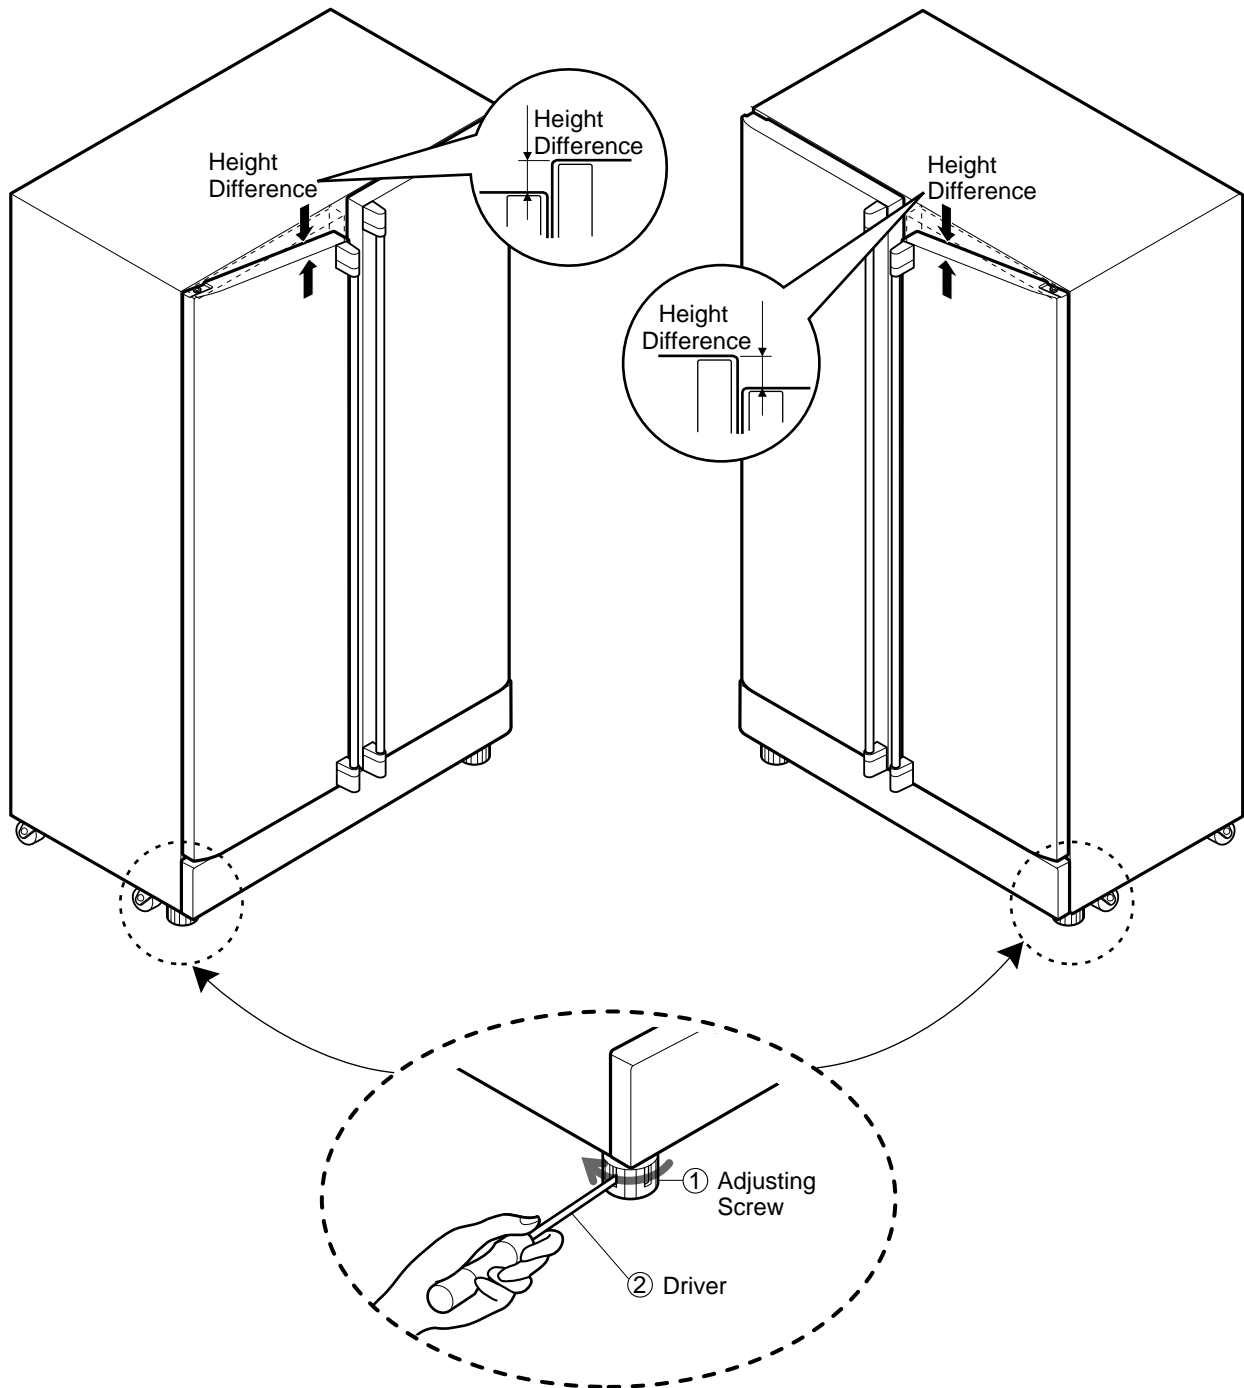

Insert a driver ② into the groove ① of adjusting screw and rotate driver in arrow direction (clockwise) until the refrigerator becomes horizontal.

Insert a driver ② into the groove ① of adjusting screw and rotate driver in arrow direction (clockwise) until the refrigerator becomes horizontal.





HOW TO INSTALL REFRIGERATOR

2. How to Install Water Pipe

■ Install Water Filter (Applicable to some models)

■ Before Installing water filter

1. Before installing the filter, take out the top shelf of the refrigerator after tilting it to the direction (①) and lifting it to the direction (②) and move it to the lower part.
2. Remove the lamp cover by pressing the protrusion under the cover and pulling the cover to the front.

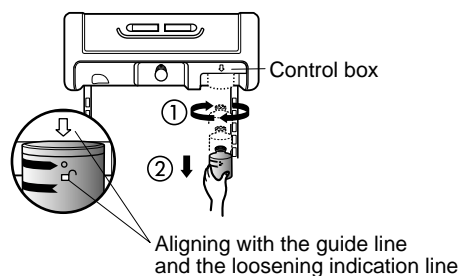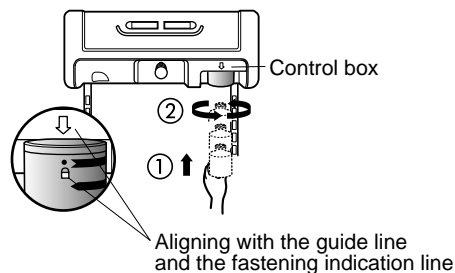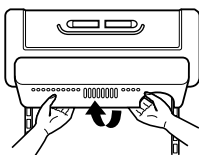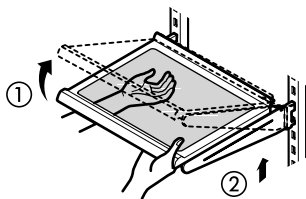

■ After installing water filter

Reassemble the lamp cover and the top shelf of the refrigerator. To place the top shelf of the refrigerator, raise the front part of the shelf a bit so that the hook of the shelf is fit into the groove.

In order to clean the water filter system, drain water for about 3 min.

Note : Then open the door of the refrigerator and check for water drops on the shelf under the filter.

■ Installing water filter




1. Initial installation of water filter

Remove the filter substitute cap by turning it counterclockwise (①) by 90 degrees and pulling it down.

Note : Keep it handy to use it later when you do not use the filter.

Remove the red cap from the filter and attach the sticker. Insert the upper part of the filter (①) after aligning with the guideline marked on the control box, and fasten it by turning it clockwise by 90 degrees.

Note : Check that the guideline and the fastening indication line are aligned.

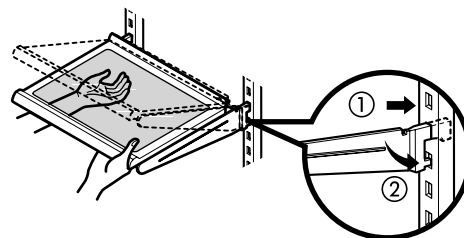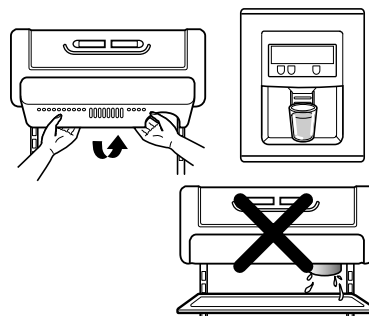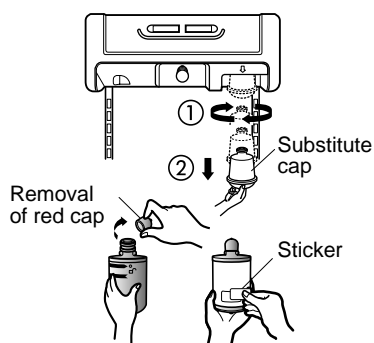

2. Replacement of water filter

While holding the lower part of the filter, turn it counterclockwise (①) by 90 degrees and pull it down.


Note : Check that the guideline and the loosening indication line are aligned.

HOW TO INSTALL REFRIGERATOR

3. How to Control the Amount of Water Supplied to Icemaker.

3-1. Confirm the amount of water supplied to the icemaker.


1. Pull out the ice bin in the upper part of the freezer compartment.

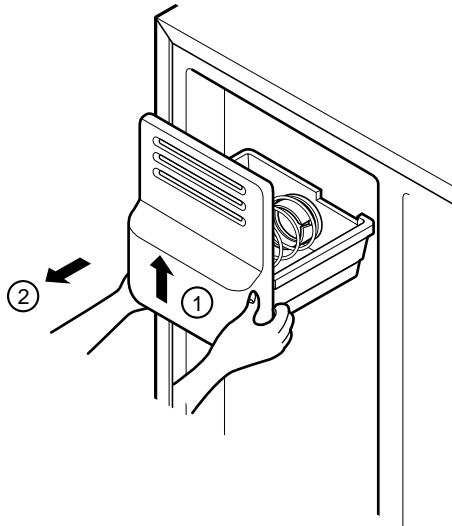

- Caution :**
- Do not put hands or tools into the chute to confirm the operation of geared motor. (it may damage refrigerator or injure hands.)
 - Check the operation of motor by listening to its noise.

2. Apply electricity after connecting water pipe.

- 1) Press test switch under the icemaker for two seconds as shown below.
- 2) The bell rings(ding~dong), ice tray rotates, and water comes out from the icemaker water tube.
- 3) The water shall be supplied two or three times into the tray. The amount of water supplied for each time is small. Put a water container under the ice tray and press test switch.
- 4) When ice tray rotates, the water in it will spill. Collect the spilled water and throw it into the sink.
- 5) When ice tray has finished rotation, water comes out from the water tube. Confirm the amounts of water in the ice tray. (refer to Figure. The optimum amount of water is 110cc[6.7in³])

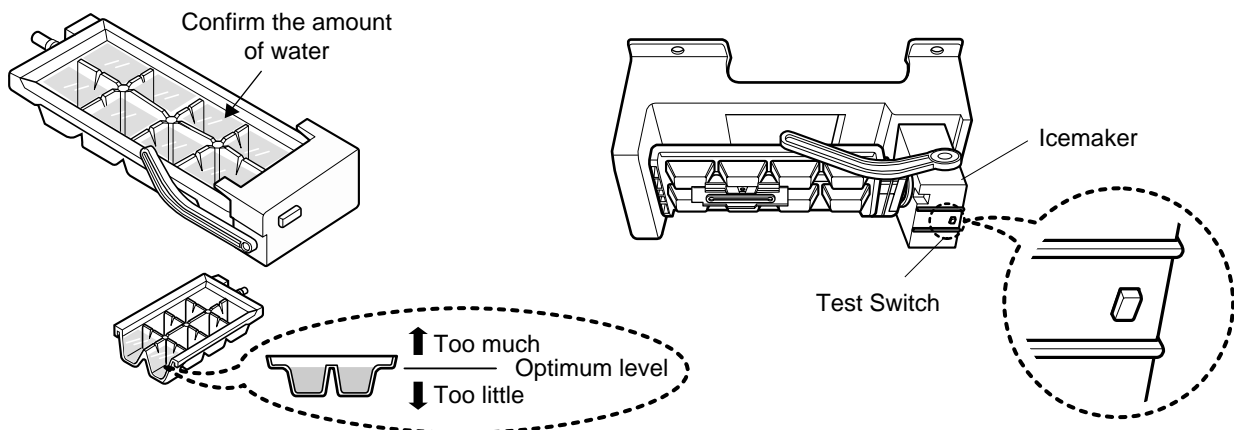


* It is acceptable if the adjusted level of water is a bit smaller than optimum level.

HOW TO INSTALL REFRIGERATOR

3-2. Control the amount of water supplied to the icemaker.

Caution : • Please unplug the power cord from the wall outlet and wait for more than three minutes before disconnecting PWB cover as 310V is applied in the control panel.

1. Disconnect PWB cover from the upper part of the refrigerator.

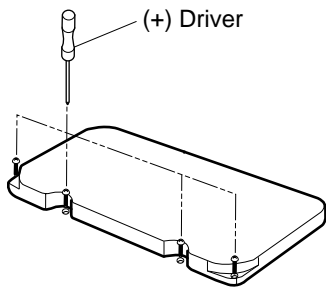


2. Adjust the amount of water supplied by using the DIP switches.

■ Water Supplying Time Control Option


SWITCH NO			Water Supply Time
SWITCH1	SWITCH2	SWITCH3	
OFF	OFF	OFF	6.5 Sec.
ON	OFF	OFF	5.5 Sec.
OFF	ON	OFF	6 Sec.
ON	ON	OFF	7 Sec.
OFF	OFF	ON	7.5 Sec.
ON	OFF	ON	8 Sec.
OFF	ON	ON	9 Sec.
ON	ON	ON	10 Sec.

- 1) The water supplying time is set at five seconds when the refrigerator is delivered.
- 2) The amount of water supplied depends on the setting time and water pressure (city water pressure).
- 3) If the ice cubes are too small, increase the water supplying time. This happens when too little water is supplied to the tray.
- 4) If the ice cubes stick together, decrease the water supplying time. This happens when too much water is supplied into the ice tray.

Caution : When adjusting the amount of water supplied, adjust step by step. Otherwise the water may spill over.

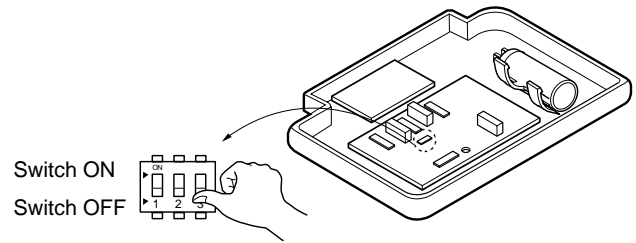


3. When adjustment of control switch for the amount of water supplied is complete, check the level of water in the ice tray.

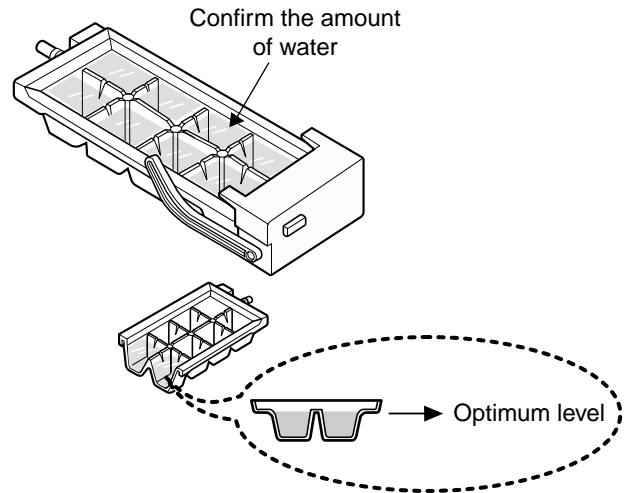


MICOM FUNCTION

1. Monitor Panel

1-1. GR-P247, GR-P207, GR-L247, GR-L207

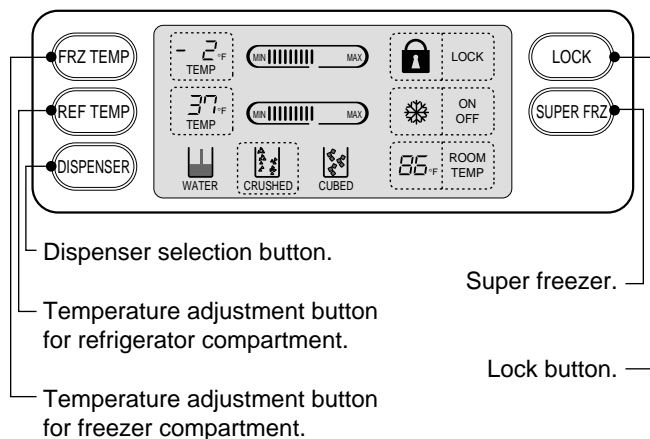

1-2. GR-C247, GR-C207, GR-B247, GR-B207

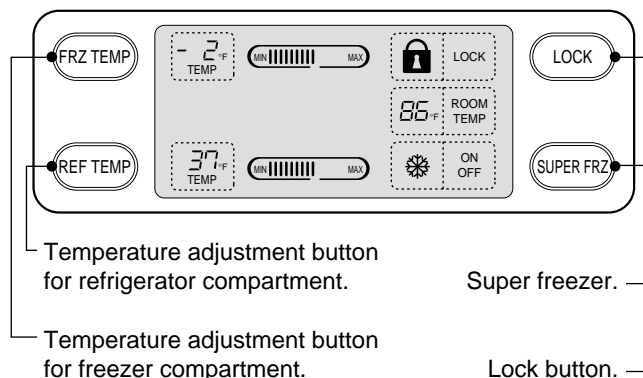

2. Description of Function

2-1-1. Function of Temperature Selection

Division	Power Initially On	1st Press	2nd Press	3th Press	4th Press
Setting temperature	 	 	 	 	
Temperature Control	Medium	Medium Max	Max	Min	Medium Min
Freezer Control	-19 °C [-2°F]	-22 °C [-7°F]	-23 °C [-9°F]	-15 °C [5°F]	-17 °C [1°F]
Refrigeration Control	3 °C [37°F]	2 °C [35°F]	0°C [32°F]	6 °C [43°F]	4 °C [39°F]

* The temperature can vary ± 3 °C depending on the load condition.

* Whenever pressing button, setting is repeated in the order of (Medium) → (Medium Max) → (Max) → (Min) → (Medium Min).

- The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.
- Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

MICOM FUNCTION

2-1-2. LCD Back Light Control

1. In order to easily view display status on the LCD, LCD Back Light is turned on for a minute in application of initial power, for a minute in button manipulation and for a minute after closing time from opening time of door.
2. If pressing any display button once with the backlight turned off, buzzer rings and button function is not performed but only backlight is turned on (If pressing the first button with the back light turned off, only back light ON function is performed).
3. If pressing the special freezing button and the freezing temperature adjustment button for more than a second, the back light is turned on and all the graphics of LCD are turned on. If releasing the button, the LCD graphic is displayed in the previous status and the back light is turned off (check LCD graphic and back light ON/OFF status).

2-1-3. Outside temperature display function


1. Outside temperature sensor at the left U of refrigerator senses ambient temperature and displays the outside temperature in the left side of **Outside temperature** text on the LCD of the display part.
2. Ambient temperature is displayed up to $-9^{\circ}\text{C}[16^{\circ}\text{F}] \sim 49^{\circ}\text{C}[120^{\circ}\text{F}]$ and displayed as **Lo** for less than $-10^{\circ}\text{C}[14^{\circ}\text{F}]$ and as **Hi** for more than $50^{\circ}\text{C}[122^{\circ}\text{F}]$. If the ambient temperature sensor fails, it is displayed as **Er**.
3. Since display temperature of outside temperature is temperature sensed by the ambient sensor in the hinge U of the freezing room, it may differ from the outside temperature display of other household electrical appliances.


2-1-4. Lock function (display button lock)

1. In power application of refrigerator, the only **Release** text is turned on at the right side of lock graphic of LCD with the lock release status.
2. If desiring to lock the display status and pressing the lock/release button once, **Release** text is turned off at the right side of lock graphic of LCD and **Lock** text is turned on with lock status.
3. The only buzzer sound rings and function is not performed even if pressing display button other than lock/release key in the lock status.
4. If desiring to release the lock status and pressing the lock/release button once, **Lock** text is turned off at the right side of lock graphic of LCD and **Release** text is turned on with lock release status.

2-2. Dispenser use selection

You can select water or ice.

- * Please select water, slice ice and square ice by pressing  button as you desire.
- * Please press the push button lightly by catching and pushing in cup.
 - The border line is indicated for the selected function.
 - **Tak!** sounds if 5 seconds pass after ice comes out.
It is sound that the outlet of ice is closed.

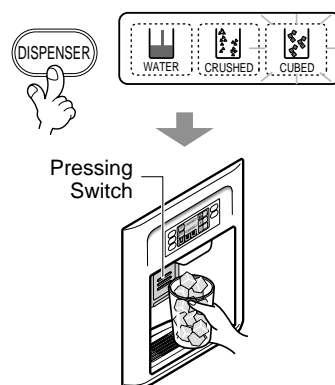

REFERENCE : Please wait for 2-3 seconds in order to take final ice slices or drops of water when taking out cup from the pressing switches after taking ice or water.

2-3. Automatic icemaker

- The automatic icemaker can make 8 pieces of ice at a time, up to 10 times a day, for a total of 80 pieces per day. This quantity may vary, affected by ice usage, ambient temperature, frequency of door opening, etc.
- Ice making stops when the ice storage bin is full.
- If you don't want to use automatic icemaker, set the icemaker power switch OFF.
If you want to use automatic icemaker again, set the icemaker power switch ON.

NOTE : It is normal that a noise is produced when ice made is dropped into the ice storage bin.

MICOM FUNCTION

2-4. When icemaker does not operate smoothly

Ice is lumped together

- When ice is lumped together, take the lumps out of the ice storage bin, break them into small pieces, and then place them into the ice storage bin again.
- When the icemaker produces too small or lumpy ice, the amount of water supplied to the icemaker needs to be adjusted. Contact the service center.
- * If ice is not used frequently, it may lump together.

Power failure

- Ice may drop into the freezer compartment. Take the ice storage bin out and discard all the ice, dry the bin, and replace it. After the machine is powered again, crushed ice will be automatically selected.


The unit is newly installed

- It takes about 12 hours for a newly installed refrigerator to begin making ice.

2-5. Super freezer

Please select this function for prompt freezer.

- **On** or **Off** is repeated whenever pressing the **SUPER FRZ** button.
- The arrow mark graphic remains at the **On** status after flickering 4 times when selecting Special Refrigeration **On**.
- Super freezer function automatically turns off if a fixed time passes.





Ex) In selecting **On** Ex) In selecting **Off**

2-6. Lock


This button stops operation of different button.

- Locking or Release is repeated whenever pressing the **LOCK** button.
- Pressing the other button when selecting 'LOCK', the button does not operate.



Ex) In selecting **LOCK** Ex) In selecting **LOCK** again

2-7. Special freezing

1. Special freezing is a function to improve cooling speed of the freezing room by consecutively operating compressors and freezing room fan. If pressing the special freezing button, **Turn Off** text of the LCD panel is turned off and **Turn On** is immediately turned on and **Arrow** () graphic is turned on after flickering once.
2. Special freezing is cycled in order of Selection/ Release (**Turn On** / **Turn Off**) whenever pressing the selection button.
3. Special freezing is released if power failure occurs and then returns to the original status.
4. Temperature setting is not changed even if selecting the special freezing.
5. The change of temperature setting at the freezing room or the cold storage room is allowed with special freezing selected and processed.
6. The cold storage room operates the status currently set with special freezing selected and processed.
7. If selecting the special freezing, the special freezing function is released after continuously operating compressor and freezing room fan.
8. If frost removal starting time is arrived during special freezing, special freezing operation is done only for the remaining time after completion of frost removal when the special freezing operation time passes 90 minutes. If passing 90 minutes, special freezing operation is done only for 2 hours after completion of frost removal.
9. If pressing special freezing button during frost removal, the special freezing LCD is turned on but if pressing the special freezing, compressor operates after the remaining time has passed.
10. If selecting special freezing within 7 minutes (delay for 7 minutes of compressor) after the compressor stops, compressor operates after the remaining time has passed.
11. The freezing room fan motor operates at the high speed of RPM during operation of special freezing.

MICOM FUNCTION

2-8. Control of variable type of freezer compartment fan


1. To increase cooling speed and load response speed, the MICOM variably controls freezing room fan motor at the high speed of RPM and standard RPM.
2. MICOM only operates in the input of initial power or special freezing operation or load response operation for the high speed of RPM and operates in the standard RPM in other general operation.
3. If opening doors of freezing / cold storage room or home bar while fan motor in the freezing room operates, the freezing room fan motor normally operates (If being operated in the high speed of RPM, it converts operation to the standard RPM). However, if opening doors of freezing room or home bar, the freezing room fan motor stops.
4. As for monitoring of BLDC fan motor error in the freezing room, MICOM immediately stops the fan motor by determining that the BLDC fan motor is locked or poor if there would be position signal for more than 65 seconds at the BLDC motor. Then it displays failure (refer to failure diagnosis function table) at the display part of refrigerator, performs re-operation in the cycle of 30 minutes. If normal operation is performed, poor status is released and refrigerator returns to the initial status (reset).

2-9. Control of M/C room fan motor

1. The M/C room fan motor performs ON/OFF control by linking with the COMP.
2. It controls at the single RPM without varying RPM.
3. Failure sensing method is same as freezing fan motor (refer to failure diagnosis function table for failure display).

2-10. Door opening alarm

1. Buzzer generates alarm sound if doors are not closed even when more than a minute consecutively has passed with doors of freezing / cold storage room or home bar opened.
2. Buzzer rings three times in the interval of half second after the first one-minute has passed after doors are opened and then repeats three times of On/Off alarm in the cycle of every 30 seconds.
3. If the doors of the freezer or home bar are closed during door open alarm, alarm is immediately released.

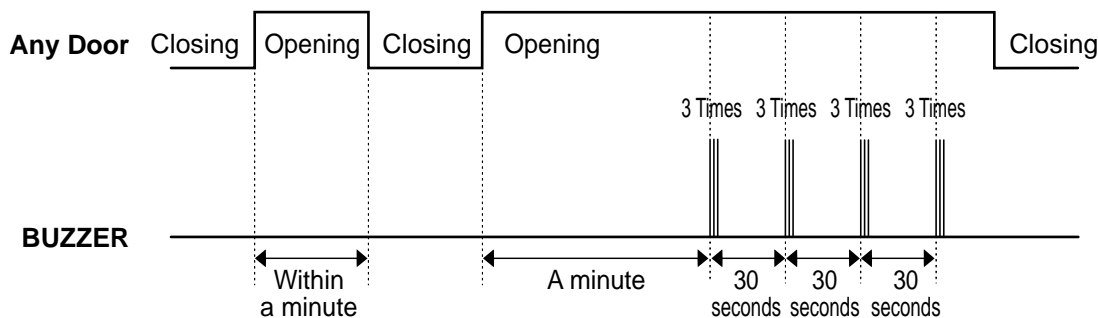

2-11. Ringing of button selection buzzer

1. If you press the front display button, the **Ding** sound.

2-12. Ringing of compulsory operation, compulsory frost removal buzzer

1. If you press the test button on the Main PCB, the **Phi** sounds.
2. In selecting compulsory operation, alarm sound is repeated and completed in the cycle of On for 0.2 second and Off for 1.8 second three times.
3. In selecting compulsory frost removal, alarm sound is repeated and completed in the cycle of On for 0.2 second, Off for 0.2 second, On for 0.2 second and Off for 1.4 second three times.

MICOM FUNCTION

2-13. Frost removal function

1. Frost removal is performed whenever total operation time of compressor becomes 7 ~ 7½ hour.
2. In providing initial power (or returning power failure), frost removal starts whenever total operation time of compressor becomes 4 ~ 4½ hour.
3. Frost removal is completed if temperature of a frost removal sensor becomes more than 5°C[41°F] after starting frost removal. Poor frost removal is not displaced if it does not arrive at 5°C[41°F] even if two hours have passed after starting frost removal.
4. No removal is done if frost removal sensor becomes poor (snapping or short-circuit).

2-14. Sequential operation of built-in product


Built-in products such as compressor, frost removal heater, freezer fan, cooling fan and step motor damper are operated sequentially as shown below to prevent noise and damage from power surges that occur when all parts are powered up at once.

Function	Load Operation Sequence	Remark
In applying Initial power	<p>When temperature of a frost removal sensor becomes more than 45°C [77°F]</p> <pre> graph LR A[POWER ON] -- 1/2 sec. --> B[COMP ON] B -- 1/4 sec. --> C[F-FAN & C-FAN ON] C -- 1/4 sec. --> D[STEP MOTOR DAMPER ON] D -- 1/4 sec. --> E[HOME BAR HEATER ON] </pre>	If error occurs during operation, initial operation is not done.
	<p>When temperature of a frost removal sensor becomes less than 45°C [77°F]</p> <pre> graph LR A[POWER ON] -- 1/2 sec. --> B[FROST REMOVAL HEATER ON] B -- 8 sec. --> C[FROST REMOVAL HEATER OFF] C -- 1/4 sec. --> D[HOME BAR HEATER ON] D -- 5 sec. --> E[HOME BAR HEATER OFF] E --> F[WATER SUPPLY & DISPENSE HEATER ON] F -- 5.6 sec. --> G[COMP ON] G -- 5 sec. --> H[F-FAN & C-FAN ON] </pre>	
TEST MODE	<p>Test mode 1 (Compulsory function)</p> <pre> graph LR A[TEST S/W Press Once] --> B[OTHER LOAD OFF] B -- 1/4 sec. --> C[COMP ON] C -- 1/4 sec. --> D[F-FAN & C-FAN ON] D -- 1/4 sec. --> E[STEP MOTOR DAMPER OPEN] </pre>	If pressing switch once more in the test mode 2 or temperature of a frost removal sensor is more than 5°C[41°F], it immediately returns to the test mode for initial operation (Compressor operates after 7 minutes).
	<p>Test mode 2 (Compulsory frost removal)</p> <pre> graph LR A[TEST S/W Press 2 times] --> B[COMP OFF] B -- 1/4 sec. --> C[F-FAN & C-FAN OFF] C -- 1/4 sec. --> D[FROST REMOVAL HEATER ON] D -- 1/4 sec. --> E[STEP MOTOR DAMPER CLOSE] </pre>	

MICOM FUNCTION

2-15. Failure Diagnosis Function

1. Failure diagnosis function is to facilitate service when a failure occurs affecting performance of product during use of product.
2. In occurrence of failure, pressing the function adjustment button does not perform function and only alarm sound (**Ding~**) rings.
3. If nonconforming matters occurred are released during display of failure code, MICOM returns to the original state (Reset).
4. Failure code is displayed on the display part of setting temperature for the freezing room and the display part of setting temperature for the cold storage room of LCD, which are placed at the display part of a refrigerator. All the LCD graphics other than a failure code are turned off.

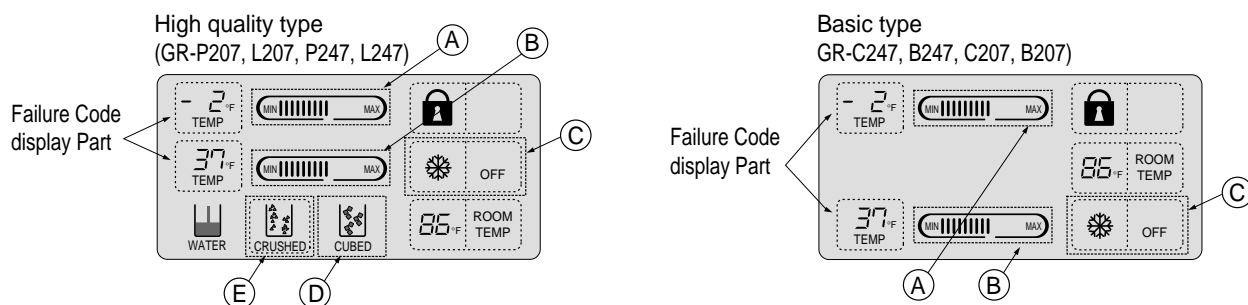

○ : Normal Operation

No.	Item	Failure code display part		Contents of failure	Product operation status in failure				
		Setting temperature for freezing	Setting temperature for cold storage		Compressor	Freezer Fan	M/C room Fan	Defrost Heater	Stepping motor damper
1	Failure of freezer sensor	Er	FS	Snapping or short-circuit of freezer sensor	ON for 15minutes OFF for 15minutes	Standard RPM	○	○	○
2	Failure of refrigerator sensor 1	Er	RS	Snapping or short-circuit of refrigerator sensor 1	○	Standard RPM	○	○	Open for 10minutes, closing for 15 minutes
3	Failure of refrigerator sensor 2	Setting temperature display (Note 2)		Snapping or short-circuit of refrigerator sensor 2	○	Standard RPM	○	○	○
4	Failure of frost removal sensor	Er	DS	Snapping or short-circuit of frost removal sensor	○	Standard RPM	○	No frost removal	○
5	Poor of frost removal	Er	dH	Snapping of frost removal heater or temperature fuse, pull-out of connector (indicated minimum 4 hours after failure occurs)	○	Standard RPM	○	○	○
6	Failure of BLDC FAN at freezing room	Er	FF	Poor motor, hooking of wires to fan. Contact of structures to Fan. Snapping or short-circuit of L/wire (if there is no fan motor signal for more than 60 seconds in operation of fan motor)	○	OFF (check every 30 minutes)	○	○	○
7	Failure of BLDC FAN at machine room	Er	CF		○	Standard RPM	OFF (check every 30 minutes)	○	○
8	Failure of Communication	Er	CO	Connection between main PCB and display PCB. Snapping or short-circuit of L/wire. Transmission between main PCB and display PCB. Poor TR and receiving part.	○	Standard RPM	○	○	○
9	Failure of Outside Sensor	Setting temperature display (Note 1)		Snapping or short-circuit of outside temperature perceiving sensor	○	○	○	○	○
10	Failure of ice removal sensor	Setting temperature display (Note 2)		Snapping or short-circuit of ice-making sensor	○	○	○	○	○
11	Failure of icemaker unit	Setting temperature display (Note 2)		Poor motor or Hall IC within ice-maker unit. Snapping or short-circuit of L/Wire. Poor main PCB drive circuit.	○	○	○	○	○

* In display of the failure mode, all LCDs of setting temperature for freezing/ setting temperature for cold storage are turned off (excluding Note1 and Note2).

MICOM FUNCTION

Note1) In error of outside sensor, setting temperature for freezing/ cold storage is normally displayed and indicated **Er** on the outside temperature display part (normally displayed except for the outside temperature display part).

Note2) Nonconforming contents of poor R2 sensor, Icemaker-sensor and icemaker kit are displayed in LCD check, not indicated on the failure display part (when pressing freezing temperature adjustment button and special freezing button for a second or more).

<div style="display: flex; flex-direction: column; align-items: center;"> <div style="margin-bottom: 10px;">┌ Cold storage sensor 2 (middle partition)</div> <div style="margin-bottom: 10px;">├ Icemaker sensor</div> <div style="margin-bottom: 10px;">└ Icemaker Unit</div> </div>	<input type="checkbox"/> Normal : (C) Part LCD graphic- ON <input type="checkbox"/> Abnormal: Only (C) Part LCD graphic-OFF	<div style="display: flex; align-items: center;"> <div style="font-size: 2em; margin-right: 5px;">}</div> Other LCD graphics - ON </div>
	<input type="checkbox"/> Normal: (D) Part LCD graphic-ON <input type="checkbox"/> Abnormal: Only (D) Part LCD graphic-ON	
	<input type="checkbox"/> Normal: (E) Part LCD graphic-ON <input type="checkbox"/> Abnormal : Only (E) Part LCD graphic-ON	

2-16. Test Function


1. The purpose of test function is to check function of the PWB and product and to search for the failure part at the failure status.
2. Test button is placed on the main PCB of refrigerator (test switch), and the test mode will be finished after maximum 2 hours regardless of test mode and then is reset to the normal status.
3. Function adjustment button is not perceived during performance of test mode but only warning sounds ring.
4. In finishing test mode, always pull the power cord out and then plug-in it again for the normal state.
5. If nonconforming contents such as sensor failure are found during performance of test mode, release the test mode and display the failure code.
6. If you press the test button during a failure code display, test mode will not be activated.

Mode	Manipulation	Content	Remarks
Test 1	Press TEST switch once	1. Continuous operation of compressor 2. Continuous operation of freezing room fan (high speed RPM) and M/C room fan 3. Frost removal heater OFF 4. Full opening status (baffle opened) status of electronic step motor damper 5. All display LCD graphics - ON.	Freezing room fan is turned off in door open.
Test 2	Press TEST switch once at TEST1 condition.	1. Compressor OFF 2. Freezing room fan and M/C room fan is turned off. 3. Frost removal heater ON 4. Full closing status (baffle closed) status of electronic step motor damper 5. All display LCD graphics - OFF ((A) Medium status. (B) Medium status. Only LCD is turned on)	
Normal Conditions	Press TEST switch once at TEST2 condition.	Return to the initial status.	Compressor is operated after 7 minutes.


MICOM FUNCTION

* LCD check function: If simultaneously pressing special freezing button and cold temperature adjustment button for a second, a back light is turned on and all display LCD graphics on. If releasing the button, the LCD graphic displays the previous status, the back light is turned off (LCD graphic and back light ON/OFF check).

<TEST MODE 1 STATUS LCD>

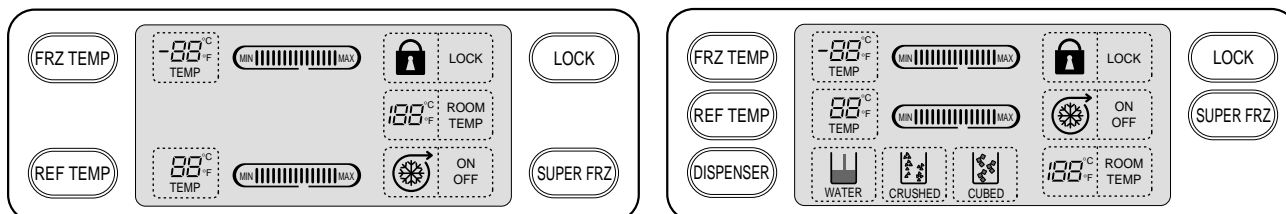

<TEST MODE 2 STATUS LCD>

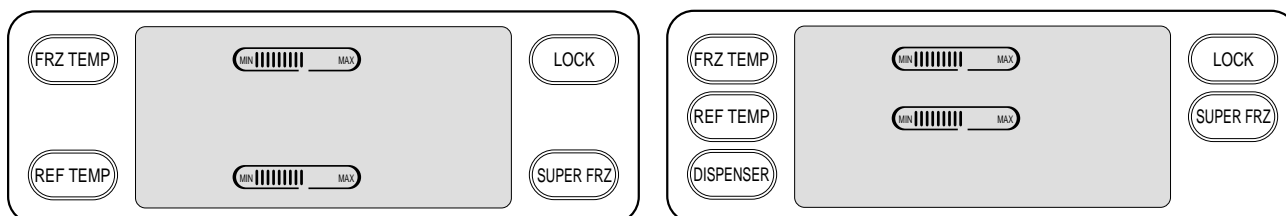

2-17. Function of dispenser and water dispenser built-in

1. This is function allowing ice and water to come outside without opening door.
2. If pressing the dispenser switch (bushing button) after selecting ice (cube ice, crushed ice) or water, ice and water equivalent to each come out. However, the duct doors are opened by electrical solenoid valve (Duct Door Solenoid) if pressing the press switch in case of selecting ICE. If pressing the dispenser press switch and then detaching the hands, the duct door is closed after it is opened for 5 seconds.
3. Function allowing ice and water to come stops if freezing room doors are opened.
4. If there is no Off signal even when 3 minutes have passed while pressing the dispenser press switch after selecting ice (cube ice, crushed ice) or water, geared motor and solenoid (Cube, Water) is automatically turned off. However, the solenoid (duct door) is stop 5 seconds after Off (to prevent short-circuit of a coil due to overheat of solenoid).
5. Dispenser Lamp On/Off function
Lamp on the dispenser part is turned on if pressing the dispenser press switch after selecting ice (cube ice, crushed ice) or water. If detaching the hands, it is turned off.
6. Selection function of water/crushed/ cube ice
 - 1) This is function to allow selection of water/crushed/ cube ice function depending on user's selection. Display and selection is done if pressing the dispenser selection button.
 - 2) In the initial Power On, cube ice is automatically selected.
 - 3) In selecting cube ice, geared motor is operated so that crushed ice can be supplied outside if pressing the press switch when ice is formed in the ice storage container (Ice Bin).
 - 4) In selecting cube ice, geared motor is operated so that cube ice can be supplied outside if pressing the press switch when ice is formed in the ice storage container (Ice Bin).
7. Water dispenser function
 - 1) LCD is displayed for selection if user selects water at the function adjustment part.
 - 2) Water dispenser function is a type directly connected to a water pipe. The water solenoid valve built-in at the right side of the M/C room is opened so that water can be supplied if selecting Water from the function adjustment part and then pressing the press switch.

EXPLANATION FOR MICOM CIRCUIT

1. Explanation for PWB circuit

1-1. Power circuit


1. GR-P247, L247, C247, B247 / P207, L207, C207, B207

Power circuit consists of SMPS (SWITCHING MODE POWER SUPPLY) power. The SMPS consist of the rectifying part (BD1, CE1) converting AC voltage to DC voltage, the switching part (IC2) switching the converted DC voltage, transformer transferring energy of the primary side of the switching terminal to the secondary side and the feedback part (IC3, IC4) transferring it to the primary side.

Caution : Since high voltage (DC310V) is maintained at the power terminal, please take a measure after more than 3 minutes have passed after removing power cords in the abnormal operation of a circuit.

Voltage of every part is as follows:

Part	VA1	CE1	CE2	CE3	CE4	CE5
Voltage	230 Vac	310 Vdc	16 Vdc	12 Vdc	15.5 Vdc	5 Vdc

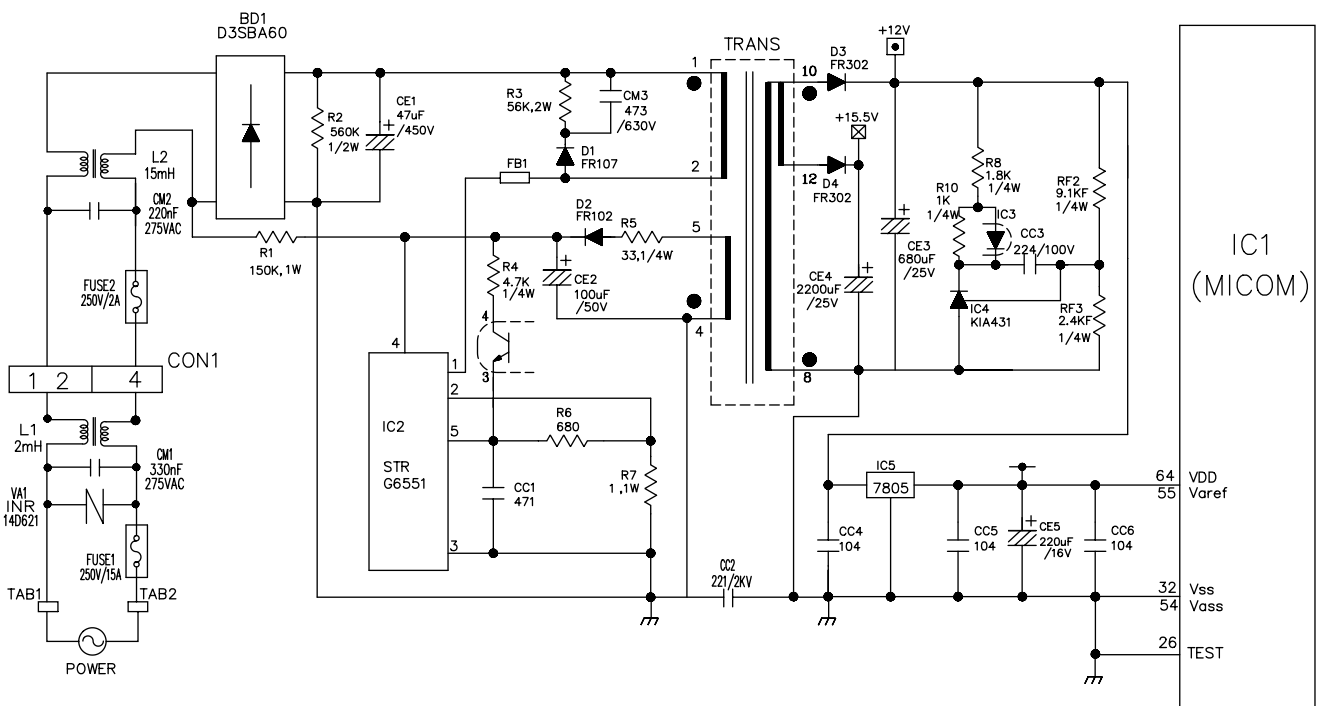


EXPLANATION FOR MICOM CIRCUIT


1-2. Oscillation circuit

Oscillation circuit is a circuit with the purpose of generating basic time for clock occurrence for synchronization and time calculation in relation with information transmission/reception of inside elements of IC1 (MICOM). The OSC1 must always use rated parts since if SPEC is changed, time calculated at the IC1 may be changed or no operation is done.

<GR-P247, L247, P207, L207>

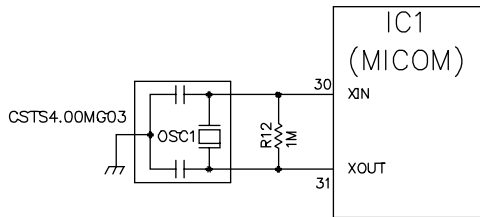


<GR-C247, B247, C207, B207>

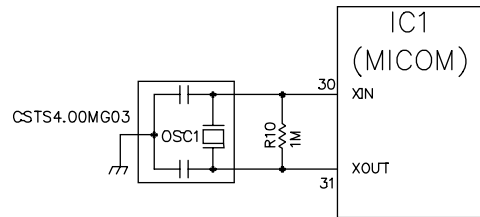


1-3. Reset circuit

The reset circuit is circuit allowing various parts such as RAM inside of MICOM (IC1) to initialize and the whole of function to start from the initial status, when initial power is input or when power is applied again to MICOM by a spontaneous power failure. 'LOW' voltage is applied to the reset terminal of MICOM in the beginning of power supply for a constant time (10ms). Reset terminal during general operation is 5V (No MICOM operates in failure of RESET IC).

<GR-P247, L247, P207, L207>

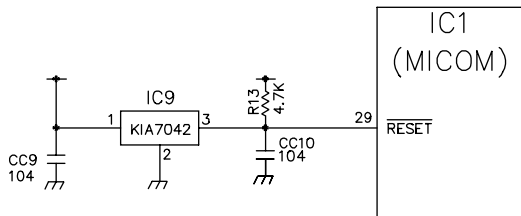

<GR-C247, B247, C207, B207>

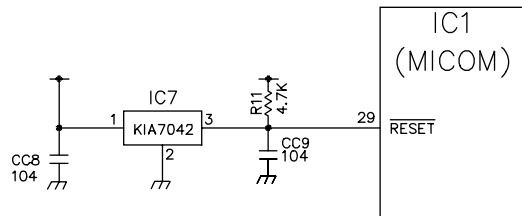

EXPLANATION FOR MICOM CIRCUIT


1-4. Load/dispenser operation, door opening circuit

1. LOAD DRIVING CIRCUIT

- * In even if opening the door of freezing room or cold storage room during operation of fan motor at the freezing room, this circuit does not stop and operates at the standard RPM. In addition, if doors of freezing room or cold storage room, the fan motor normally operates at the RPM previously operated.
- * (A), (B), (C) and (D) of door switch for the freezing room or freezer are connected to the door open sensing circuit in parallel toward both ends of switch to determine door open at MICOM.
- * Since a door switch of the home bar is connected to door switch (C), (D) of the cold storage room, It senses when any door is opened.
- * The fan motor is immediately stop if opening doors of the freezer or refrigerator at the TEST mode and it operates immediately upon their closure.

1) GR-P247, L247, P207, L207

Type of Load	Compressor	Frost Removal Heater	AC Converting Relay	Refrigerator LAMP	Water Tank Heater
Measuring part (IC6)	IC6-16	IC6-15	IC6-14	IC7-13	IC7-15
Status	ON	Within 1 V			
	OFF	12 V			

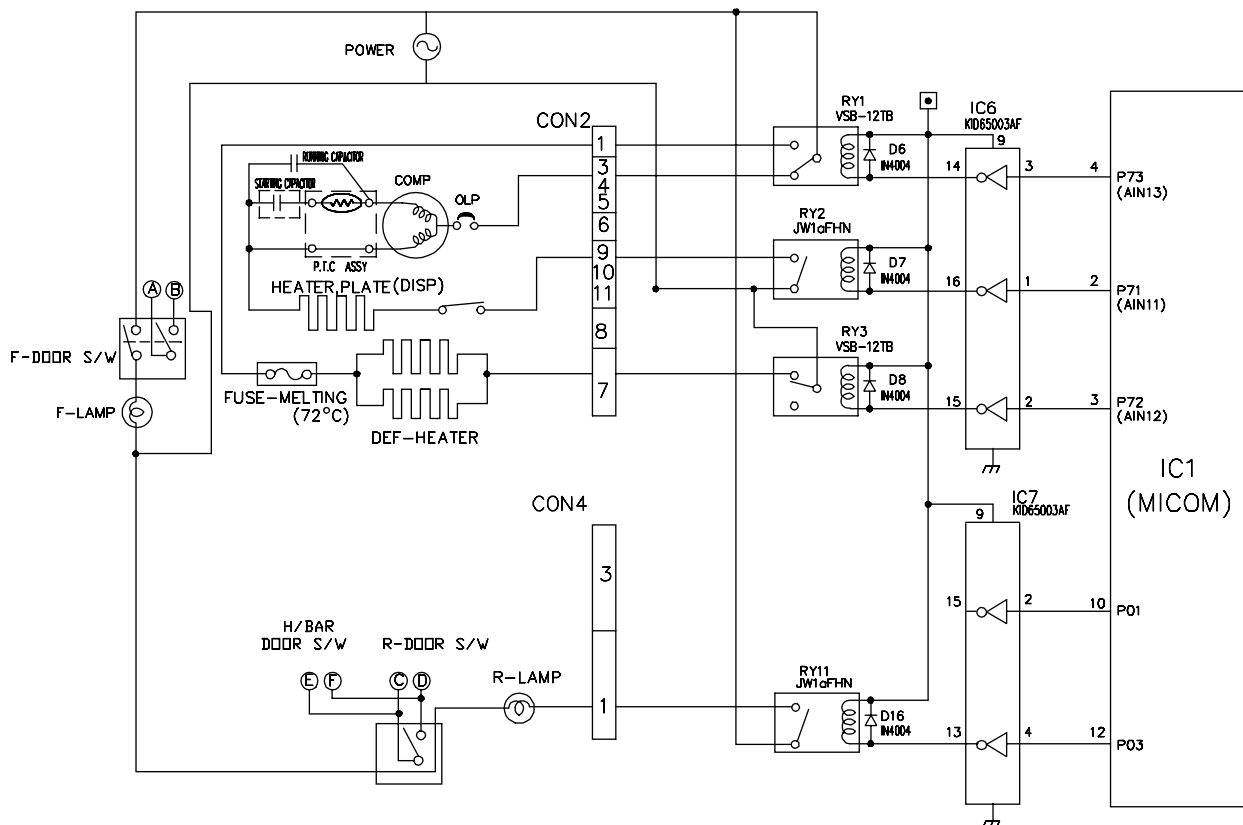

EXPLANATION FOR MICOM CIRCUIT


2) GR-C247, B247, C207, B207

* The fan motor at the freezer does not stop but operates if opening doors of the freezer or refrigerator or the home bar during operation of the fan motor at the freezer.

* (A), (B), (C) and (D) of door switch for the freezer or refrigerator are connected to the door open sensing circuit toward both ends of switch to determine door open at MICOM.


* Since the door switches of the home bar and refrigerator are interconnected, the MICOM can tell when either door is opened.

Type of Load	COMP	Frost Removal Heater	AC Converting Relay	R-room LAMP	Home Bar Heater
Measuring part (IC7)	No.10	No.11	No.12	No.14	No.16
Status	ON	Within 1 V			
	OFF	12 V			

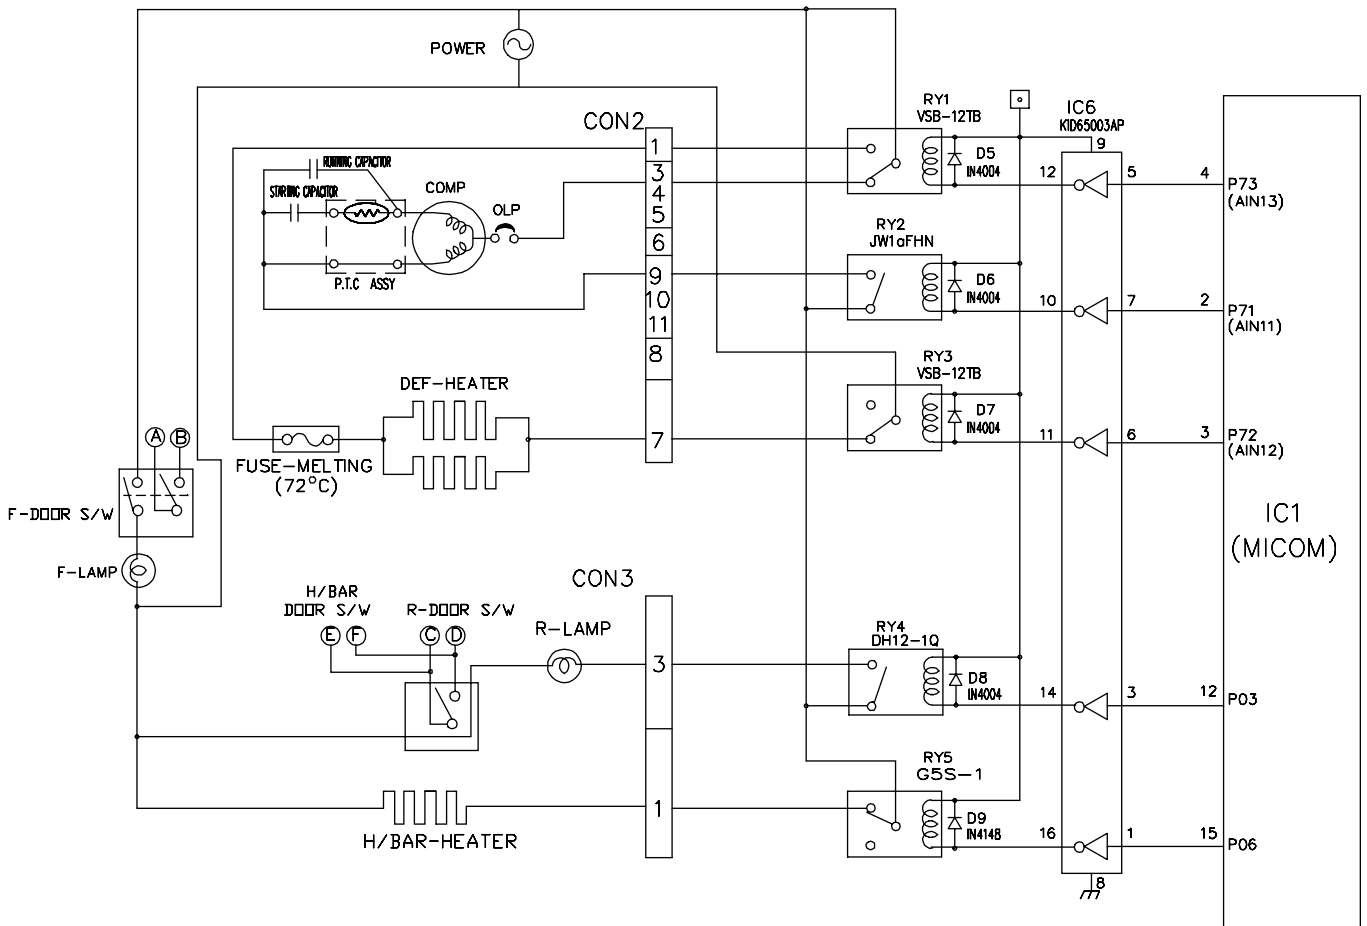

EXPLANATION FOR MICOM CIRCUIT

2. Dispenser operation circuit

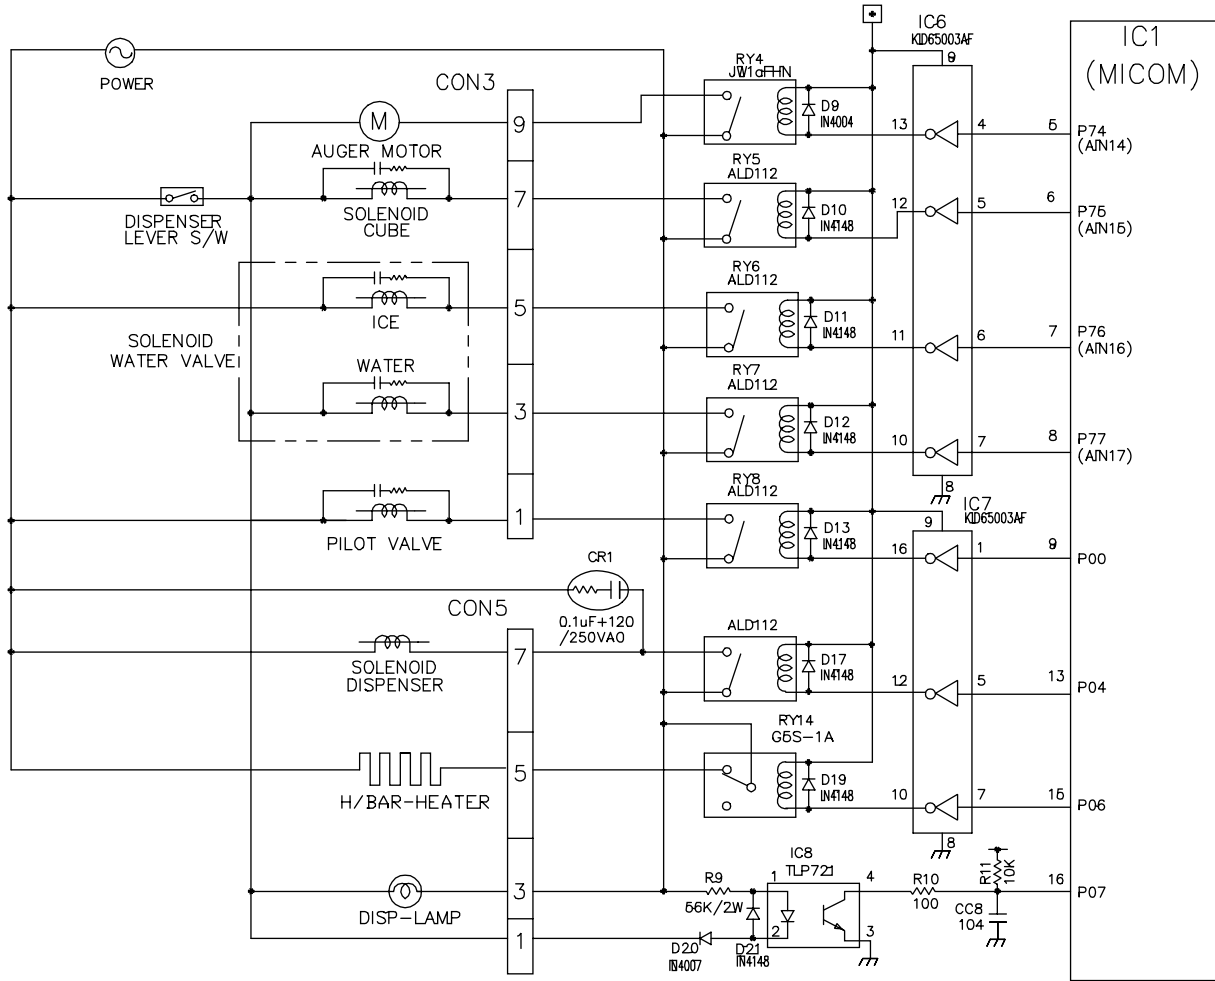

1) Check load driving status

Type of Load	GEARED MOTOR	SOLENOID CUBE	WATER VALVE		SOLENOID DISPENSER	HOME BAR HEATER	SOLENOID PILOT
			ICE	WATER			
Measuring part	IC6-13	IC6-12	IC6-11	IC6-10	IC7-12	IC7-10	IC7-16
Status	ON	Within 1 V					
	OFF	12 V					


2) Lever S/W sensing circuit

Measuring part	IC1(Micom) (No. 16)
Lever S/W	
On(Press)	
OFF	5V


EXPLANATION FOR MICOM CIRCUIT

3. Door opening sensing circuit

1) GR-P247, L247, P207, L207

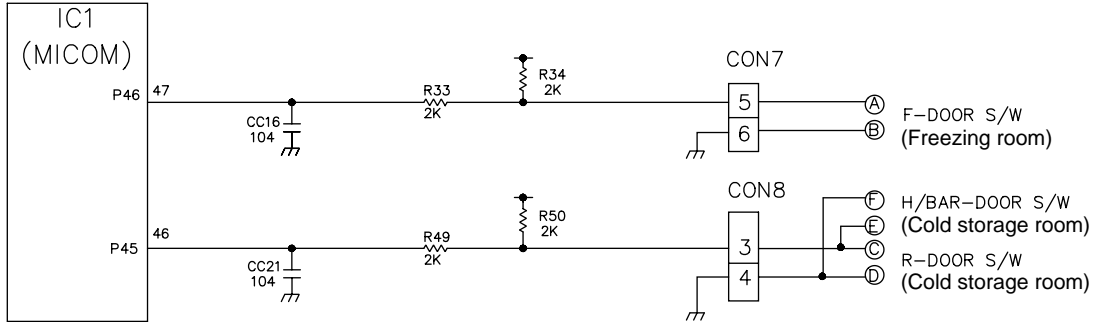

2) GR-C247, B247, C207, B207, 197

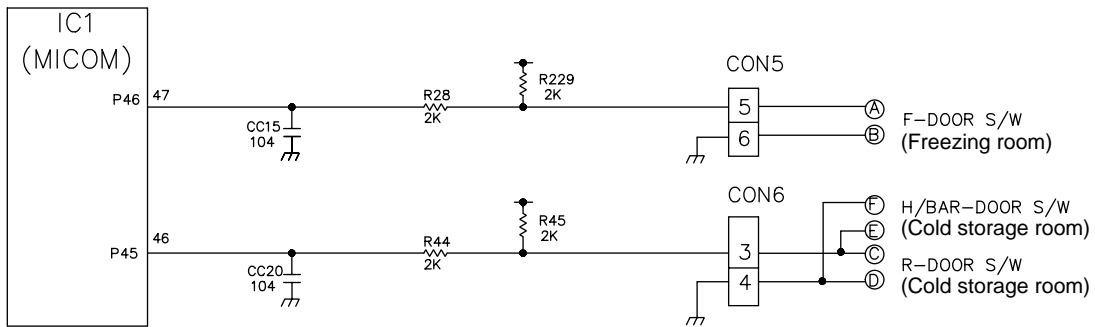


Measuring part	IC1 (MICOM) No. 47, 46 Pin
Door of Freezing/Cold Storage Room	
Closing	5 V (A - B), (C - D) . S/W at both ends are at Off status)
Opening	5 V (A - B), (C - D) . S/W at both ends are at On status)

- * Since door switches (A) and (B) are interconnected, if either fails, the other will not respond properly.
- * If either switch fails, the light will not come on.

EXPLANATION FOR MICOM CIRCUIT

1-5. Temperature sensing circuit

1) GR-P247, L247, P207, L207

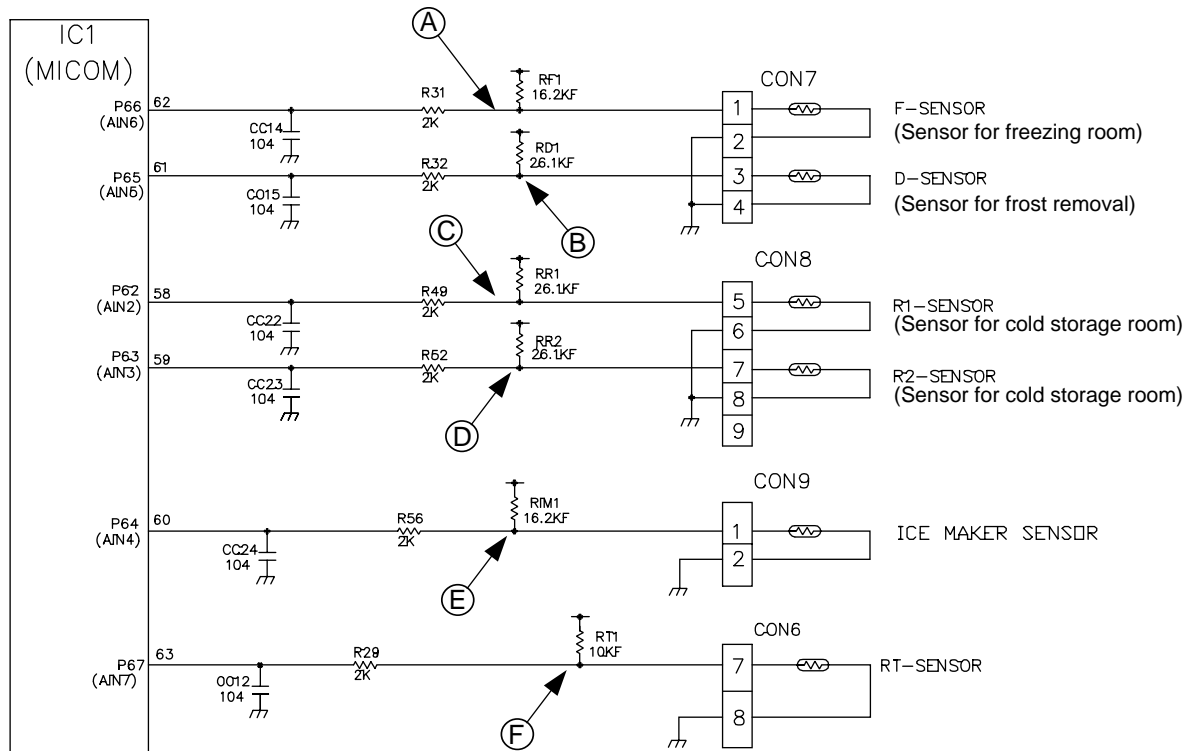


The above circuits are circuits attached to freezer sensor or refrigerator sensor for adjusting setting temperature at the freezer and refrigerator, icemaking sensor for sensing water temperature in icemaking, or an evaporator for sensing temperature of a frost removal sensor necessary for frost removal. Short or open status of every temperature sensor is as follows:

SENSOR	CHECK POINT	NORMAL(-30 °C ~ 50 °C)	IN SHORT	IN OPEN
Freezing sensor	POINT (A) Voltage	0.5 V~4.5 V	0 V	5 V
Frost removal sensor	POINT (B) Voltage			
Cold storage sensor 1	POINT (C) Voltage			
Cold storage sensor 2	POINT (D) Voltage			
Icemaking sensor	POINT (E) Voltage			
Room temperature sensor	POINT (F) Voltage			

EXPLANATION FOR MICOM CIRCUIT

2) GR-C247, B247, C207, B207

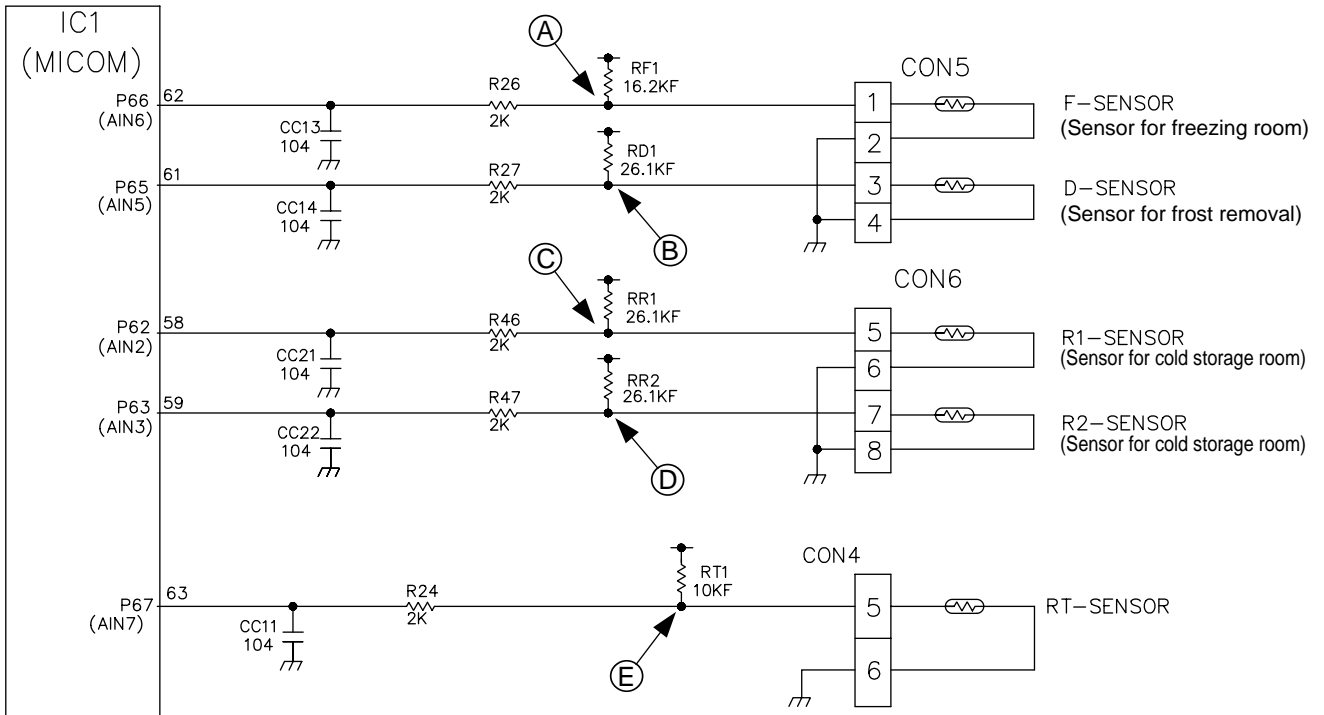

The above circuits are circuits attached to freezer sensor or refrigerator sensor for adjusting setting temperature at the freezer and refrigerator, icemaking sensor for sensing water temperature in icemaking, or an evaporator for sensing temperature of a frost removal sensor necessary for frost removal. Short or open status of every temperature sensor is as follows:


SENSOR	CHECK POINT	NORMAL(-30 °C ~ 50 °C)	IN SHORT	IN OPEN
Freezing sensor	POINT (A) Voltage	0.5 V~4.5 V	0 V	5 V
Frost removal sensor	POINT (B) Voltage			
Cold storage sensor 1	POINT (C) Voltage			
Cold storage sensor 2	POINT (D) Voltage			
Room temperature sensor	POINT (E) Voltage			

EXPLANATION FOR MICOM CIRCUIT


1-6. Switch entry circuit

The following circuits are entry circuits for sensing signal form test switch, electronic single motor damper reed switch for examining refrigerator.

1) GR-P247, L247, P207, L207

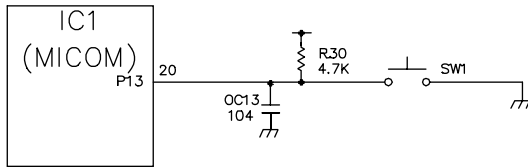


2) GR-C247, B247, C207, B207

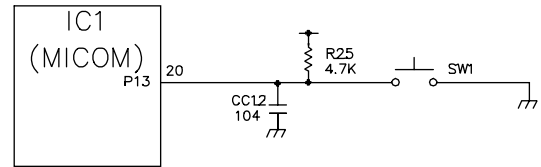


1-7. Option designation circuit (model separation function)

1) GR-P247, L247, P207, L207

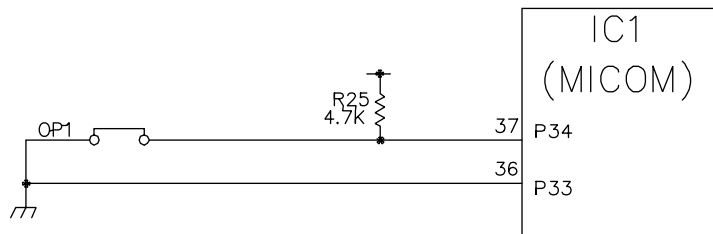

2) GR-C247, B247, C207, B207

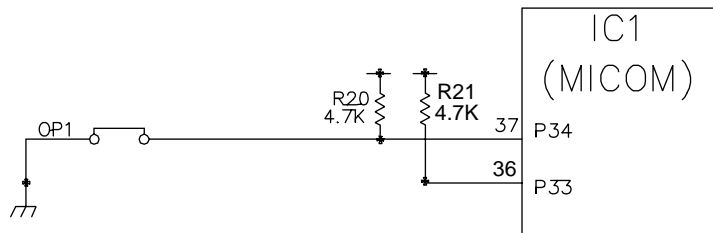


The above circuits are used for designating separation by model as option and notifying MICOM. Designation of option by model and the application standards are as follows:

► These circuits are accurately pre-adjusted in shipment from factory and so you must not additionally add or remove option.

Separation	Connection Status	Application Standard
OP1	Connection	Export model
	OUT	Domestic model

EXPLANATION FOR MICOM CIRCUIT


1-8. Stepping motor operation circuit

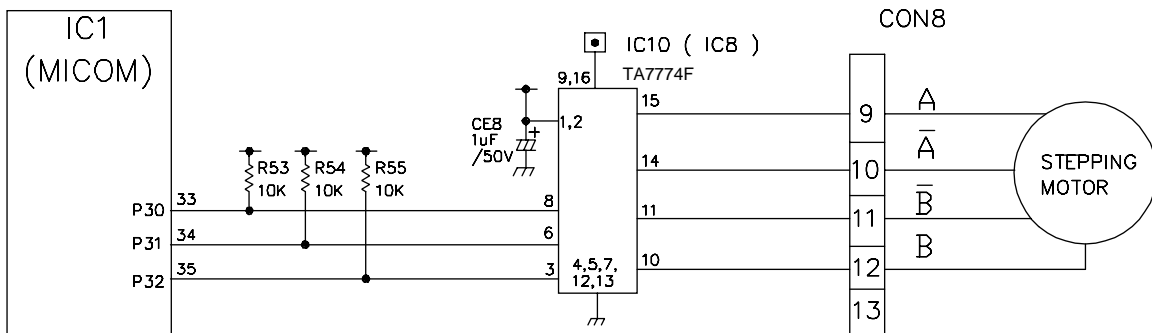

For motor driving method, rotation magnetism is formed at coils wound on each phase of motor and stator and so motor becomes to rotate if applying **High** signal to the IC8 (TA7774F) at the MICOM PIN 33 and outputting **High, Low** signal by step numbers fixed through MICOM PIN 34 and 35,.

Explanation) For driving method of the stepping motor, send signals in the cycle of 3.33 mSEC using terminal of MICOM PIN 33, 34 and 35 as shown in wave form of the following part. These signals are output to the output terminal (No.10, 11, 14, 15) via the input terminal (No. 3, 6, 8) of the IC10 (TA7774F) as IC for motor driving. Output signals allow motor coils wound on each phase of stator to form rotation magnetic field and the motor to rotate. Inputting as below figure to the input terminal (INA, INB) as IC (TA7774AF) for motor driving allows motor coils wound on each phase of stator to form rotation magnetic field and the stepping motor damper to rotate

CCW (Reverse rotation) ← ————— → (Positive rotation) CW

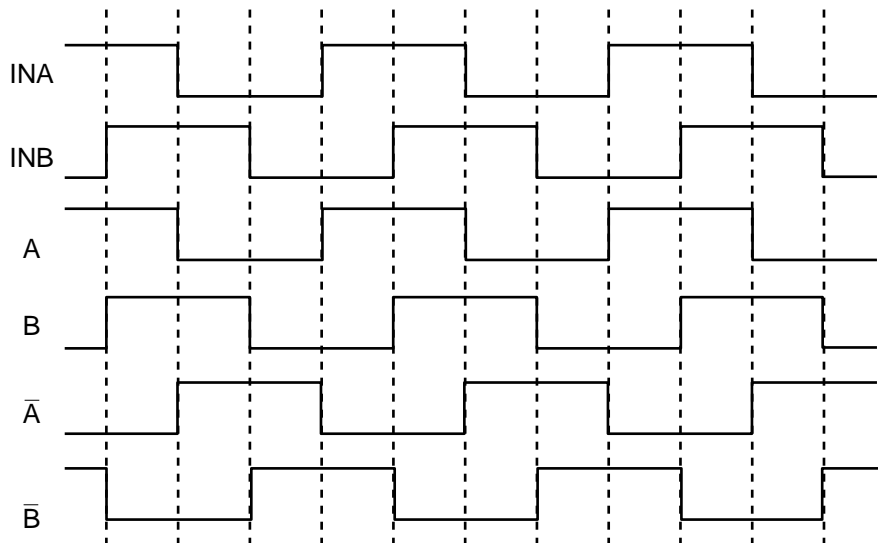


EXPLANATION FOR MICOM CIRCUIT

1-9. Fan motor driving circuit (freezer, mechanical area)

1. The circuit cuts all power to the fan drive IC, resulting in a standby mode.
2. This is a circuit to perform a temporary change of speed for the fan motor and applies DC voltage up to 7.5V ~ 16V to motor.
3. This circuit performs function not to drive the fan motor further by cutting off power applied to the fan motor in the lock of fan motor by sensing the operation RPM of the fan motor.


1) GR-P247, L247, P207, L207

	a, d part	b part	e part	c, f part
Motor OFF	○ 5V	2V or less	2V or less	○ 0V
Motor ON	2 ~ 3V	12 ~ 14V	8 ~ 16V	0 V

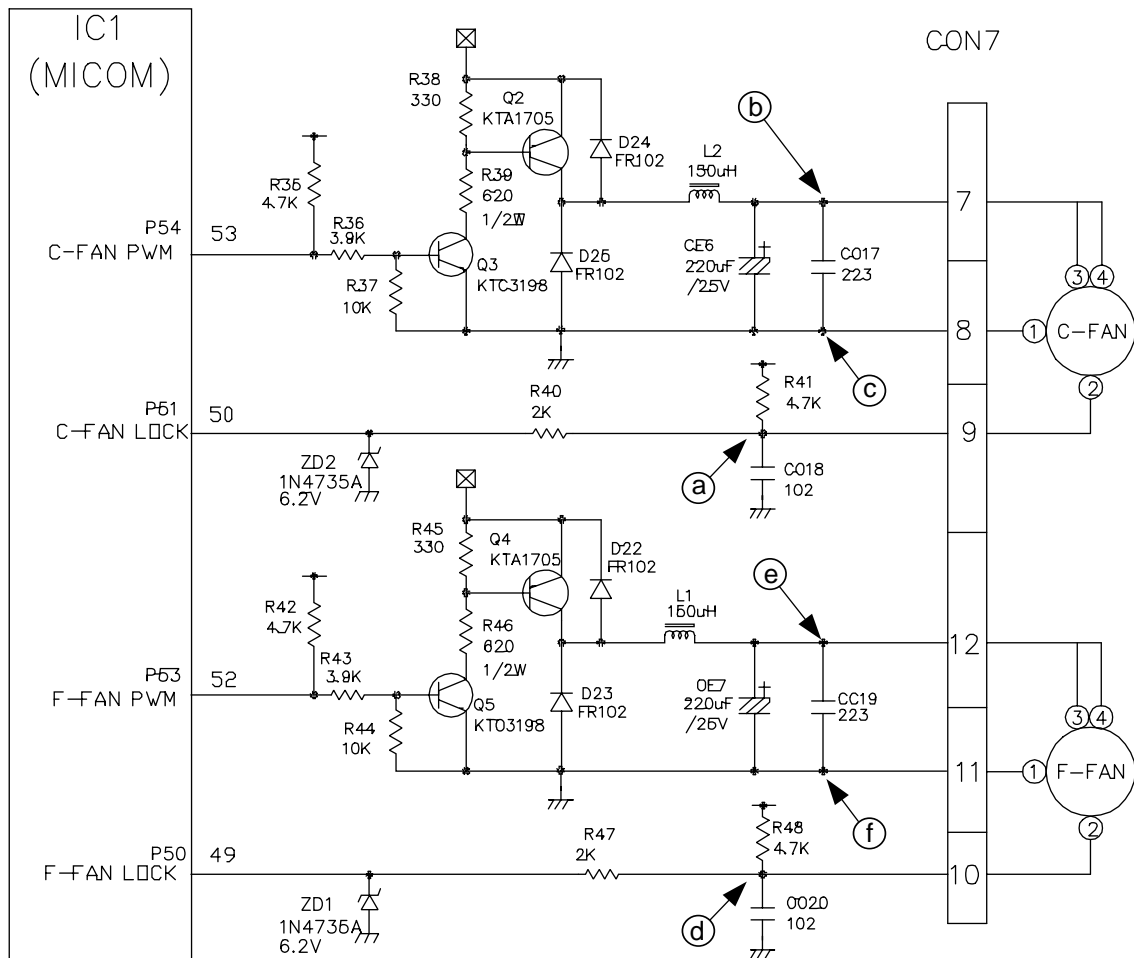

EXPLANATION FOR MICOM CIRCUIT

2) GR-C247, B247, C207, B207

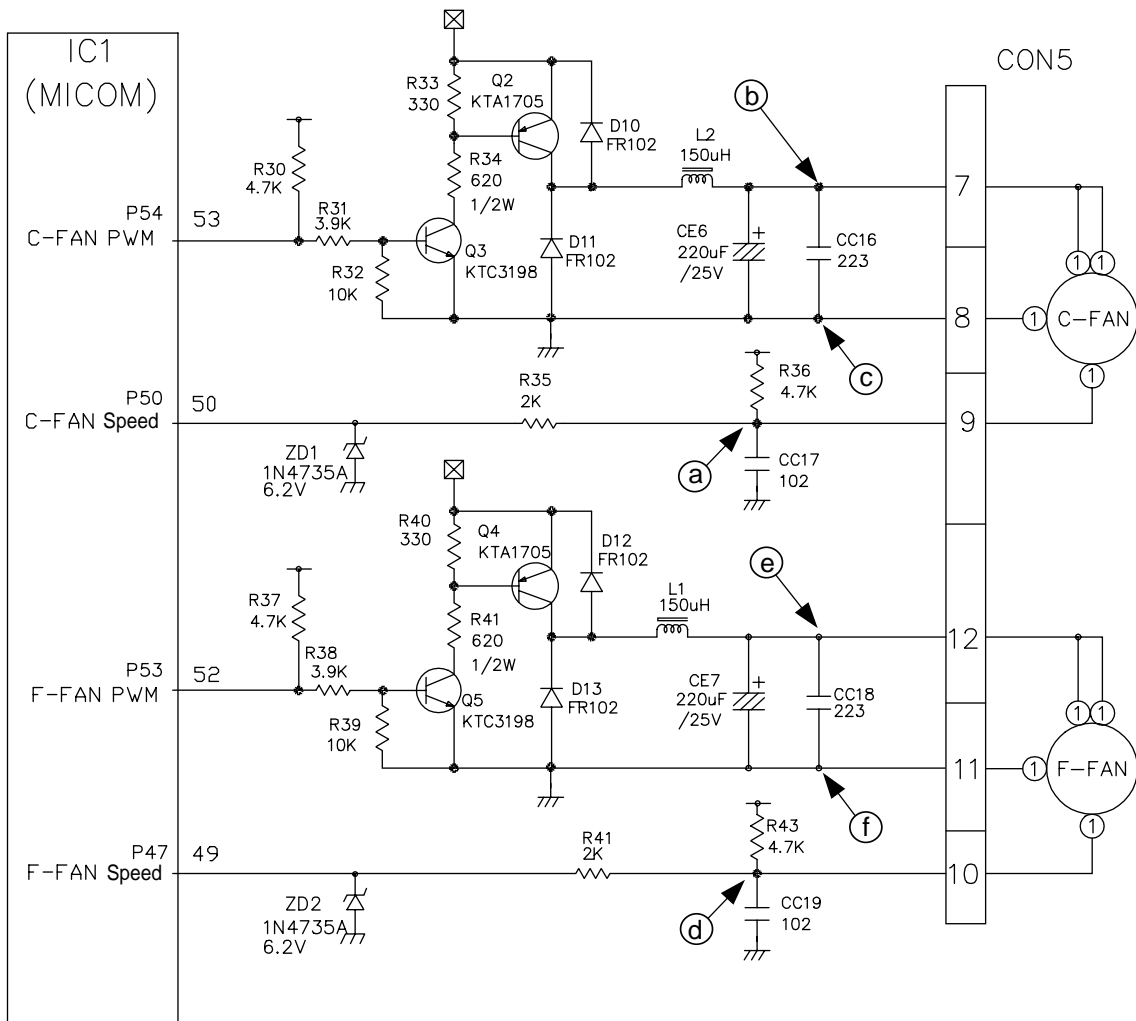


EXPLANATION FOR MICOM CIRCUIT


1-10. Temperature compensation and temperature compensation circuit

1. Temperature compensation in freezer and refrigerator

1) GR-P247, L247, P207, L207

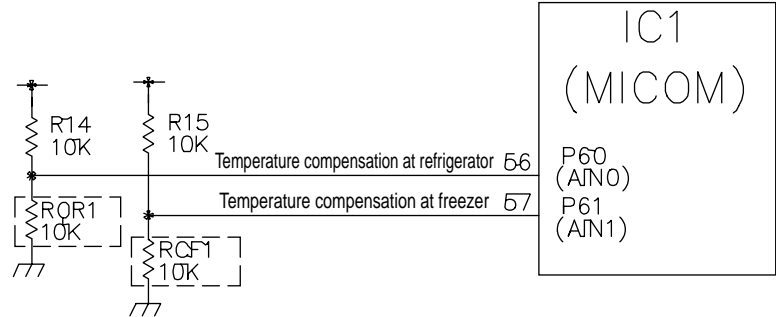

2) GR-C247, B247, C207, B207

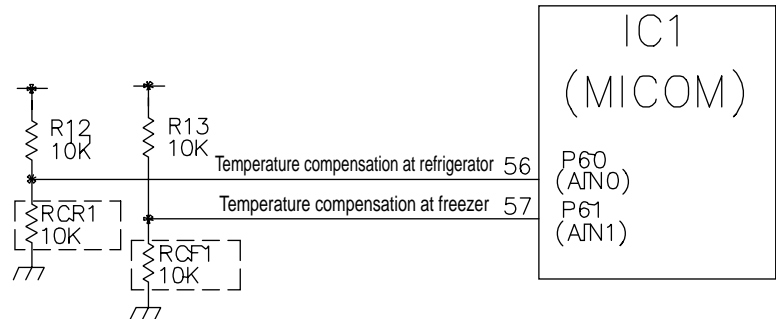

Freezer		Refrigerator		Remarks
Resistance value (RCF1)	Temperature compensation	Resistance value (RCR1)	Temperature compensation	
180 kΩ	+5 °C [+9°F]	180 kΩ	+2.5 °C [+4.5°F]	↑ Warmer
56 kΩ	+4 °C [+7.2°F]	56 kΩ	+2.0 °C [+3.6°F]	
33 kΩ	+3 °C [+5.4°F]	33 kΩ	+1.5 °C [+2.7°F]	
18 kΩ	+2 °C [+3.6°F]	18 kΩ	+1.0 °C [+1.8°F]	
12 kΩ	+1 °C [+1.8°F]	12 kΩ	+0.5 °C [+0.9°F]	
10 kΩ	0 °C [0°F]	10 kΩ	0 °C [0°F]	Reference temperature
8.2 kΩ	-1 °C [-1.8°F]	8.2 kΩ	-0.5 °C [-0.9°F]	↓ Cooler
5.6 kΩ	-2 °C [-3.6°F]	5.6 kΩ	-1.0 °C [-1.8°F]	
3.3 kΩ	-3 °C [-5.4°F]	3.3 kΩ	-1.5 °C [-2.7°F]	
2 kΩ	-4 °C [-7.2°F]	2 kΩ	-2.0 °C [-3.6°F]	
470 Ω	-5 °C [-9°F]	470 Ω	-2.5 °C [-4.5°F]	

► Temperature compensation table by adjustment value (difference value against current temperature)

Ex) If changing compensation resistance at a cold storage room (RCR1) from 10 kΩ (current resistance) to 18 kΩ (modified resistance), temperature at the cold storage will increase by +1°C[+1.8°F].

EXPLANATION FOR MICOM CIRCUIT

► Temperature compensation table at the refrigerator is as follows:

	Modification resistance Current resistance	470 Ω	2 kΩ	3.3 kΩ	5.6 kΩ	8.2 kΩ	10 kΩ	12 kΩ	18 kΩ	33 kΩ	56 kΩ	180 kΩ
		Refrigerator (RCR1)	470Ω	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up	3 °C [5.4 °F] Up	3.5 °C [6.3 °F] Up	4 °C [7.2 °F] Up
2 kΩ	0.5 °C [0.9 °F] Down		No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up	3 °C [5.4 °F] Up	3.5 °C [6.3 °F] Up	4 °C [7.2 °F] Up	4.5 °C [8.1 °F] Up
3.3 kΩ	1 °C [1.8 °F] Down		0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up	3 °C [5.4 °F] Up	3.5 °C [6.3 °F] Up	4 °C [7.2 °F] Up
5.6 kΩ	1.5 °C [2.7 °F] Down		1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up	3 °C [5.4 °F] Up	3.5 °C [6.3 °F] Up
8.2 kΩ	2 °C [3.6 °F] Down		1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Drop	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up	3 °C [5.4 °F] Up
10 kΩ	2.5 °C [4.5 °F] Down		2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up	2.5 °C [4.5 °F] Up
12 kΩ	3 °C [5.4 °F] Down		2.5 °C [4.5 °F] Down	2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up	2 °C [3.6 °F] Up
18 kΩ	3.5 °C [6.3 °F] Down		3 °C [5.4 °F] Down	2.5 °C [4.5 °F] Down	2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up	1.5 °C [2.7 °F] Up
33 kΩ	4 °C [7.2 °F] Down		3.5 °C [6.3 °F] Down	3 °C [5.4 °F] Down	2.5 °C [4.5 °F] Down	2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up	1 °C [1.8 °F] Up
56 kΩ	4.5 °C [8.1 °F] Down		4 °C [7.2 °F] Down	3.5 °C [6.3 °F] Down	3 °C [5.4 °F] Down	2.5 °C [4.5 °F] Down	2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change	0.5 °C [0.9 °F] Up
180 kΩ	5 °C [9 °F] Down		4.5 °C [8.1 °F] Down	4 °C [7.2 °F] Down	3.5 °C [6.3 °F] Down	3 °C [5.4 °F] Down	2.5 °C [4.5 °F] Down	2 °C [3.6 °F] Down	1.5 °C [2.7 °F] Down	1 °C [1.8 °F] Down	0.5 °C [0.9 °F] Down	No change

► Temperature compensation at the freezer is also performed in the same manner as refrigerator. Temperature compensation value is equivalent to two times the refrigerator.



► This circuit is a circuit to enter the necessary level of temperature compensation for adjusting different temperature every model at the refrigerator into MICOM.

EXPLANATION FOR MICOM CIRCUIT

2. Compensation circuit for too warm, too cold at freezer.

1) GR-P247, L247, P207, L207

2) GR-C247, B247, C207, B207

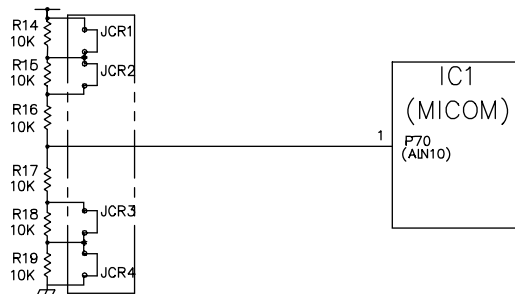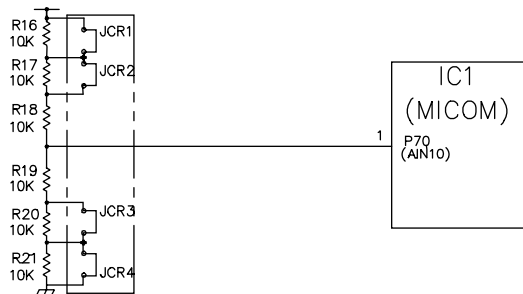

Temperature compensation in CUT		
JCR1	+1 °C [+1.8 °F]	+2 °C [+3.6 °F]
JCR2	+1 °C [+1.8 °F]	
JCR3	-1 °C [-1.8 °F]	-2 °C [-3.6 °F]
JCR4	-1 °C [-1.8 °F]	

Compensation for weak-cold		Compensation for over-cold		Temperature compensation value at cold storage room	Remarks
JCR3	JCR4	JCR1	JCR2		
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0 °C (In shipment from factory)	
CUT	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	-1 °C [-1.8 °F]	
<input type="checkbox"/>	CUT	<input type="checkbox"/>	<input type="checkbox"/>	-1 °C [-1.8 °F]	
<input type="checkbox"/>	<input type="checkbox"/>	CUT	<input type="checkbox"/>	+1 °C [+1.8 °F]	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CUT	+1 °C [+1.8 °F]	
CUT	CUT	<input type="checkbox"/>	<input type="checkbox"/>	-2 °C [-3.6 °F]	
<input type="checkbox"/>	<input type="checkbox"/>	CUT	CUT	+2 °C [+3.6 °F]	
CUT	<input type="checkbox"/>	CUT	<input type="checkbox"/>	0 °C [0 °F]	
CUT	<input type="checkbox"/>	<input type="checkbox"/>	CUT	0 °C [0 °F]	
<input type="checkbox"/>	CUT	CUT	<input type="checkbox"/>	0 °C [0 °F]	
<input type="checkbox"/>	CUT	<input type="checkbox"/>	CUT	0 °C [0 °F]	
CUT	CUT	CUT	<input type="checkbox"/>	-1 °C [-1.8 °F]	
<input type="checkbox"/>	CUT	CUT	CUT	+1 °C [+1.8 °F]	
CUT	CUT	CUT	CUT	0 °C [0 °F]	

► The above option circuit is a circuit to compensate for temperature at the refrigerator by simply cutting in service.


EXPLANATION FOR MICOM CIRCUIT

1-11. Communication circuit and connection L/Wire between main PCB and display PCB



The following circuit is a communication circuit used for exchanging the necessary information between main MICOM of main PCB and LCD dedicated MICOM for LCD control of display PCB.

Transmission/receipt L/Wire together with the necessary display PCB for driving the display PCB is required.

Poor communication occurs if a continuous information exchange fail to continue for more than 2 minutes between main MICOM of main PCB and LCD dedicated MICOM for LCD control of display PCB.

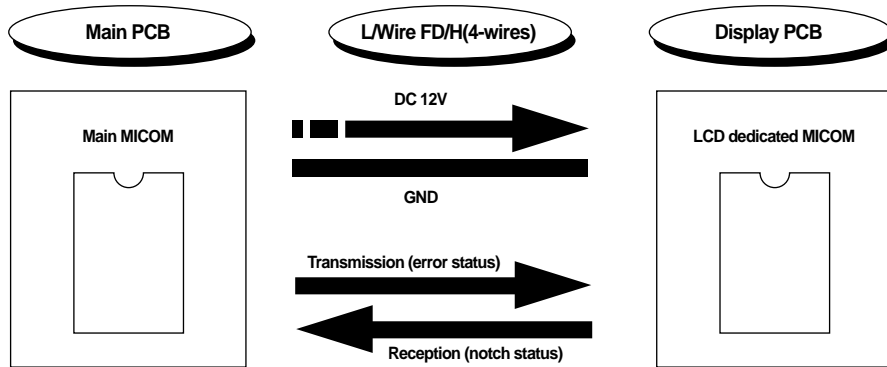


1) GR-P247, L247, P207, L207

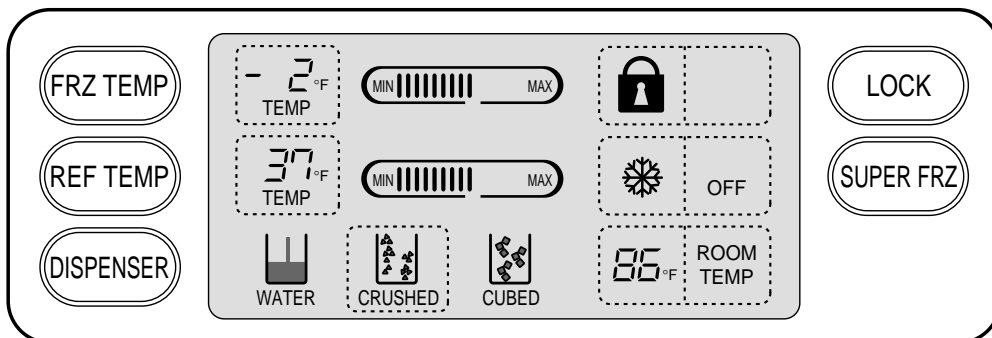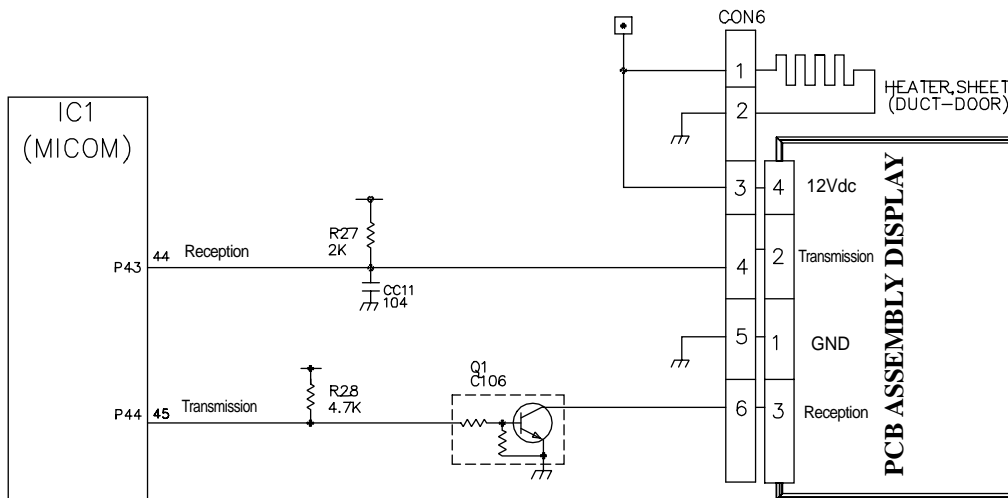

EXPLANATION FOR MICOM CIRCUIT

2) GR-C247, B247, C207, B207

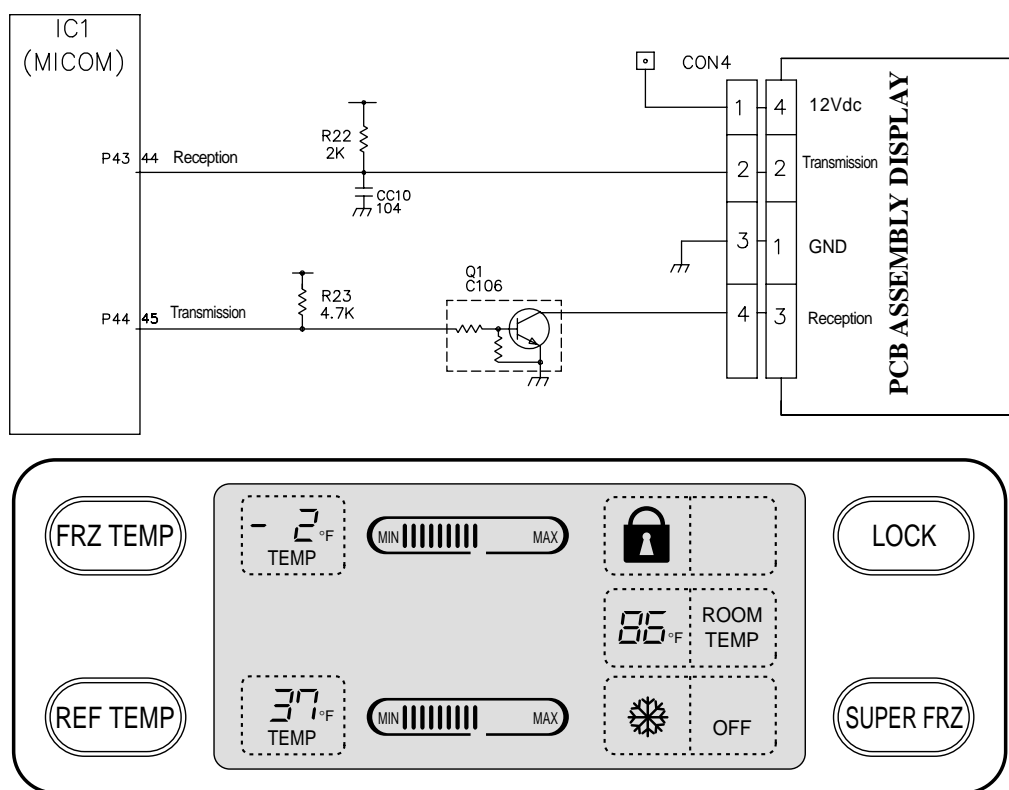

2. Sensor resistance characteristics table

Measuring Temperature (°C)	Freezing Sensor	Cold storage sensor 1, 2.	
		Frost removal sensor,	Outside sensor
-20 °C	22.3 kΩ	77 kΩ	
-15 °C	16.9 kΩ	60 kΩ	
-15 °C	13.0 kΩ	47.3 kΩ	
-5 °C	10.1 kΩ	38.4 kΩ	
0 °C	7.8 kΩ	30 kΩ	
+5 °C	6.2 kΩ	24.1 kΩ	
+10 °C	4.9 kΩ	19.5 kΩ	
+15 °C	3.9 kΩ	15.9 kΩ	
+20 °C	3.1 kΩ	13 kΩ	
+25 °C	2.5 kΩ	11 kΩ	
+30 °C	2.0 kΩ	8.9 kΩ	
+40 °C	1.4 kΩ	6.2 kΩ	
+50 °C	0.8 kΩ	4.3 kΩ	


- ▶ Resistance value allowance of sensor is $\pm 5\%$.
- ▶ In measuring resistance value allowance of sensor, perform measuring after leaving the sensor for more than 3 minutes at the measuring temperature (delay is required due to sense speed relation relationship).
- ▶ Since an analog tester has a large measuring temperature, measuring with a digital tester is required as possible as.
- ▶ Resistance of the cold storage sensor 1 and 2 shall be measured with a digital tester after separating CON8 of the PWB ASSEMBLY and the MAIN part.
- ▶ Resistance of the freezing sensor shall be measured with a digital tester after separating CON7 of the PWB ASSEMBLY and the MAIN part.

EXPLANATION FOR MICOM CIRCUIT

3. PWB parts diagram and list


3-1. PWB Assembly, main part diagram

1. GR-P247, L247, P207, L207

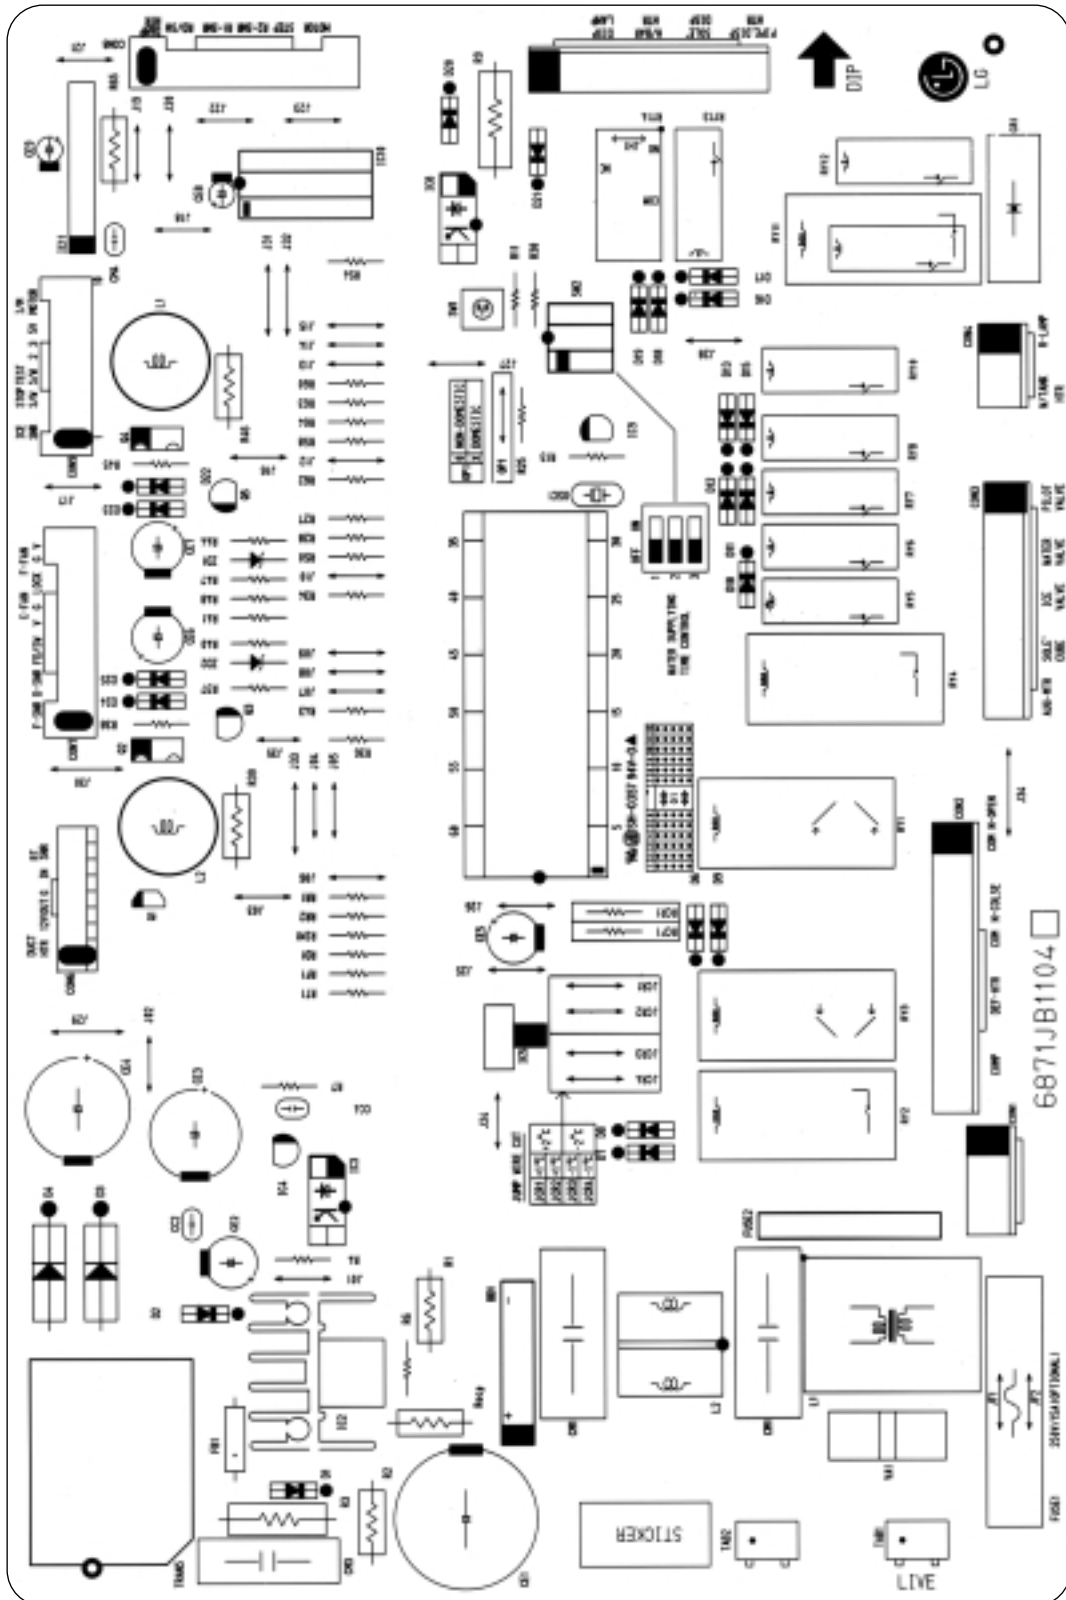

EXPLANATION FOR MICOM CIRCUIT

2. GR-C247, B247, C207, B207

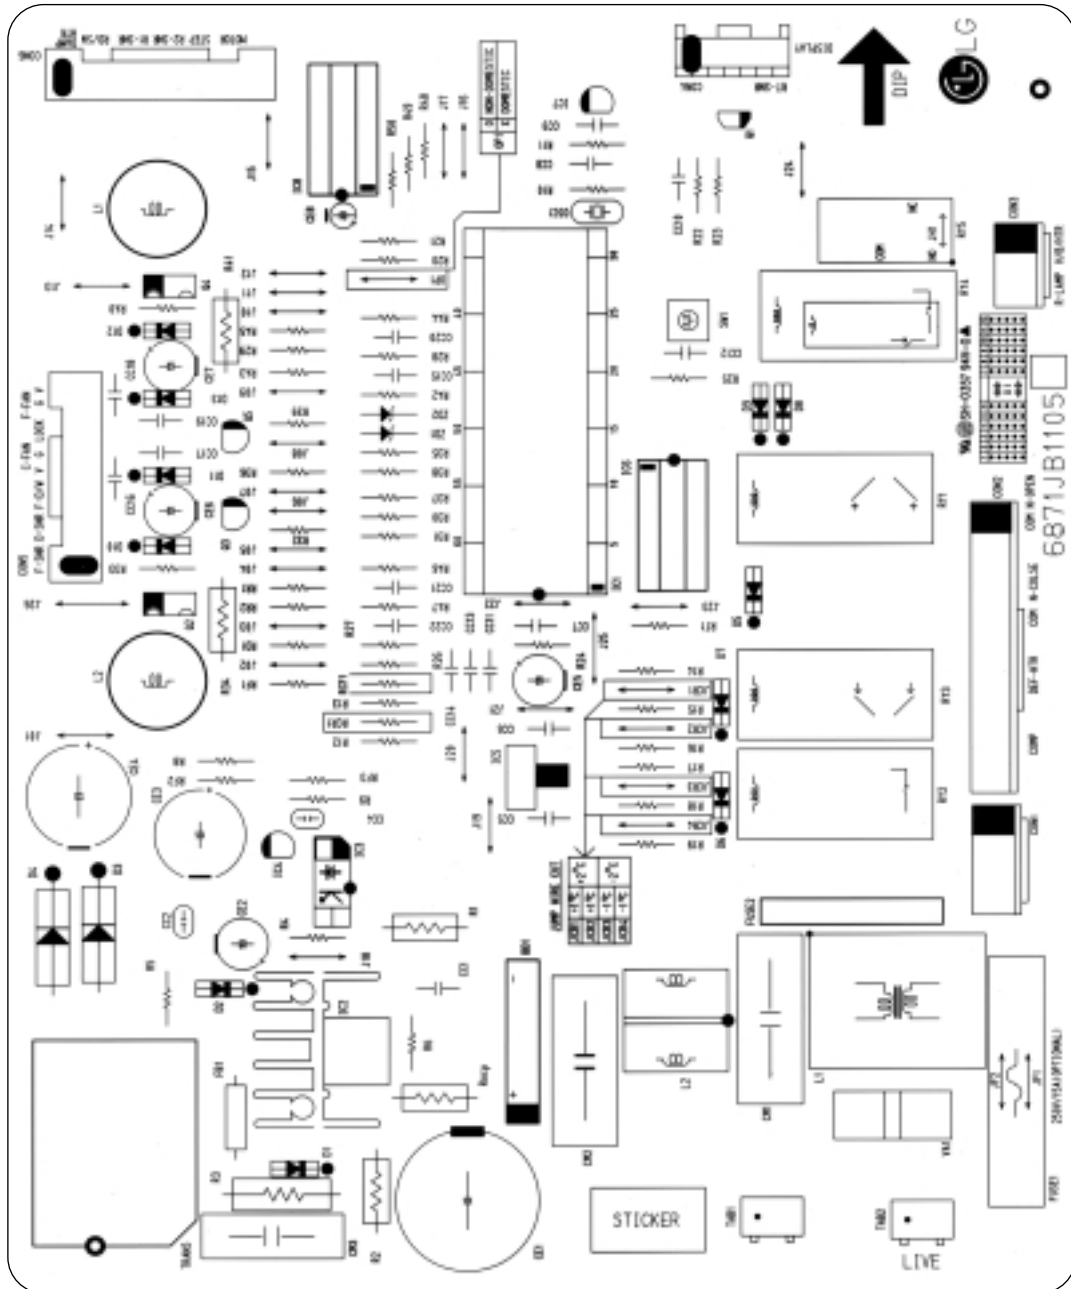

EXPLANATION FOR MICOM CIRCUIT

3-2. Parts list

1. GR-P247, L247, P207, L207

QTY.	QTY.	NO.	DWG. NO.	DESCRIPTION	SPEC'	MAKER	REMARK		
1A	1A	1	6870JB8009	PWB,MAIN	FR-1(DS-1107A)	DOO SAN	t=1.6		
1A	1A	2	6170JB2013	TRANS,SMP(S(COL)	1,2: 1.74mH	SAMIL	TRANS		
1	1	3	6630JB8001A	WAFER	JE202-1T-02(3P-2)	JAE EUN	CON4		
1	1	4	6630JB8001Q		JE202-1T-11		CON2		
		5							
1	1	6	6630JB8001G		JE202-1T-04		CON1		
		7							
1	1	8	6630JB8001Z		JE202-1T-05(9-2,4,6,8)		CON5		
1	1	9	6630JB8001D		JE202-1T-05(9-2,4,6,8)		CON3		
1	1	10	6630JB8007G		917788-1(8P)		CON6		
1	1	11	6630JB8010A		917791-1(13P)		CON8		
1	1	12	6630JB8007J		917788-1(10P)		CON9		
1	1	13	6630JB8007L		917790-1(12P)		CON7		
		14							
1	1	15	07ZZJB2009A		MICOM CHIP		TMP87C841N	TOSHIBA	IC1(=07ZZJB2009B)
1	1	16	01KE780500Z		REGULATOR		KIA78005AP	K.E.C	IC5
1	1	17	01KE704200A	RESET IC	KIA7042AP	K.E.C	IC9		
2	2	18	01KE650030C	DRIVE IC	KID65003AF	K.E.C	IC6,7		
1	1	19	01T0777400A	DRIVE IC	TA7774AP	TOSHIBA (JAPAN)	IC10		
1	1	20	01RH622200A	DRIVE IC	BA6222	ROHM	IC11		
1	1	21	01SK655100A	DRIVE IC	STR-G6551	SANKEN	IC2		
1	1	22	01KE431000A	V/REGULATOR	KIA431	K.E.C	IC4		
1	1	23	01T0721000A	PHOTO TR	TLP721F	TOSHIBA	IC3 IC8		
2	2	24	6920JB2007A	RELAY	VSB-12TB	TAKAMISAWA	RY1,3		
2	2	25	6920JB2005A		JW1aFHN	NAIS	RY2,4		
1	1	26	6920JB2004A		DH12DI-O-C	JAEL	RY11(R-LAMP)		
			6920JB2005A		JW1aFHN	NAIS	RY11(EXPORT) (100~127V)		
			6920JB2003B		ALD112	NAIS	RY11(EXPORT) (220~240V)		
1	1	27	6920JB2009A		GSS-1A	OMRON	RY14 (H/BAR-HTR)		
6	6	28	6920JB2003B		ALD112	NAIS	RY5,6,7,10,12,13		
1	1	29	6920JB2003B		ALD112	NAIS	RYB (PILOT VALVE)		
		30							
		31							
		32							
1	1	33	6212JB8001B J570-00012B		RESONATOR	CST54.00MG03 CST4.00MGW-1F01	MURATA	OSC1 (=6212A09002B)	
1	1	34	6102JB8001B	VARISTOR	INR14D6211L	JIN JIN	VA1		
		35	J572-00001D		INR14D271L	JIN JIN			
5	5	36	0DR102009AA	FAST RECOVER D	FR102	DELTA	D2,D22~25		
1	1	37	0DR107009AA		FR107		D1		
2	2	38	0DR302000BA		FR302		D3,4		
1	1	39	0DD400709AC		RECTIFIER DIODE		1N4007	D20	
			0DD414809BB	SWITCHING DIODE	1N4148	D18(EXPORT) (220~240V)			
			0DD400409AC	RECTIFIER DIODE	1N4004	(1)DELTA (2)PYUNG CHANG			
1	1	40	0DD400409AC	RECTIFIER DIODE	1N4004	D18(EXPORT) (100~127V)			
1	1	41	0DD400409AC	RECTIFIER DIODE	1N4004	D18(R-LAMP) (NAE-SU)			
4	4	41	0DD400409AC	RECTIFIER DIODE	1N4004		D6,7,8,9		
1	1	42	0DB360000AA	BRIDGE DIODE	D3SBA60	SHINDENGEN	BD1		
7	7	43	0DD414809BB	SWITCHING DIODE	1N4148	(1)ROHM (2)PYUNG CHANG	D10~12,15,17,18,21 D13 (PILOT VALVE) RY19 (H/BAR-HTR)		
1	1	44	0DZMR00019A	ZENER DIODE	1N4735(6.2V)	DELTA	ZD1,2		

QTY.	QTY.	NO.	DWG. NO.	DESCRIPTION	SPEC'	MAKER	REMARK	
1	1	45	0CE2271F638		220uF/16V		CE5	
1	1	46	0CE1071H638	ELF CAPA (M 85°C)	100uF/25V	RUBYCON	CE9	
1	1	47	0CE1061K638		1uF/50V		CEB	
1	1	48	0CE687AH690	ELF CAPA(TK 105°C)	680uF/25V		CE3	
1	1	49	0CE2287H690		2200uF/25V	SAM HWA	CE4	
1	1	50	0CE107AH610	ELF CAPA(TS 105°C)	100uF/50V		CE2	
2	2	51	0CE227AH638	ELF CAPA(TS 105°C)	220uF/25V	RUBYCON	CE6,7	
1	1	52	0CE476BV640	ELF CAPA(TS 105°C)	47uF/450V	SAM HWA	CE1	
1	1	53	0CQ4732Y430	MYL' CAPACTOR	47.3/6.3OV		CM3	
1	1	54	0CQ2241N630	MYL' CAPACTOR	224/100V	SETL	CC4	
1	1	55	0CK22102510	CER' CAPACTOR	221 /2KV		CC2	
1	1	56	0CK471DK96A		471/50V		CC1	
22	22	57	0CK104DK9BA	CER' CAPACTOR (SMD 2012 TYPE)	104/50V	SAM HWA	CC5~16,21~30	
2	2	58	0CK102DK9BA		102/50V		CC18,20	
2	2	59	0CK223DK9BA		223/50V		CC17,19	
1	1	60	0CF33408670		330nF/275VAC		CM1	
		61		FILM CAPACTOR		PILKOR		
1	1	62	0CF22408670		220nF/275VAC		CM2	
		63						
2	2	64	0RS5602K600	R,OXIDE FILM	56K /2W		R3,9	
1	1	65	0RS1503J609		150K /1W		R1	
		66						
1	1	67	0RS0101J609		1/1W		ROCP	
		68						
1	1	69	0RD0682H609	R,CARBON FILM	68J 1/2W		R65	
2	2	70	0RD6200H609		620J 1/2W		R39,46	
1	1	71	0RD5603H609		560K 1/2W		R2	
		72						
		73						
		74						
2	2	75	0RD3300G609		330 1/4W		R38,45	
1	1	76	0RD6800G609		680 1/4W		R6	
		77						
1	1	78	0RD1801G609		1.8K 1/4W		R7	
		79						
7	7	80	0RD2001G609		2K 1/4W		(1)SMART (2)CHONGYANG R27 R34,40,47,50 R58,62	
2	2	81	0RD3901G609	3.9K 1/4W		R36,43		
10	10	82	0RD4701G609	4.7K 1/4W		R4,13,25,28,30 R41,48,60,63,64		
5	5	83	0RD1002G609	10K 1/4W		R11,15,37,44,54		
1	1	84	0RD1002G609	10K 1/4W		RCF1		
		85	0RD1002G609	10K 1/4W		RCR1		
1	1	86	0RN1002G409	R,METAL FILM	10KF 1/4W		RT1	
2	2	87	0RN1622G409		16.2KF 1/4W		RF1,RM1	
3	3	88	0RN2612G409		26.1KF 1/4W		RD1,RR1,2	
		89						
1	1	90	0RD0332E672	CHIP RESISTOR (SMD 2012 TYPE)	33 1/8W	ROHM	R5	
1	1	91	0RD1001E672		1K 1/8W		R8	
1	1	92	0RD1000E672		100 1/8W		R10	
11	11	93	0RD2001E672		2K 1/8W		R29,31~33,49,51 R52,56,57,59,61	
5	5	94	0RD4701E672		4.7K 1/8W		R22~24,35,42	
10	10	95	0RD1002E672		10K 1/8W		R14~21,53,55	
1	1	96	0RD1004E672		1M 1/8W		R12	
1	1	97	0RN2401E472		2.4KF 1/8W		RF3	
1	1	98	0RN9101E472		9.1KF 1/8W		RF2	

EXPLANATION FOR MICOM CIRCUIT

2. GR-C247, B247, C207, B207


QTY.	QTY.	NO.	DWG. NO.	DESCRIPTION	SPEC'	MAKER	REMARK		
1A	1A	1	6870JB8010	PWB.MAIN	FR-1(DS-1107A)	DOO SAN	t=1.6		
1A	1A	2	6170JB2012	TRANS.SMPS(COL)	1,2: 2.9mH	SAMIL	TRANS		
1	1	3	6630JB8001A	WAFER	JE202-1T-02(3P-2)	JAE EUN	CON3		
1	1	4	6630JB8001Q		JE202-1T-11		CON2		
		5							
1	1	6	6630JB8001G		JE202-1T-04		CON1		
		7							
		8							
1	1	9	6630JB8001D		JE202-1T-05(3P-2&A)		CON3		
1	1	10	6630JB8007E		917784-1(6P)		CON4		
1	1	11	6630JB8010A		917791-1(13P)		CON6		
		12							
1	1	13	6630JB8007L		917790-1(12P)		AMP	CON5	
		14							
1	1	15	01ZZJB2009A		MICOM CHIP		TMP87C841N	TOSHIBA	IC1(=0ZZJB2009B)
1	1	16	01KE780500Z		REGULATOR		KIA78005AP	K.E.C	IC5
1	1	17	01KE704200A	RESET IC	KIA7042AP	K.E.C	IC7		
1	1	18	01KE650030B	DRIVE IC	KID65003AP	K.E.C	IC6		
1	1	19	01TO777400A	DRIVE IC	TA7774AP	TOSHIBA (JAPAN)	IC8		
		20							
1	1	21	01SK655100A	DRIVE IC	STR-G6551	SANKEN	IC2		
1	1	22	01KE431000A	V/REGULATOR	KIA431	K.E.C	IC4		
1	1	23	01TO721000A	PHOTO TR	TLP721F	TOSHIBA	IC3		
2	2	24	6920JB2007A	RELAY	VSB-12TB	TAKAMISAWA	RY1,3		
1	1	25	6920JB2005A		JW1αFHN	NAIS	RY2		
			6920JB2004A		DH12DI-O-C	JAEIL	RY4(NAE-SU)		
			6920JB2005A		JW1αFHN	NAIS	RY4(EXPORT) (100-127V)		
			6920JB2003B		ALD112	NAIS	RY4(220-240 EXPORT) (G5N-1A ■?)		
1	1	27	6920JB2009A		G5S-1A	OMRON	RY5(H-BAR)		
		28							
		29							
		30							
		31							
		32							
1	1	33	6212JB8001B J570-00012B	RESONATOR	CSTS4.00MG03 CST4.00MGW-1F01	MURATA	OSC1 (=6212A09002B)		
1	1	34	6102JB8001B	VARISTOR	INR14D621	IL JIN	VA1		
		35	J572-00001D		INR14D271	IL JIN			
5	5	36	0DR102009AA	FAST RECOVER D	FR102	DELTA	D2,11~14		
1	1	37	0DR107009AA		FR107	DELTA	D1		
2	2	38	0DR302000BA		FR302	DELTA	D3,4		
		39	0DD414809BB		1N4148	ROHM	D8(EXPORT) (220~240)		
		40	0DD400409AC	RECTIFIER DIODE	1N4004	ROHM	D8(EXPORT) (100-127V)		
1	1		0DD400409AC	RECTIFIER DIODE	1N4004	(1)DELTA (2)PYUNG CHANG	D8(R-LAMP) (NAE-SU)		
3	3	41	0DD400409AC	RECTIFIER DIODE	1N4004	CHANG	D5~7		
1	1	42	0DB360000AA	BRIDGE DIODE	D3SBA60	SHINDENGEN	BD1		
1							D9(H-BAR)		
		43	0DD414809BB	SWITCHING DIODE	1N4148	(1)ROHM (2)PYUNG CHANG			
2	2	44	0DZMR00019A	ZENER DIODE	1N4735(6.2V)	DELTA	ZD1,2		

QTY.	QTY.	NO.	DWG. NO.	DESCRIPTION	SPEC'	MAKER	REMARK
1	1	45	0CE2271F638	ELE' CAPN (1K 85°C)	220uF/16V		CE5
1	1	46	0CE1061K638		1uF/50V	RUBYCON	CE8
		47					
1	1	48	0CE687AH690	ELE' CAPN(10K 105°C)	680uF/25V		CE3
1	1	49	0CE2287H690		2200uF/25V	SAM HWA	CE4
1	1	50	0CE107AK638	ELE' CAPN(10K 105°C)	100uF/50V		CE2
2	2	51	0CE227AH638		220uF/25V	RUBYCON	CE6,7
1	1	52	0CE476BV640	ELE' CAPN(10K 105°C)	47uF/450V	SAM HWA	CE1
1	1	53	0CQ4732Y430		473/6.30V	SEIL	CM3
1	1	54	0CQ2241N630	MYL' CAPACITOR	224/100V	SEIL	CC4
2	2	55	0CK1020K519		102/50V		CC17,19
14	14	56	0CK1040K919	CER' CAPACITOR	104/50V	TAE YANG	CC5~15 CC20~22
2	2	57	0CK2230K949		223/50V		CC16,18
1	1	58	0CK4710K519		471/50V		CC1
		59	0CK2241N630		224/100V		
1	1	60	0CK22102510	FILM CAPACITOR	221 /2KV	SAM HWA	CC2
		61					
		62					
1	1	63	0CF33408670		330nF/275V		CM1
1	1	64		FILM CAPACITOR		PILKOR	
		65	0CF22408670		220nF/275V		CM2
		66					
1	1	67	0RS5602K600		R,OXIDE FILM	56K /2W	
1	1	68	0RS1503J609	150K /1W			R1
		69					
1	1	70	0RS0101J609	1/1W			ROCP
		71					
		72					
2	2	73	0RD6200H609	R,CARBON FILM	620J 1/2W		R34,41
1	1	74	0RD5603H609		560K 1/2W		R2
		75					
1	1	76	0RD0332G609		33 1/4W		R5
		77					
		78					
2	2	79	0RD3300G609		330 1/4W		R33,40
		80					
1	1	81	0RD1001G609		1K 1/4W		R9
1	1	82	0RD1801G609		1.8K 1/4W		R8
		83			(1)SMART (2)CHRYANG	R22,24,26~29 R35,42,44~46,47	
12	12	84	0RD2001G609	2K 1/4W			
2	2	85	0RD3901G609	3.9K 1/4W		R31,38	
9	9	86	0RD4701G609	4.7K 1/4W		R4,11,20,23,25 R30,26,37,43,	
13	13	87	0RD1002G609	10K 1/4W		R12~19,32,38,48~50	
1	1		0RD1002G609	10K 1/4W		RCF1	
		1	0RD1002G609	10K 1/4W			
1		89	0RD8201G609	8.2K 1/4W		RCR1	
1	1	90	0RD1004G609	1M 1/4W		R10	
1	1	91	0RN2401G409	2.4KF 1/4W		RF3	
1	1	92	0RN9101G409	9.1KF 1/4W		RF2	
1	1	93	0RN1002G409	10KF 1/4W		RT1	
1	1	94	0RN1622G409	16.2KF 1/4W		RF1	
3	3	95	0RN2612G409	26.1KF 1/4W		RD1,RR1,2	
		96					
2	2	97	0TRKE90004A	TRANSISTOR	KTA1705	K.E.C	Q2,4
2	2	98	0TR319809CA		KTC3198		Q3,5

EXPLANATION FOR MICOM CIRCUIT

3-3. DISPLAY ASSEMBLY part diagram


1. GR-P247, L247, P207, L207

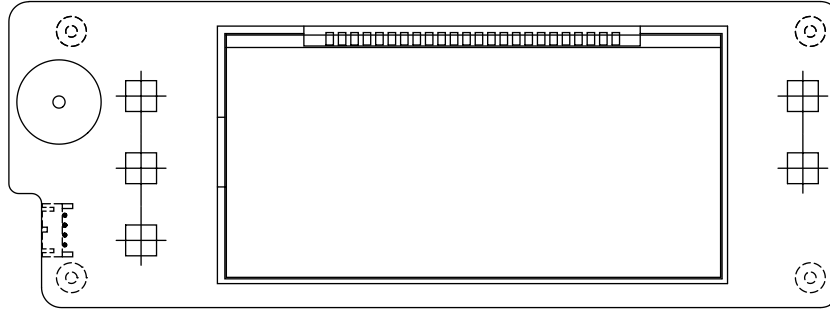

Qty	No	P/NO	DESCRIPTION	SPEC	MAKER	REMARK
1A	1	6304TWT008	LCD(LIQUID CRYSTAL DISPLAY)	TN MONO(A:TPB496)	WINTEK	-
1	2	-	PWB	FR-4	-	-
1	3	-	REFLECTOR	PC ABS	-	-
-	4	-	양면 TAPE	NITTO500(W2MM)	-	-
1	5	-	확산 SHEET	MTN-WX5(46.5*96.56MM)	TSUJIDEN	투과율 35%
1	6	-	WAFER	SMAW250-04	YEON-HO	CDN101
-	7	-	-	-	-	-
-	8	-	-	-	-	-
1J	9	01ZZJB2013	IC, DRAWING	TMP87CH21F QFP80	TOSHIBA	IC101(J-K)
-	10	-	-	-	-	-
1	11	01STLKE002A	IC, STANDARD LOGIC	KIA78L05F	KEC	IC102
1	12	01STLKE003A	IC, STANDARD LOGIC	KIA7042AF	KEC	IC103
-	13	01RH934600D	IC, ROHM	BR93LC46RF-W EEPROM	ROHM	IC104
1	14	01STLKE004A	IC, STANDARD LOGIC	KRA106S	KEC	Q105
5	15	01STLKE005A	IC, STANDARD LOGIC	KRC106S	KEC	Q101~104
1	16	01STLKE006A	IC, STANDARD LOGIC	KTA1298	KEC	Q106
-	17	-	-	-	-	-
-	18	-	-	-	-	-
1	19	J570-00012B	RESONATOR	CST4.00MGW-TF01	MURATA	DSC101
-	20	-	-	-	-	-
-	21	-	-	-	-	-
-	22	-	-	-	-	-
-	23	0CE337CH630	CAPACITOR, FIXED ELECTROLYTIC	330UF SHL, SD 25V 20%	SAMWHA	CE101
2	24	0CE107VF6DC	CAPACITOR, FIXED ELECTROLYTIC	100UF MV 16V 20% SMD	RUBYCON	CE102,103
-	25	-	-	-	-	-
1	26	0CE476VH6DC	CAPACITOR, FIXED ELECTROLYTIC	47UF MV 25V 20% SMD	RUBYCON	CE104
-	27	-	-	-	-	-
7	28	0CK104DK94A	CAPACITOR, FIXED CERAMIC	100NF 2012 50V 80%, -20%	MURATA	CC101~107
-	29	-	-	-	-	-
-	30	-	-	-	-	-
-	31	0RD1000G676	RESISTOR, FIXED CARBON FILM	100 OHM 1/4 W 5% 3216	ROHM	-
1	32	0RD2200E672	RESISTOR, FIXED CARBON FILM	220 OHM 1/8 W 5% 2012	ROHM	R116
15	33	0RD4700G676	RESISTOR, FIXED CARBON FILM	470 OHM 1/4 W 5% 3216	ROHM	R122~136
-	34	0RD6800G676	RESISTOR, FIXED CARBON FILM	680 OHM 1/4 W 5% 3216	ROHM	-
-	35	-	-	-	-	-
-	36	-	-	-	-	-
2	37	0RD1001E672	RESISTOR, FIXED CARBON FILM	1K OHM 1/8 W 5% 2012	ROHM	R117,118
2	38	0RD2001E672	RESISTOR, FIXED CARBON FILM	2K OHM 1/8 W 5% 2012	ROHM	R101,102
8	39	0RD4701E672	RESISTOR, FIXED CARBON FILM	4.7K OHM 1/8 W 5% 2012	ROHM	R103~110
1	40	0RD1502E672	RESISTOR, FIXED CARBON FILM	15K OHM 1/8 W 5% 2012	ROHM	R115
1	41	0RD1004E672	RESISTOR, FIXED CARBON FILM	1M OHM 1/8 W 5% 2012	ROHM	R119
-	42	0RD4702E672	RESISTOR, FIXED CARBON FILM	47K OHM 1/8 W 5% 2012	ROHM	-
1	43	0RD1201E472	RESISTOR, FIXED CARBON FILM	1.2K OHM 1/8 W 1% 2012	ROHM	R121
1	44	0RD1002E472	RESISTOR, FIXED CARBON FILM	10K OHM 1/8 W 1% 2012 R/TP	ROHM	R120
1	45	0DZRM00188A	DIODE, ZENERS	RLZ LLDS(LL-34) 500MW 5.6V	ROHM	ZD101
4	46	-	JUMPER	0 OHM	-	J1~4
1	47	-	JUMPER	0 OHM	-	DP1(AMERICA)
-	48	0DLLE0038AA	LED	LT8B32-UR-191T AMBER 35MCD	LEDTECH	LD101~160
1	49	6908JB8003A	BUZZER	BM-20B PIEZO 4KHZ 85DB	BUJEDN	BUZZER
50	50	6600RRT002J	SWITCH, TACT	JTP1138A 12V DC 50MA SMD	JEIL	SW101~105
60	51	0DLLE0048AA	LED	LT8B22J-190T R/TP GN/YL10MCD	LEDTECH	LD101~160
-	52	-	-	-	-	-

EXPLANATION FOR MICOM CIRCUIT

2. GR-C247, B247, C207, B207

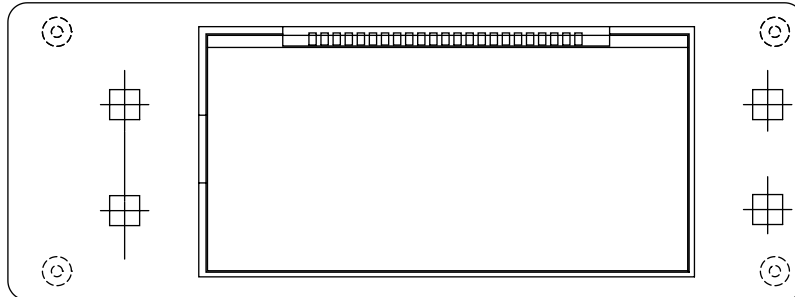


QTY.	NO.	DWG. NO.	DESCRIPTION	SPEC.	MAKER	REMARK
1	1	6304JB2001A	LCD	TN,23PIN		
1	2	—————	PWB	FR-4		
1	3	—————	REFLECTOR	NORYL		
2	4	—————	DOUBLE SIDE TAPE	NITTO500(W: 2mm)		
1	5	—————	SPREAD SHEET	RLDD643(46.5*96.5mm)		
1	6	—————	WAFER	#SMAW250-04	YEON HO	CON101
1	7	0IZZJB2011E	MICOM CHIP	TMP47C422N	TOSHIBA	IC101(=0IZZJB2011F)
1	8	0ISTLKE002A	REGULATOR	KIA78L05F	KEC	IC102(SMD)
9	0IKE780500A	KIA78S05P				
1	10	0ISTLKE003A	RESET IC (VOLTAGE DETECTOR)	KIA7042AF	KEC	IC103(SMD)
11	0IKE704200A	KIA7042P				
12	0IKD010100A	BMR-0101D		KODENSHI		
1	13	0ISTLKE004A	TRANSISTOR	KRA106S	KEC	Q104(SMD)
4	14	0ISTLKE005A		KRC106S		Q101~103(SMD) Q106
1	15	0ISTLKE006A		KTA1298		Q105(SMD)
1	16	J570-00012B	RESONATOR	CSTS 4.00MGW	MURATA	OSC101
1	17	0CE337CH630	ELE' CAPACITOR (SD 85 C)	330uF/25V	SAMHWA	CE101
18						
2	19	0CE107VF6DC	ELE' CAPACITOR (GC 85 C)	100uF/16V	RUBYCON	CE102,103(SMD)
1	20	0CE476VF6DC		47uF/25V		CE104(SMD)
7	21	0CK106CK91A	CHIP CAPACITOR	104/50V(1608)	ROHM	CC101~107
15	22	ORD2000G676	RECTANGULAR CHIP RESISTOR	200J 1/4W(3216)	ROHM	R120~R134
1	23	ORD2200E672		220J 1/8W(2012)		R116
1	24	ORD1001E672		1KJ 1/8W(2012)		R118
2	25	ORD2001E672		2KJ 1/8W(2012)		R101,103
10	26	ORD4701E672		4.7KJ 1/8W(2012)		R106 ~ R115
1	27	ORD1502E672		15KJ 1/8W(2012)		R102
1	28	ORD1004E672		1MJ 1/8W(2012)		R119
1	29	ORD1002E472		10KF 1/8W(2012)		R104
1	30	ORD1201E472		1.2KF 1/8W(2012)		R105
60	31	0DLSS0018AA		CHIP LED		SSC570YD(YL/GN)
1	32	6908JB8003A	BUZZER	BM-20B	BUJEON	BUZZER
4	33	6600JB8005A	TACT S/W	KPT1105	KYUNG IN	SW101~104
1	34	6860JB8001A	JUMP WIRE	(2012)		J1(SMD)

EXPLANATION FOR MICOM CIRCUIT

3-4. DISPLAY circuit diagram


1. GR-P247, L247, P207, L207

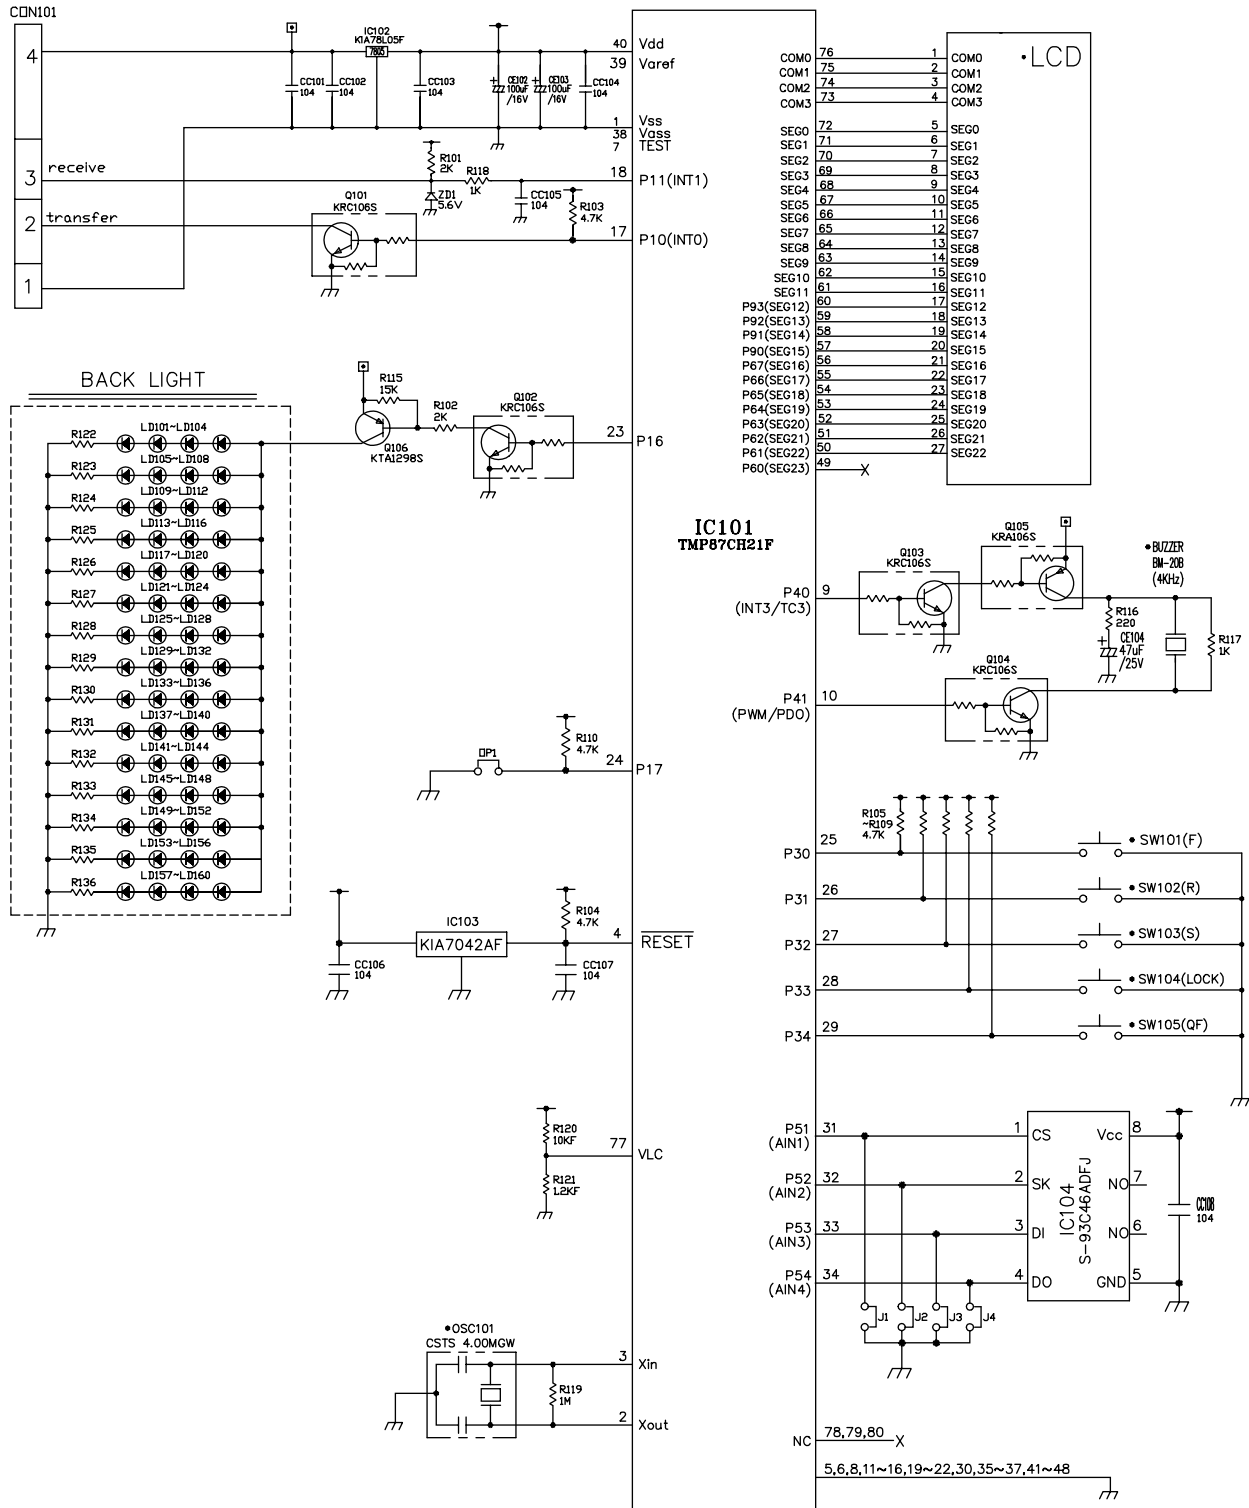

Parts without (●) mark means SMD parts.

EXPLANATION FOR MICOM CIRCUIT

2. GR-C247, B247, C207, B207

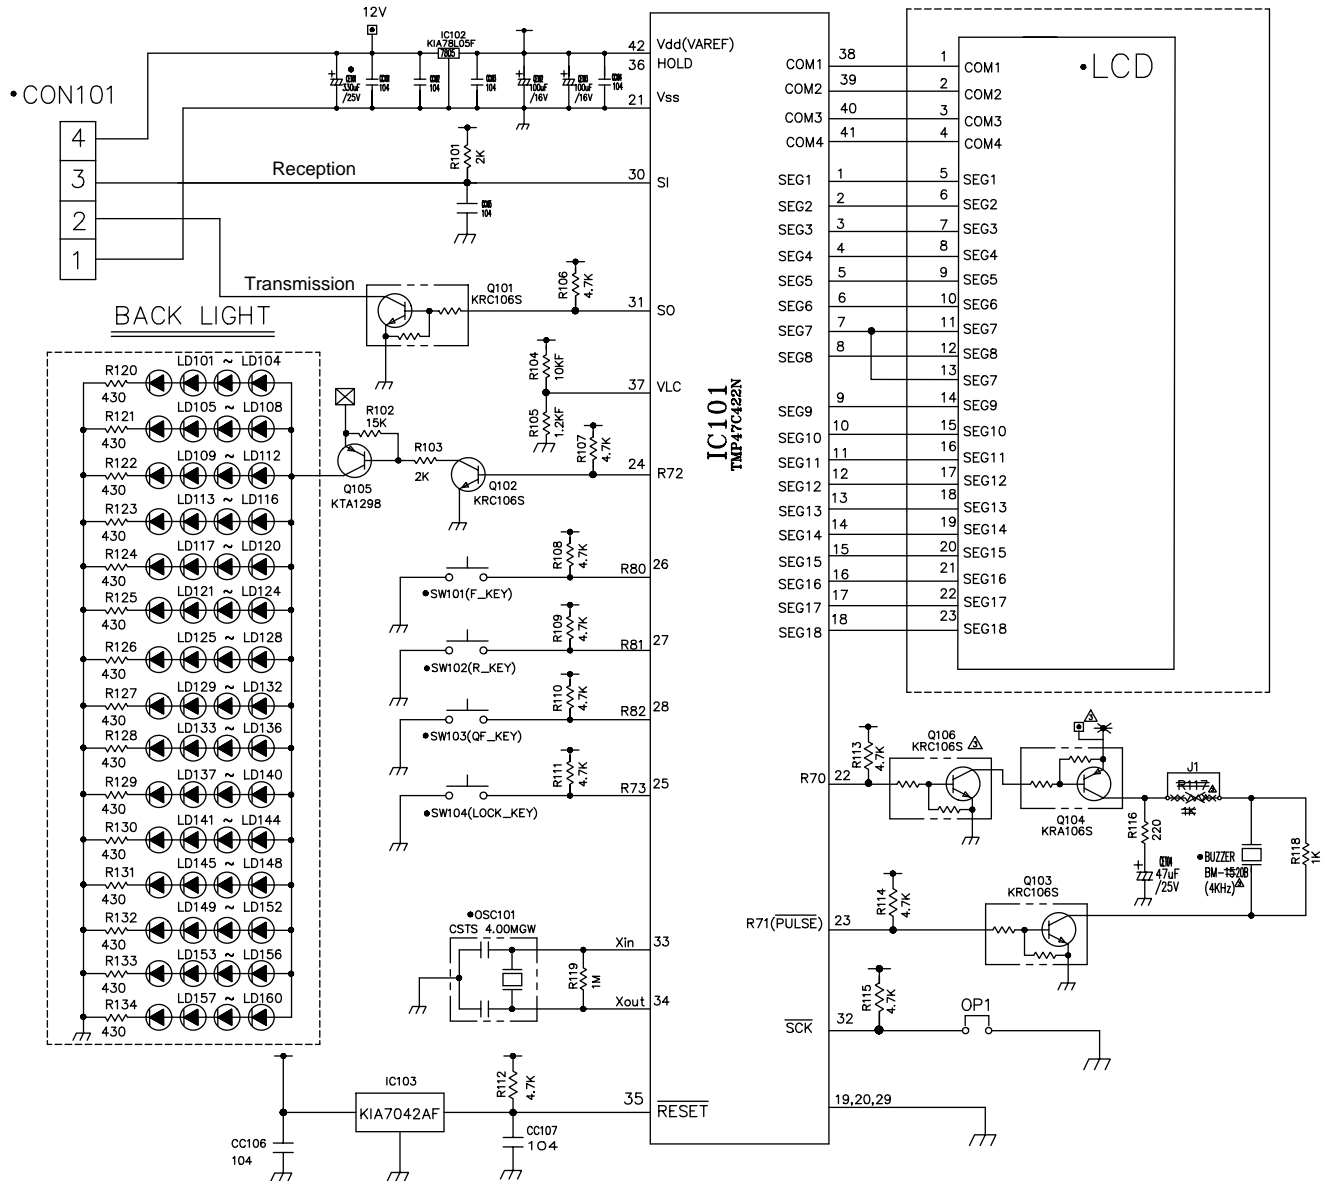


Parts without (●) mark means SMD parts.

SCHEMATIC DIAGRAM

EXPLANATION FOR MICOM CIRCUIT


4. PWB circuit diagram - PWB circuit diagram may vary a little bit depending on actual condition.

1. GR-P247, L247, P207, L207

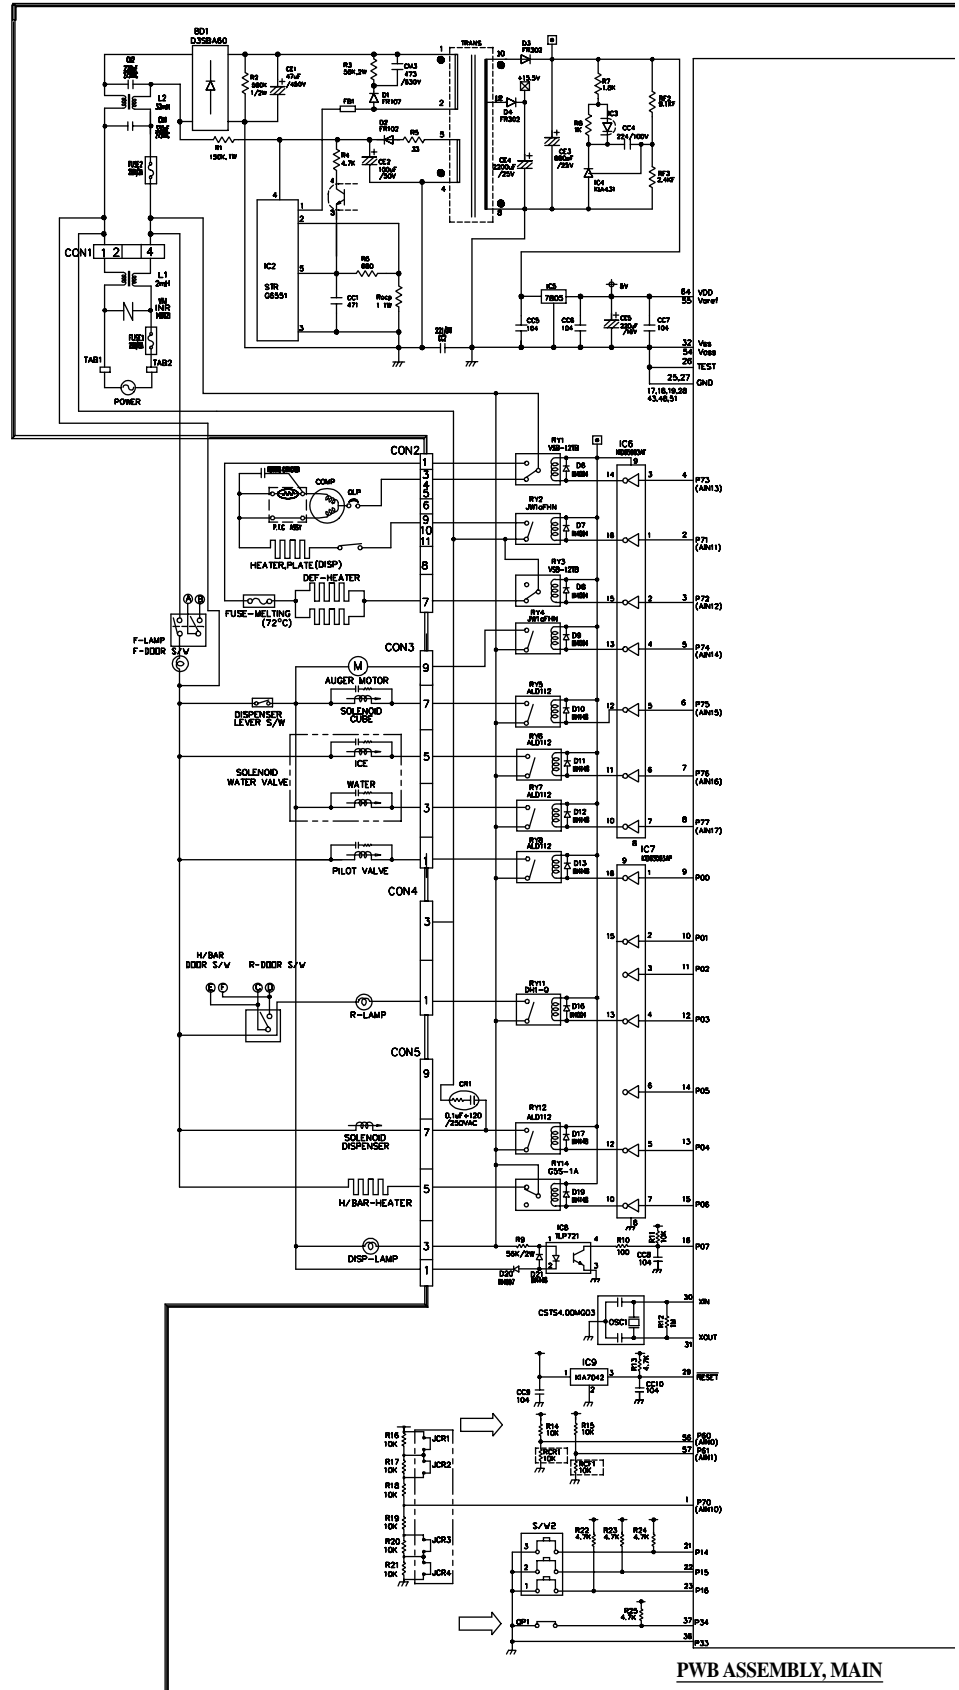


EXPLANATION FOR MICOM CIRCUIT

2. GR-C247, B247, C207, B207

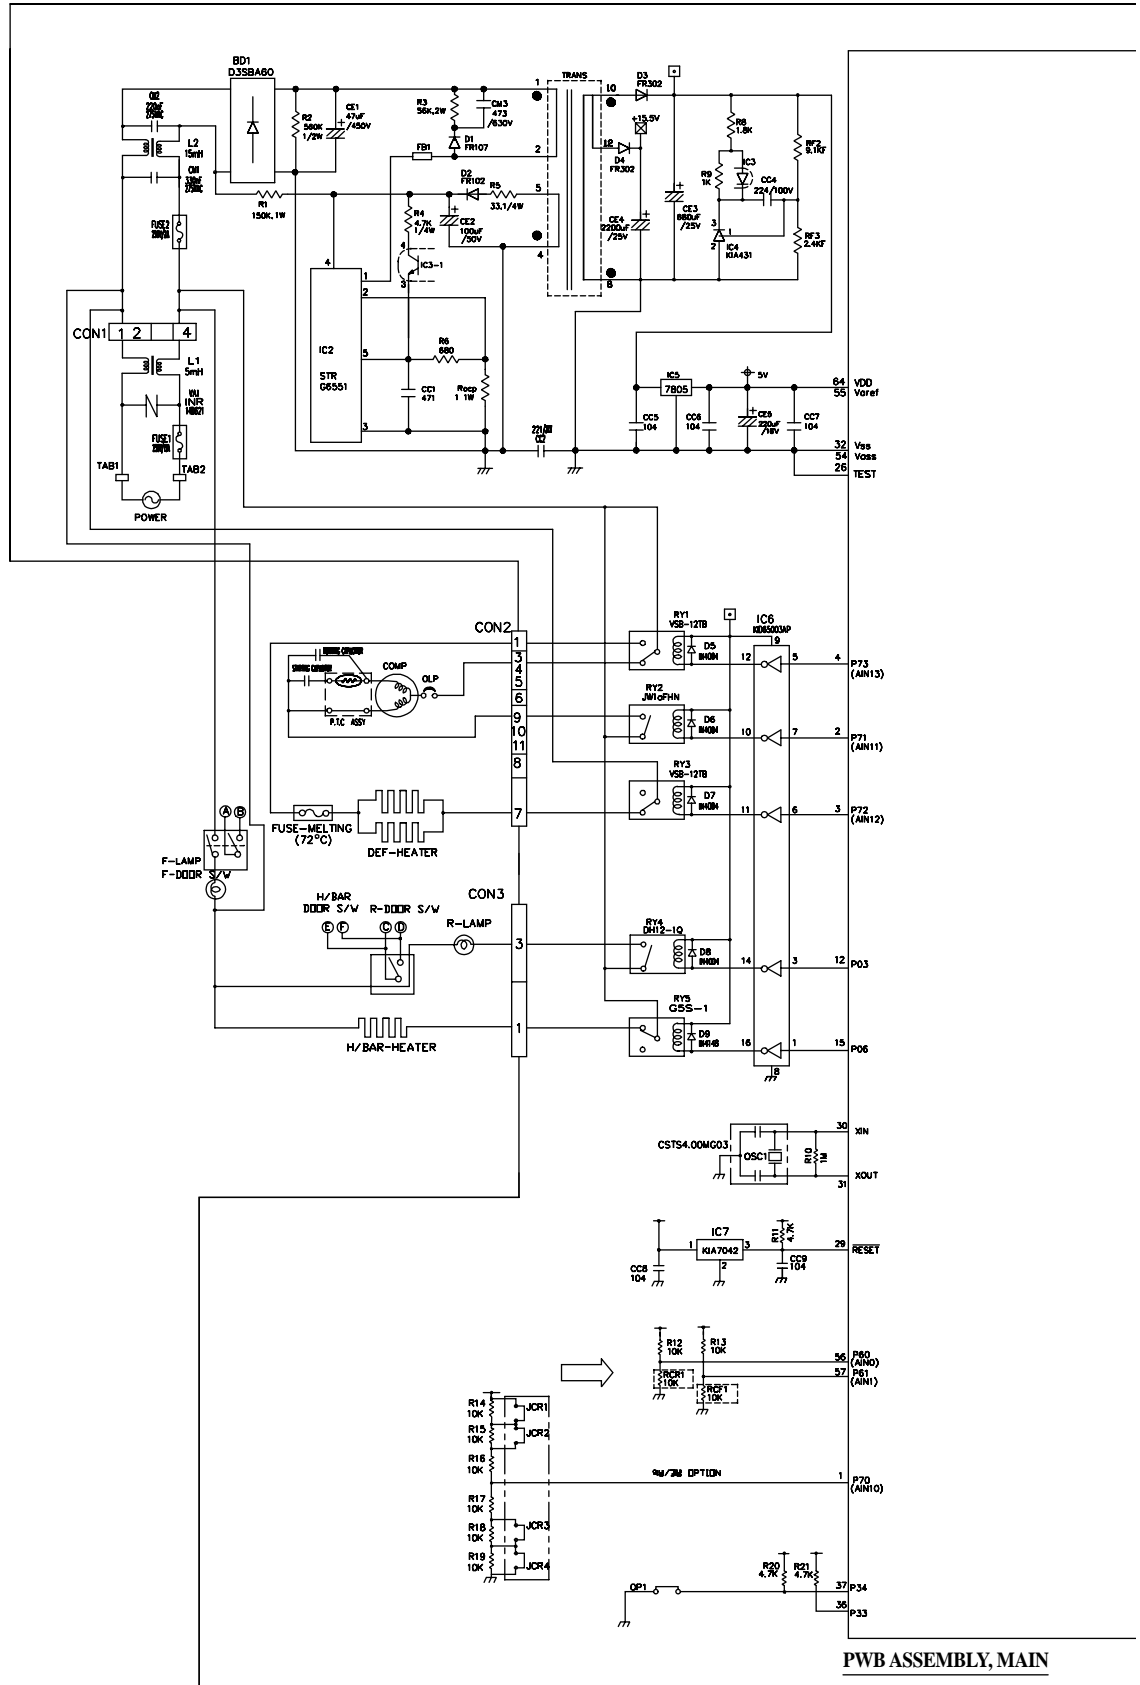


EXPLANATION FOR MICOM CIRCUIT

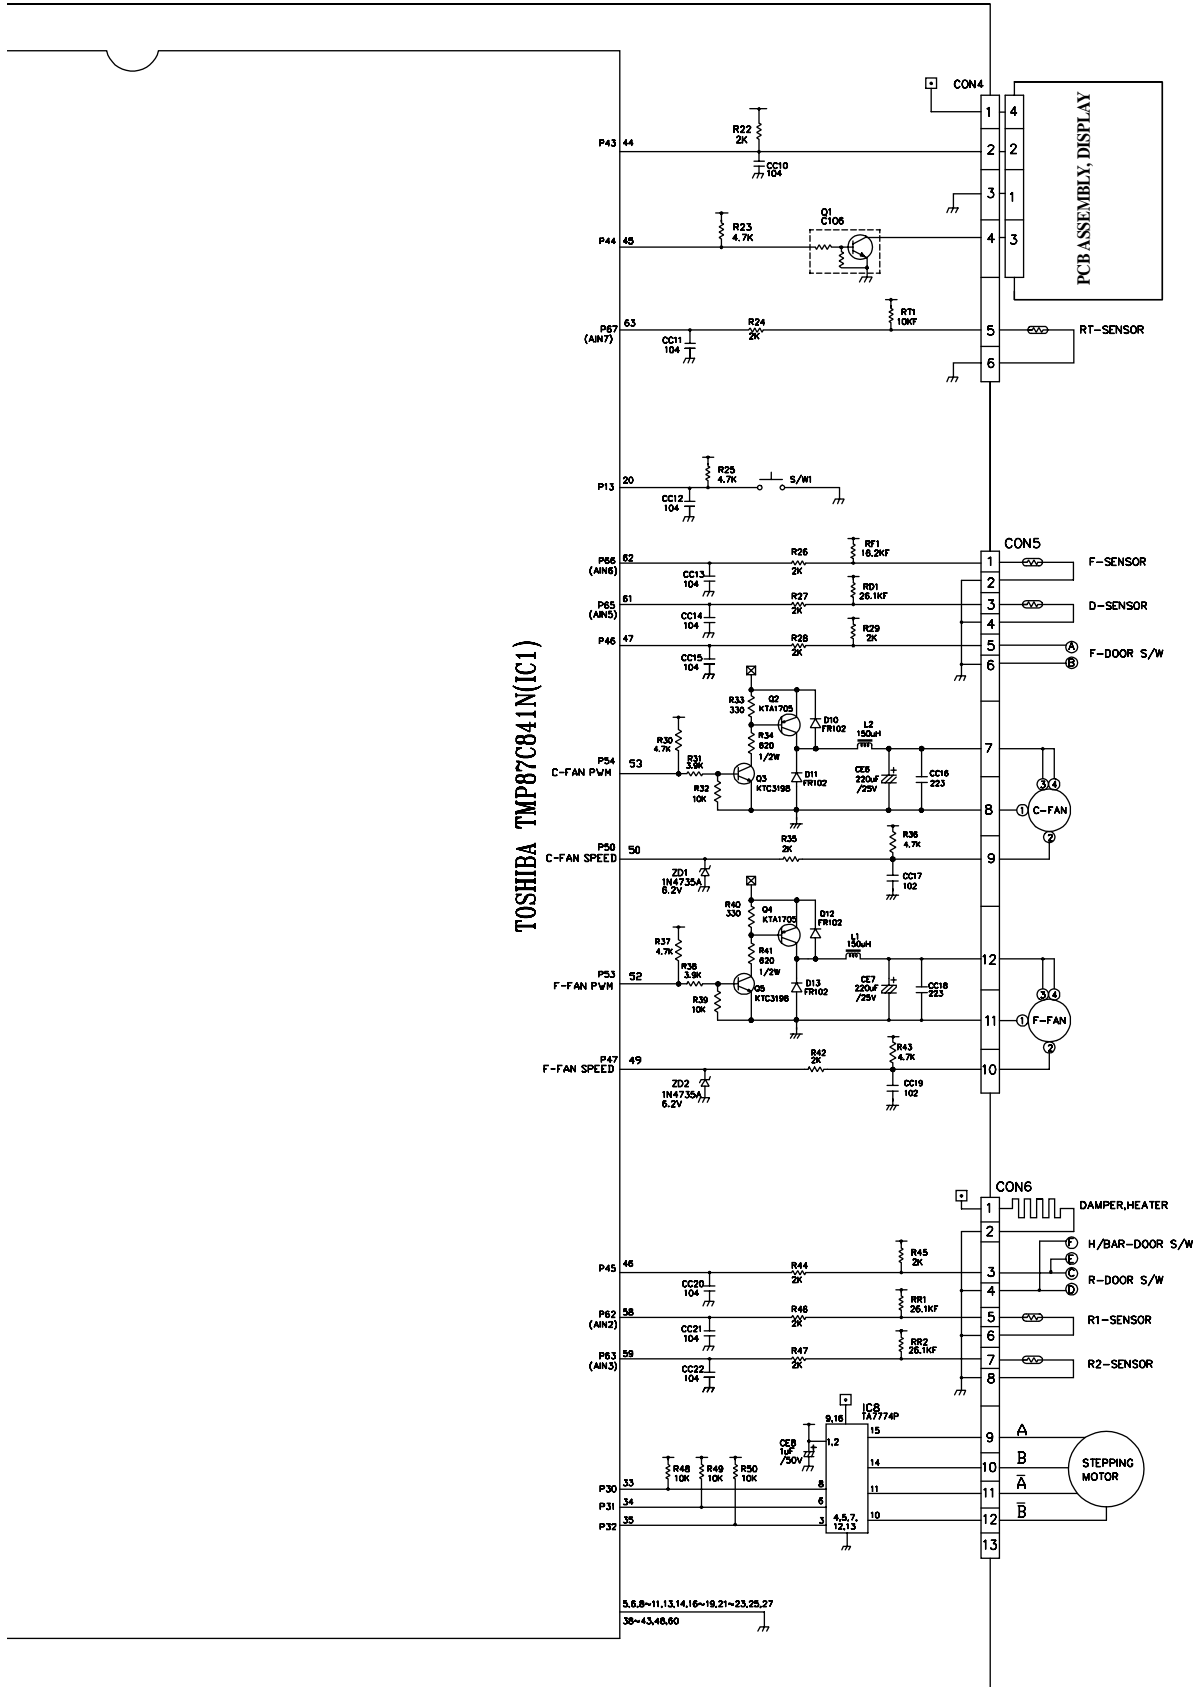

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD

1. Working Principles

1-1. Icemaker Working Principles

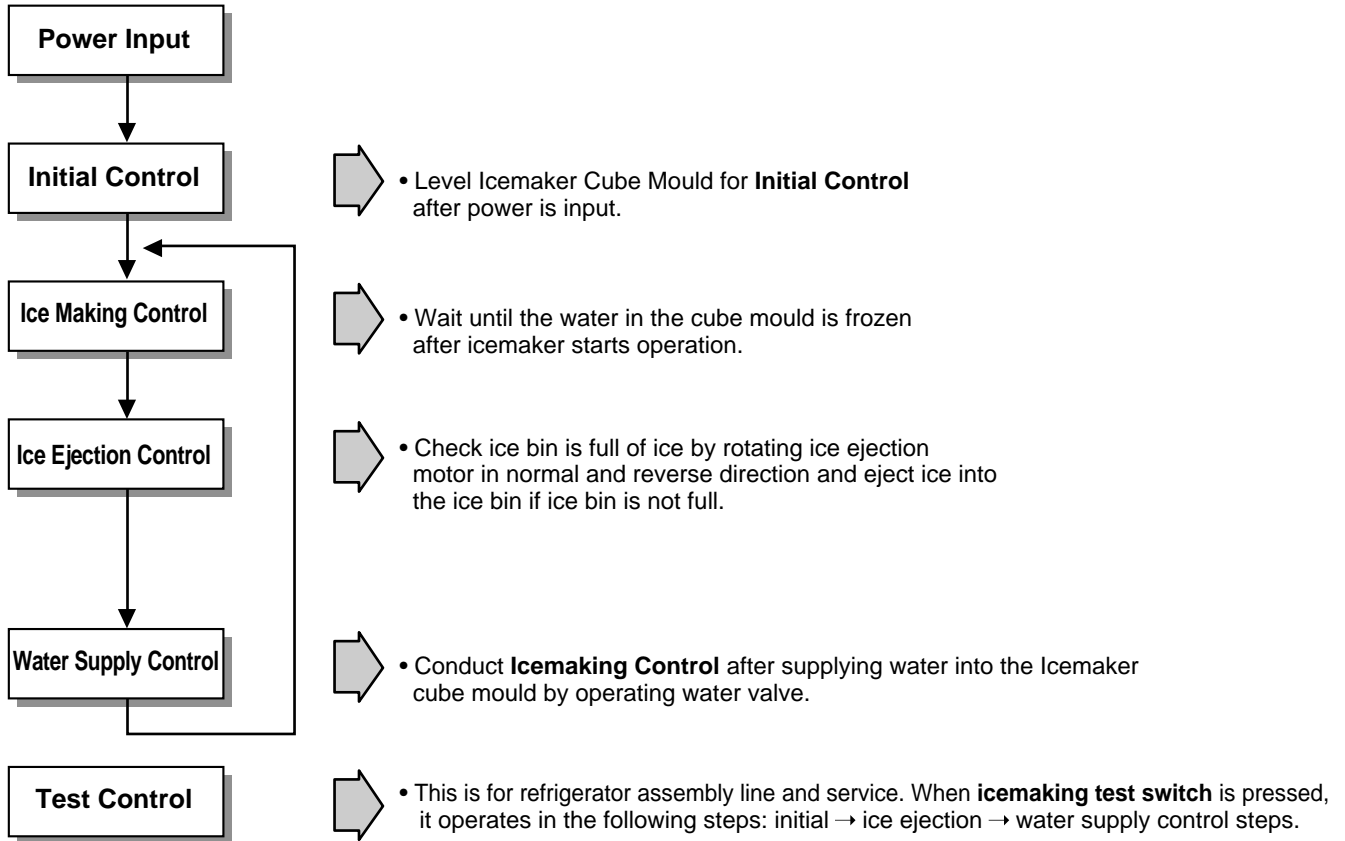

1-2. Dispenser Working Principles

1. This function is available in Model GR-P247, GR-P207 and GR-L247, GR-L207 where water and ice are available without opening freezer compartment door.
2. **Crushed Ice** is automatically selected when power is initially applied or reapplied after power cut.
3. When dispenser selection switch is continuously pressed, light is on in the following sequence:
Water → Cube Ice → Crushed Ice.
4. Lamp is on when dispenser bushing button is pressed and vice versa.
5. When dispenser crushed ice bushing button is pressed, dispenser solenoid and geared motor work so that crushed ice can be dispensed if there is ice in the ice bin.
6. When dispenser cube ice bushing button is pressed, dispenser solenoid, cube ice solenoid and geared motor work so that cube ice can be dispensed if there is ice in the ice bin.
7. When dispenser water bushing button is pressed, water valve opens and water is supplied if water valve is normally installed on the right side of the compressor area.
8. Ice and water are not available when freezer door is open.

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD

2. Function of Icemaker

2-1. Initial Control Function

1. When power is initially applied or reapplied after power cut, it detects level of icemaker cube mould after completion of MICOM initialization. The detecting lever moves up and down.
2. The level of icemaker cube mould is judged by output signal, high and low signal, of Hall IC. Make the cube mould to be horizontal by rotating ice ejection motor in normal or reverse direction so that High/Low signal can be applied to MICOM Pin No. 42.
3. If there is no change in signals one minute after the geared motor starts to operate, it stops icemaker operation and check the signal every hour. It resets initialization of icemaker when it becomes normal.
4. It judges that the initial control is completed when it judges the icemaker cube mould is horizontal.
5. Ice ejection conducts for 1 cycle irrespect of ice in the ice bin when power is initially applied.

2-2. Water Supply Control Function

1. This is to supply water into the icemaker cube mould by operating water valve in the machine room when ice ejection control is completed and icemaker mould is even.
2. The quantity of water supplied is determined by DIP switch and time.

<Water Supply Quantity Table>

No	DIP SWITCH SETTING			WATER SUPPLY TIME	REMARKS
	SWITCH 1	SWITCH 2	SWITCH 3		
1	OFF	OFF	OFF	6.5 Sec.	* The quantity of water supplied depends on DIP switch setting conditions and water pressure as it is a direct tap water connection type. (the water supplied is generally 80 cc to 120 cc) * DIP switch is on the main PWB.
2	ON	OFF	OFF	5.5 Sec.	
3	OFF	ON	OFF	6 Sec.	
4	ON	ON	OFF	7 Sec.	
5	OFF	OFF	ON	7.5 Sec.	
6	ON	OFF	ON	8 Sec.	
7	OFF	ON	ON	9 Sec.	
8	ON	ON	ON	10 Sec.	

3. If water supply quantity setting is changed while power is on, water supplies for the amended time. If DIP switch is changed during water supply, water shall be supplied for the previous setting time. But it will supply for the amended time from the next supply.
4. When water supply signal is applied to water and ice valves at the same time during water supply, water shall be supplied to water valve. If water supply signal is applied to ice valve during water supply, water shall be supplied to both water and ice valves.


2-3. Icemaking Control Function

1. Icemaking control is carried out from the completion of water supply to the completion of icemaking in the cube mould. Icemaking sensor detects the temperature of cube mould and completes icemaking. (icemaking sensor is fixed below icemaker cube mould)
2. Icemaking control starts after completion of water supply control or initial control.
3. It is judged that icemaking is completed when icemaking sensor temperature reaches at -8°C[18°F] after 100 minutes when water is supplied to icemaker cube mould.
4. It is judged that icemaking is completed when icemaker sensor temperature reaches below -12°C[10°F] after 20 minutes in condition 3.

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD

2-4. Ice Ejection Control Function

1. This is to eject ice from icemaker cube mould after icemaking is completed.
2. If Hall IC signal is on within 3.6 seconds after ice ejection motor rotates in normal direction, it does not proceed ice ejection but waits. If the ice bin is full, ice ejection motor rotates in normal direction in every hour to check the condition of ice bin. If the ice bin is not full, the water supply control starts after completion of ice ejection control. If the ice bin is full, ice ejection motor rotates in reverse direction and stops under icemaking or waiting conditions.
3. If ice bin is not full, ice ejection starts. The cube mould tilts to the maximum and ice is separated from the mould and ice checking lever raises.
4. Ice ejection motor stops for 1 second if Hall IC signal changes from OFF (low) to ON (high) after 3.6 seconds when ice ejection motor rotates in normal direction. If there is no change in Hall IC signals within 1 minute after ice ejection motor operates, ice ejection motor stops as ice ejection motor or hall IC is out of order.
5. If ice ejection motor or Hall IC is abnormal, ice ejection motor rotates in normal direction to exercise initial operation. It resets the icemaker if ice ejection motor or Hall IC is normal.
6. The mould stops for 1 second at maximum tilted conditions.
7. The mould returns to horizontal conditions as ice ejection motor rotates in reverse direction.
8. When the mould becomes horizontal, the cycle starts to repeat:
Water Supply → Icemaking → Ice Ejection → Mould Returns to Horizontal

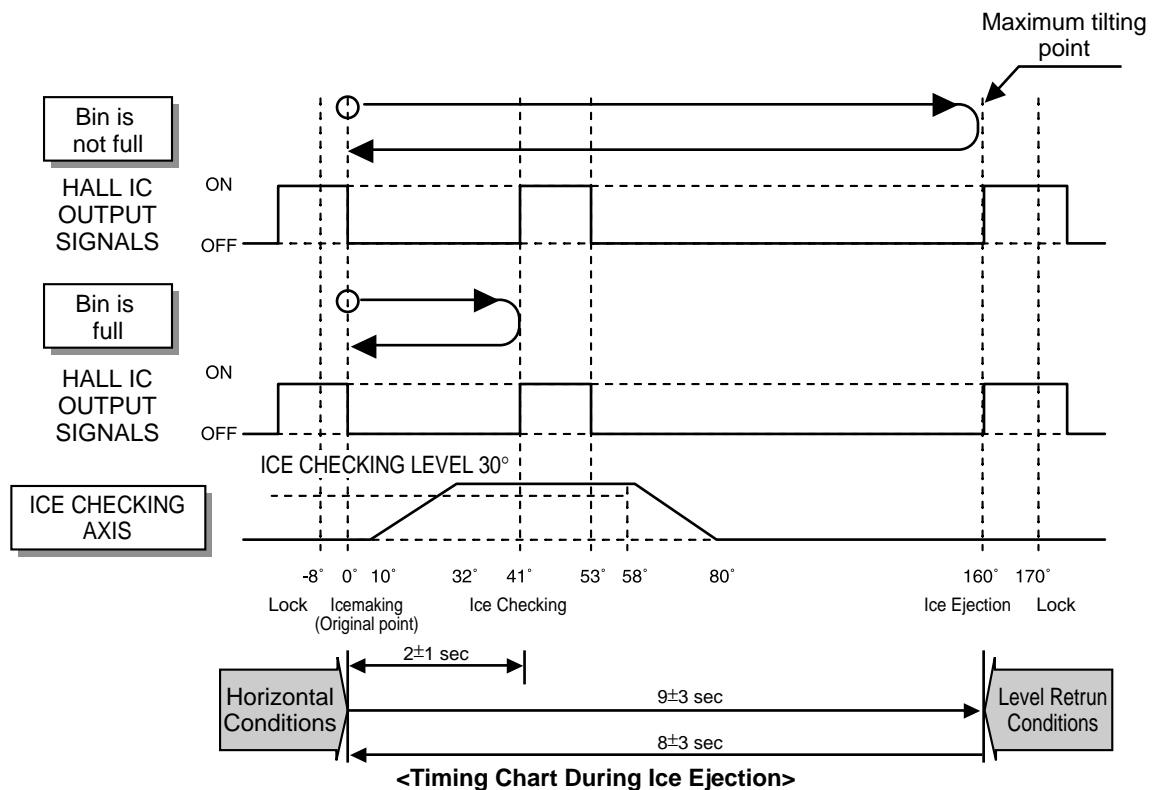

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD

2-5 Test Function

1. It is to force the operation during operation test, service, and cleaning. The test switch is mounted under the automatic icemaker. The test function starts when the test switch is pressed for more than 0.5 second.
2. Test button does not work during ice ejection and water supply. It works when it is in the horizontal conditions. If mould is full of ice during test function operation, ice ejection control and water supply control do not work.
3. When test switch is pressed for more than 0.5 second in the horizontal conditions, ice ejection starts irrespect of the mould conditions. Water shall be splashed if test switch is pressed before the water in the mould freezes. Water shall be supplied while the mould returns to the horizontal conditions after ice ejection. Therefore the problems of ice ejection, returning to the horizontal conditions, and water supply can be checked by test switch. When test function performs normally, the buzzer sounds and water supply shall carry out. Check it for repair if buzzer does not sound.
4. When water supply is completed, the cycle operates normally as follows: **Icemaking** → **Ice ejection** → **Returning** to horizontal conditions → Water supply
5. Remove ice from the icemaker cube mould and press test switch when icemaker cube mould is full of ice as ice ejection and water supply control do not work when cube mould is full of ice.


2-6. Other functions relating to freezer compartment door opening

1. When freezer door is open, ice dispenser stops in order to reduce noise and ice drop.
2. When freezer door is open during ice ejection and cube mould returning to horizontal condition, ice ejection and cube mould level return proceed.
3. When freezer door is open, geared motor and cube ice solenoid immediately stop and duct door solenoid stops after 5 seconds.
4. Water dispenser stops in order to protect water drop when freezer door is open.
5. Test function operates normally irrespect of refrigerator compartment door opening.

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD


3. Icemaker Troubleshooting

* **Troubleshooting:** it is possible to confirm by pressing freezer and refrigerator temperature control buttons for more than 1 second. (Icemaker is normal if all leds are on); refer to trouble diagnosis function in MICOM function 2-8 (page 18)

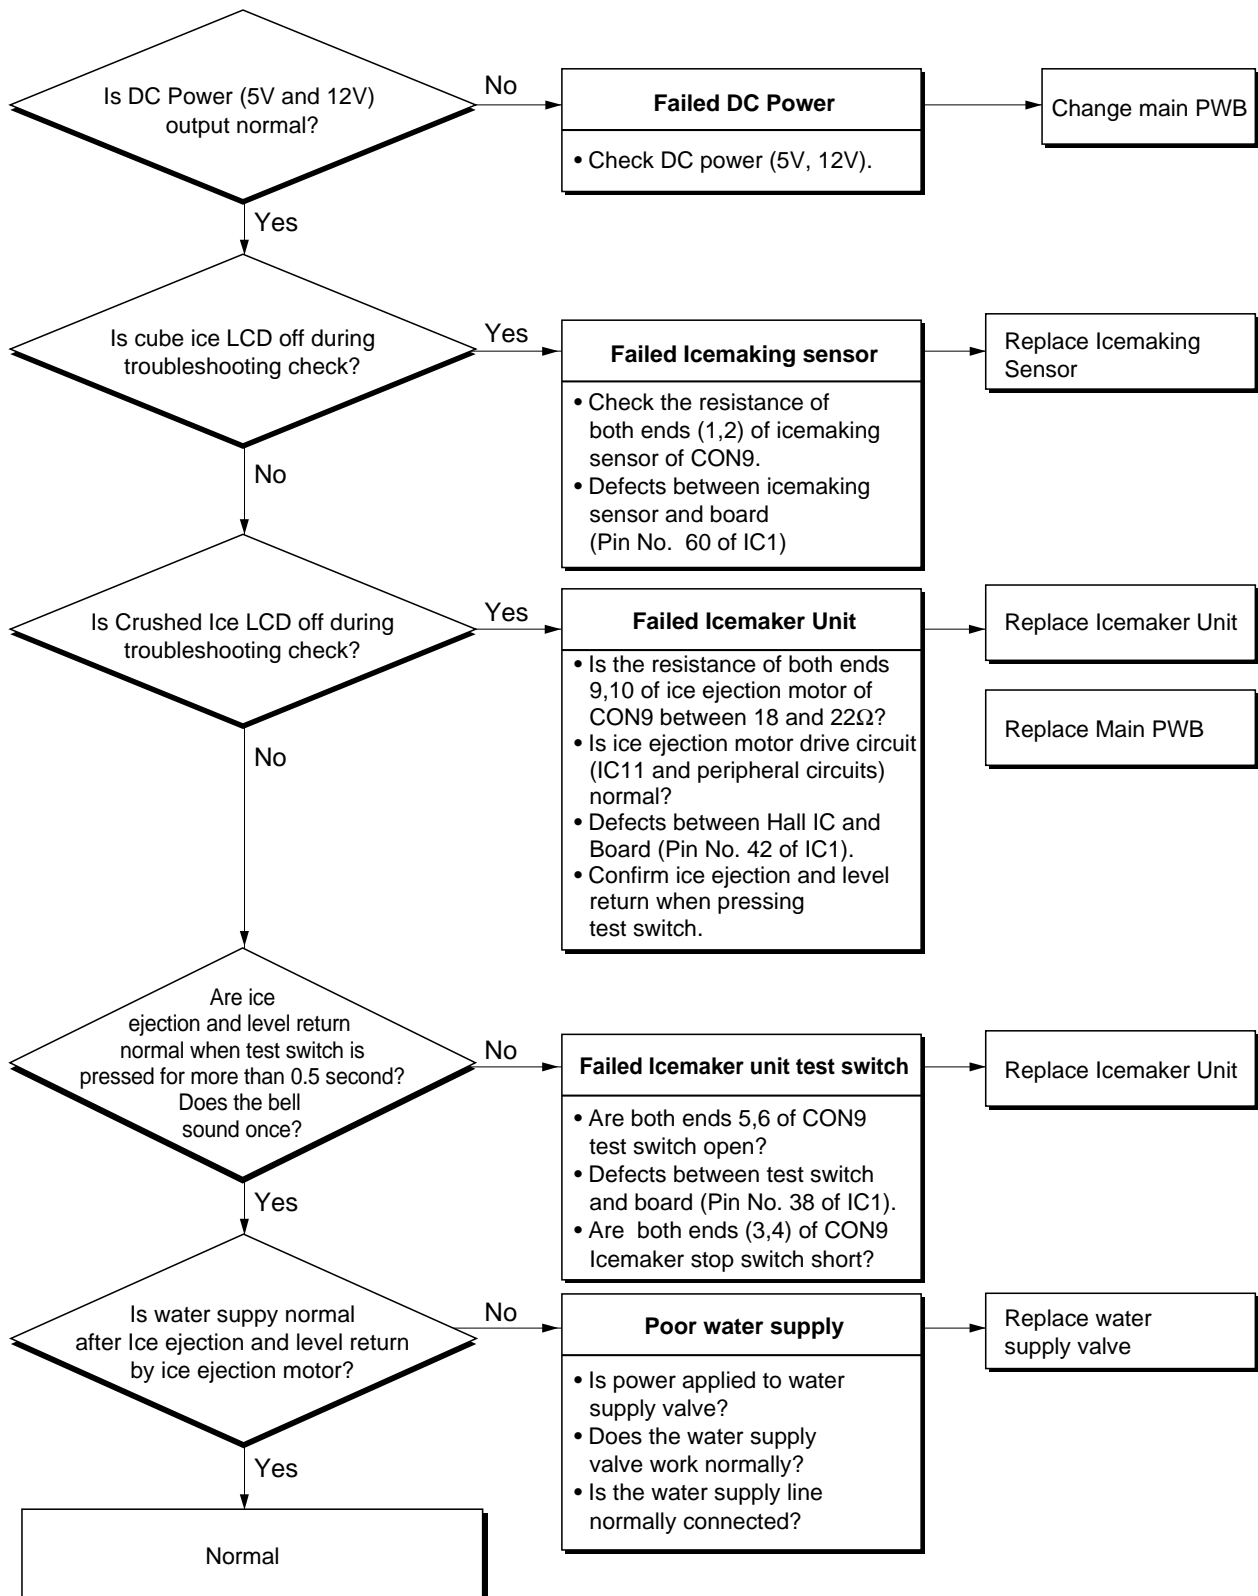

ICEMAKER AND DISPENSER OPERATION PRINCIPLE AND REPAIR METHOD

4. Icemaker circuit part

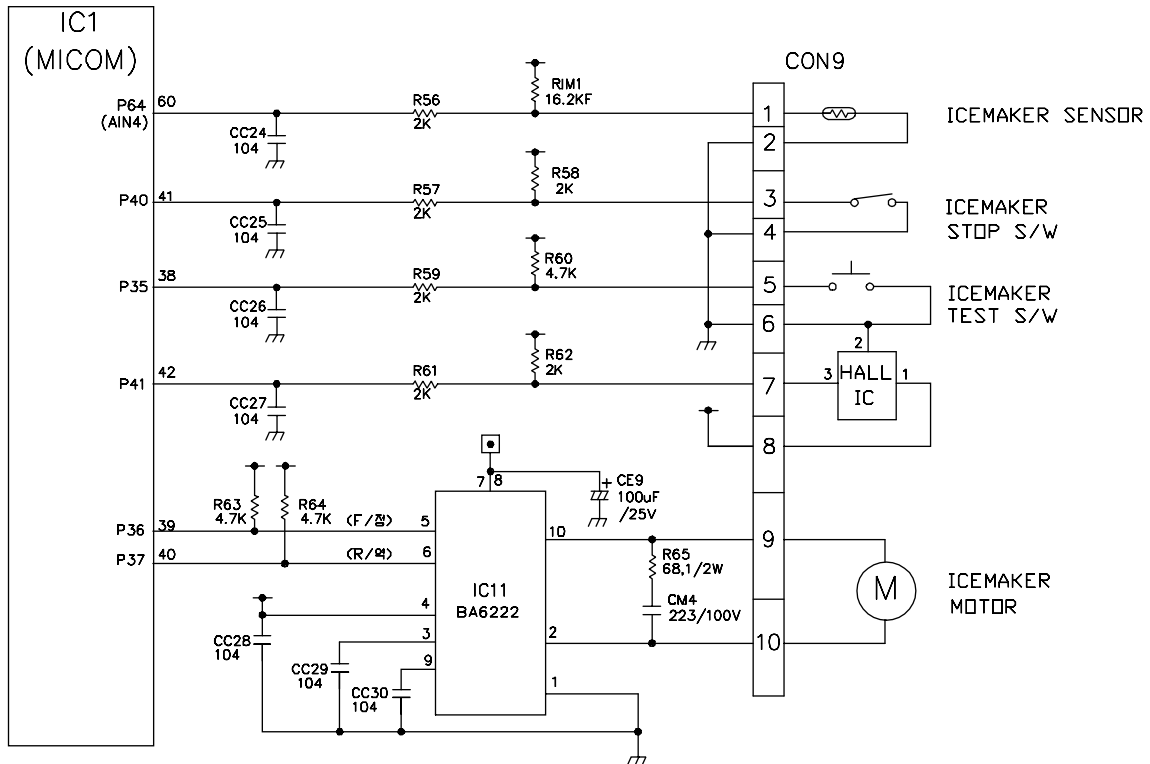

The above icemaker circuit is applied to the GR-P247/207, GR-L247/207 and consists of the icemaker unit part installed at the freezing room and the icemaker driving part of the main PWB.

Water supply to the icemaker container is done by opening the valve for the established water supply time by operating the container via a solenoid relay for the ice valve of the solenoid valve placed at the M/C room. If the water supply time is elapsed, water supply is automatically stop. This circuit is a circuit for implementing function such as ice removal, ice-full detection, horizontal balancing and sense of icemaking temperature for the icemaker container. Since icemaking temperature sense is same as in the temperature sense circuit part of the main PWB, refer to it.

Test switch input detection of the icemaker is same as in the door switch input detection circuit of the main PWB.

1. This function is used in operation test, service execution and cleaning etc and performed if pressing the test switch installed at the automatic icemaker itself for more than 0.5 second.
2. The test switch operates in the horizontal status and test function is not input in the water supply operation. Ice removal control and water supply control is not performed if full-ice is arrived during the operation of test function.
3. If pressing the test switch for 0.5 second or more in the horizontal status, ice removal operation is immediately performed irrespective of the generation conditions of ice at the icemaking tray. Therefore, care is required since water may overflow if operating test function in the water state that icemaking is not done. A cycle of water supply is performed in the horizontal balancing operation after ice removal operation. Therefore, you can check any problem of ice removal operation, horizontal operation and water supply. In this case, if test function is normally performed, **Ding~** buzzer sound rings and water supply control is performed. Thus, no ringing of **Ding~** buzzer sound means failure and repair check must be performed.
4. If water supply is completed, operation in the normal cycle of **icemaking** → **ice removal** → **returning to horizontal status** → **water supply**.

CIRCUIT


CIRCUIT DIAGRAM

BASIC

- HOME BAR PART(H/BAR HEATER,DOOR S/W),CAPACITOR PART, PLUG TYPE, COMPRESSOR EARTH PART, ON CIRCUIT DIAGRAMS ARE SUBJECT TO CHANGE IN DIFFERENT LOCALITES AND ACCORDANCE WITH MODEL TYPE.

- N : NEUTRAL

PWB ASSEMBLY, MAIN

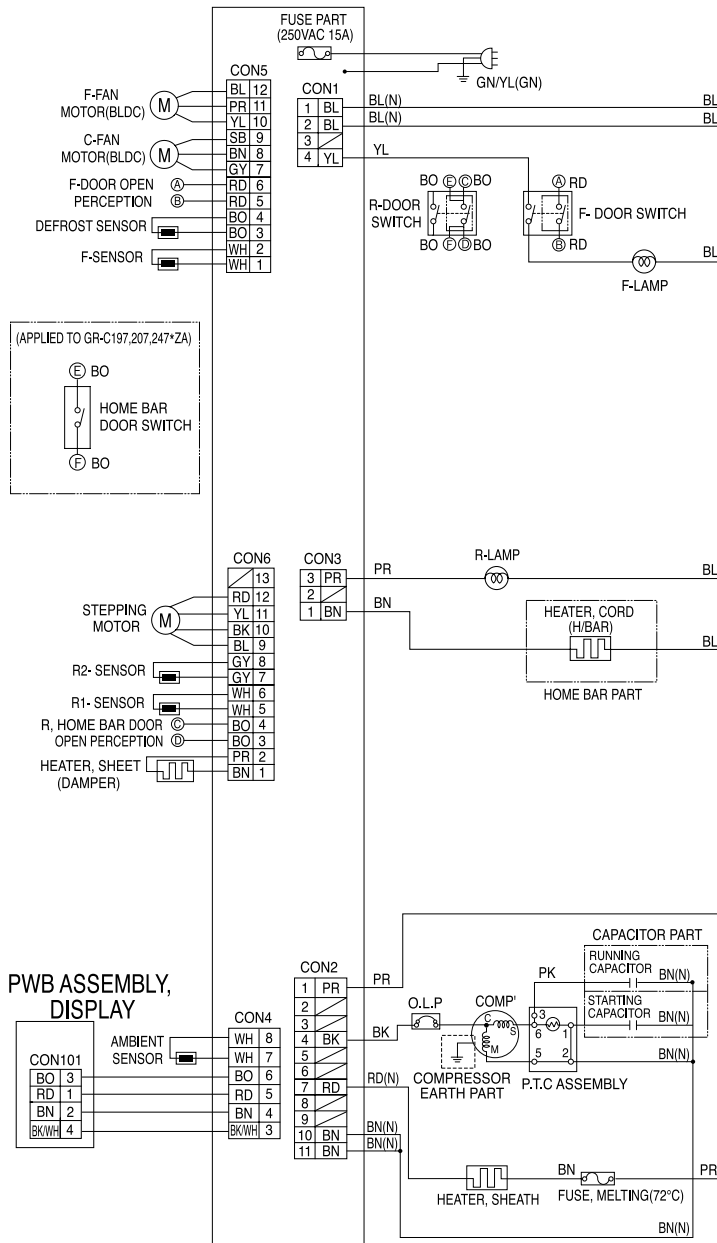

BK : BLACK	BN : BROWN	BO : BRIGHT ORANGE	GY : GRAY	RD : RED
YL : YELLOW	GN : GREEN	PR : PURPLE	WH : WHITE	WH/BK : WHITE/BLACK
SB : SKY BLUE	PK : PINK	GN/YN : GREEN/YELLOW	BL/WH : BLUE/WHITE	RD/WH : RED/WHITE

CIRCUIT

CIRCUIT DIAGRAM


DELUXE

- HOME BAR PART(H/BAR HEATER,DOOR S/W),CAPACITOR PART, PLUG TYPE, COMPRESSOR EARTH PART, PILOT VALVE ON CIRCUIT DIAGRAMS ARE SUBJECT TO CHANGE IN DIFFERENT LOCALITES AND ACCORDANCE WITH MODEL TYPE.

- N : NEUTRAL

PWB ASSEMBLY, MAIN

FUSE	
100~127V	220~240V
NO FUSE	250VAC 15A

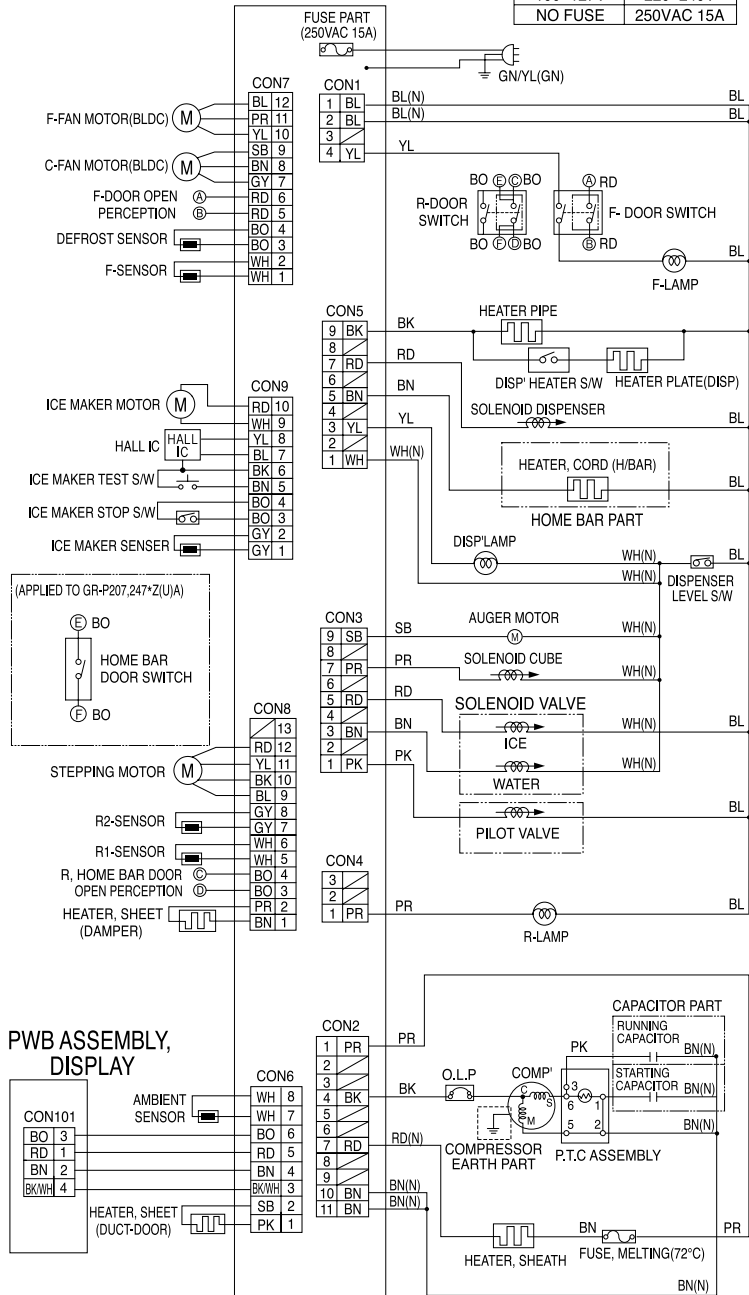

3854JD1066C

BK : BLACK BN : BROWN BO : BRIGHT ORANGE GY : GRAY RD : RED
 YL : YELLOW GN : GREEN PR : PURPLE WH : WHITE WH/BK : WHITE/BLACK
 SB : SKY BLUE PK : PINK GN/YN : GREEN/YELLOW BL/WH : BLUE/WHITE RD/WH : RED/WHITE

TROUBLE DIAGNOSIS

1. TROUBLE SHOOTING

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>1. Faulty start</p>	<p>1) No power on outlet. 2) No power on cord.</p> <ul style="list-style-type: none"> - Bad connection between adapter and outlet. (faulty adapter) <ul style="list-style-type: none"> - The Inner diameter of adapter. - The distance between holes. - The distance between terminals. - The thickness of terminal. - Bad connection between plug and adapter (faulty plug). <ul style="list-style-type: none"> - The distance between pins. - Pin outer diameter. <p>3) Shorted start circuit.</p> <ul style="list-style-type: none"> - No power on power cord. <ul style="list-style-type: none"> - Disconnected copper wire. <ul style="list-style-type: none"> - Power cord is disconnected. - Faulty soldering. - Internal electrical short. - Faulty terminal contact. <ul style="list-style-type: none"> - Loose contact. <ul style="list-style-type: none"> - Large distance between male terminal. - Thin female terminal. - Terminal disconnected. - Bad sleeve assembly. - Disconnected. <ul style="list-style-type: none"> - Weak connection. - Short inserted cord length. - Worn out tool blade. - O.L.P is off. <ul style="list-style-type: none"> - Capacity of O.L.P is small. - Characteristics of O.L.P is bad. - Bad connection. - Power is disconnected. <ul style="list-style-type: none"> - Inner Ni-Cr wire blows out. - Bad internal connection. - Faulty terminal caulking (Cu wire is cut). - Bad soldering. - No electric power on compressor. - Faulty compressor. - Faulty PTC. <ul style="list-style-type: none"> - Power does not conduct. - Damage. - Bad characteristics. - Initial resistance is big. - Bad connection with compressor. <ul style="list-style-type: none"> - Too loose. - Assembly is not possible. - Bad terminal connection. <p>4) During defrost.</p> <ul style="list-style-type: none"> - Start automatic defrost. - Cycle was set at defrost when the refrigerator was produced. 	<p>* Measuring instrument : Multi tester</p> <p>■ Check the voltage. If the voltage is within $\pm 85\%$ of the rated voltage, it is OK.</p> <p>■ Check the terminal movement.</p> <p>■ Check both terminals of power cord. Power conducts : OK. No power conducts : NG</p> <p>■ Check both terminals of OLP. If power conducts : OK. If not : NG.</p> <p>■ Check the resistance of both terminals. At normal temperature 6 : OK. If disconnected : ∞.</p>

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>2. No cooling.</p>	<p>2) Refrigeration system is clogged.</p> <ul style="list-style-type: none"> Moisture clogged. <ul style="list-style-type: none"> Residual moisture in the evaporator. <ul style="list-style-type: none"> Air Blowing. <ul style="list-style-type: none"> Not performed. Too short. Impossible moisture confirmation. Low air pressure. Leave it in the air. <ul style="list-style-type: none"> During rest time. After work. Caps are missed. Residual moisture. <ul style="list-style-type: none"> Not dried in the compressor. Elapsed more than 6 months after drying Caps are missed. No pressure when it is open. No electric power on thermostat. <ul style="list-style-type: none"> Insufficient drier capacity. <ul style="list-style-type: none"> Dry drier - Drier temperature. Leave it in the air. <ul style="list-style-type: none"> Check on package condition. Good storage after finishing. Residual moisture in pipes. <ul style="list-style-type: none"> Caps are missed. <ul style="list-style-type: none"> During transportation. During work. Air blowing. <ul style="list-style-type: none"> Not performed. Performed. <ul style="list-style-type: none"> Too short time. Low air pressure. Less dry air. Moisture penetration - Leave it in the air. - Moisture penetration into the refrigeration oil. Weld joint clogged. <ul style="list-style-type: none"> Short pipe insert. Pipe gaps. <ul style="list-style-type: none"> Too large. Damaged pipes. Too much solder. Drier cloggeing. <ul style="list-style-type: none"> The capillary tube inserted depth. - Too much. Capillary tube melts. - Over heat. Clogged with foreign materials. <ul style="list-style-type: none"> Desiccant powder. Weld oxides. Drier angle. Reduced cross section by cutting. - Squeezed. Foreign material clogging. <ul style="list-style-type: none"> Compressor cap is disconnected. Foreign materials are in the pipe. 	<ul style="list-style-type: none"> ■ Check the clogged evaporator by heating (as soon as the cracking sound begins, the evaporator start freezing) ■ The evaporator does not cool from the beginnig (no evidece of moisture attached). The evaporator is the same as before even heat is applied.

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>3. Refrigeration is weak.</p>	<p>1) Refrigerant Partly leaked. ┌ Weld joint leak. └ Parts leak.</p> <p>2) Poor defrosting capacity.</p> <p style="margin-left: 20px;">┌ Drain path (pipe) clogged. ┌ Inject P/U into drain hose. ┌ Inject through the hole. └ Seal with drain.</p> <p style="margin-left: 60px;">└ Foreign materials penetration. ┌ P/U lump input. └ Screw input. └ Other foreign materials input.</p> <p style="margin-left: 20px;">└ Cap drain is not disconnected.</p> <p style="margin-left: 20px;">┌ Defrost heater does not generate heat. ┌ Parts disconnected. ┌ Plate heater ┌ Wire is cut. └ Heating wire. └ Contact point between heating and electric wire. └ Dent by fin evaporator. └ Poor terminal contacts.</p> <p style="margin-left: 60px;">└ Cord heater ┌ Wire is cut. └ Lead wire. └ Heating wire. └ Contact point between heating and electric wire. └ Heating wire is corroded └ Water penetration. └ Bad terminal connection.</p>	<p>■ Check visually.</p> <p>■ Check terminal Conduction: OK. No conduction: NG. If wire is not cut, refer to resistance. P=Power V=Voltage R=Resistance</p> $P = \frac{V^2}{R}$ $R = \frac{V^2}{P}$

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>3. Refrigeration is weak.</p>	<ul style="list-style-type: none"> Residual frost. <ul style="list-style-type: none"> Weak heat from heater. <ul style="list-style-type: none"> Sheath Heater - rated. Heater plate - rated. Heater cord-L - rated. Bad heater assembly. <ul style="list-style-type: none"> Heater plate <ul style="list-style-type: none"> No contact to drain. Loosened stopper cord. Heater cord-L <ul style="list-style-type: none"> Not contact to the evaporator pipe. Location of assembly (top and middle). Too short defrosting time. <ul style="list-style-type: none"> Defrost Sensor. <ul style="list-style-type: none"> - Faulty characteristics. Seat-D(missing, location, thickness). Structural fault. <ul style="list-style-type: none"> Gasket gap. Air inflow through the fan motor. Bad insulation of case door. No automatic defrosting. Defrost does not return. <p>3) Cooling air leak.</p> <ul style="list-style-type: none"> Bad gasket adhesion <ul style="list-style-type: none"> Gap. Bad attachment. Contraction. Door sag. <ul style="list-style-type: none"> Bad adhesion. Weak binding force at hinge. <p>4) No cooling air circulation.</p> <ul style="list-style-type: none"> Faulty fan motor. <ul style="list-style-type: none"> Fan motor. <ul style="list-style-type: none"> Self locked. Wire is cut. Bad terminal contact. Door switch. <ul style="list-style-type: none"> Faults. <ul style="list-style-type: none"> Contact distance. Button pressure. Melted contact. Contact. Refrigerator and freezer switch reversed. Button is not pressed. <ul style="list-style-type: none"> Poor door attachment. Door liner (dimension). Contraction inner liner. Misalignment. Bad terminal connection. P/U liquid leak. 	<p>■ Check the fan motor conduction: OK. No conduction: NG.</p>

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>3. Refrigeration is weak.</p>	<p>4) No cooling air circulation.</p> <ul style="list-style-type: none"> - Faulty fan motor. — Fan is constrained. <ul style="list-style-type: none"> - Fan shroud contact. - Clearance. - Damping evaporator contact. - Accumulated residual frost. - Small cooling air discharge. <ul style="list-style-type: none"> - Insufficient motor RPM <ul style="list-style-type: none"> - Fan overload. - Fan misuse. - Bad low temperature RPM characteristics. - Rated power misuse. - Low voltage. - Faulty fan. <ul style="list-style-type: none"> - Fan misuse. - Bad shape. - Loose connection. - Not tightly connected. - Insert depth. - Shroud. — Bent. - Ice and foreign materials on rotating parts. <p>5) Compressor capacity. <ul style="list-style-type: none"> - Rating misuse. - Small capacity. - Low voltage. </p> <p>6) Refrigerant too much or too little. <ul style="list-style-type: none"> - Malfunction of charging cylinder. - Wrong setting of refrigerant. - Insufficient compressor. - Faulty compressor. </p> <p>7) Continuous operation <ul style="list-style-type: none"> - No contact of temperature controller. - Foreign materials. </p> <p>8) Damper opens continuously. <ul style="list-style-type: none"> - Foreign materials jammed. <ul style="list-style-type: none"> - P/U liquid dump. - EPS water sediment. - Screw. - Failed sensor. - Position of sensor. - Characteristics of damper. <ul style="list-style-type: none"> - Bad characteristics of its own temperature. - Parts misuse. - Change of temperature - Impact characteristics. </p> <p>9) Food storing place. - Near the outlet of cooling air.</p>	<p>■ Check visually after disassembly.</p> <p>■ Check visually after disassembly.</p>

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>4. Warm refrigerator compartment temperature.</p> <p>5. No automatic operation. (faulty contacts.)</p>	<p>1) Colgged cooling path. <ul style="list-style-type: none"> └ P/U liquid leak. └ Foreign materials. — P/U dump liquid. </p> <p>2) Food storate. <ul style="list-style-type: none"> └ Store hot food. └ Store too much at once. └ Door open. └ Packages block air flow. </p> <p>1) Faulty temperature sensor in freezer or refrigerator compartment. <ul style="list-style-type: none"> └ Faulty contact. └ Faulty temperature characteristics. </p> <p>2) Refrigeration load is too much. <ul style="list-style-type: none"> └ Food. <ul style="list-style-type: none"> └ Too much food. └ Hot food. └ Frequent opening and closing. └ Cool air leak. └ Poor door close. — Partly opens. </p> <p>3) Poor insulation.</p> <p>4) Bad radiation. <ul style="list-style-type: none"> └ High ambient temperature. └ Space is secluded. </p> <p>5) Refrigerant leak.</p> <p>6) Inadequate of refrigerant.</p> <p>7) Weak compressor discharging power. <ul style="list-style-type: none"> └ Different rating. └ Small capacity. </p> <p>8) Fan does not work.</p> <p>9) Button is positioned at strong.</p>	<p>■ Inspect parts measurements and check visually.</p>
<p>6. Condensation and ice formation.</p>	<p>1) Ice in freezer compartment. <ul style="list-style-type: none"> └ External air inflow. — Bushing installed incorrectly. └ Door opens but not closes. <ul style="list-style-type: none"> └ Weak door closing power. └ Stopper malfunction. └ Door sag. └ Food hinders door closing. └ Gap around gasket. — Contraction, distortion, loose, door twisted, corner not fully inserted. └ Food vapor. — Storing hot food. — Unsealed food. </p> <p>2) Condensation in the refrigerator compartment. <ul style="list-style-type: none"> └ Door opens but not closes. <ul style="list-style-type: none"> └ Insufficient closing. └ Door sag. └ Food hinders door closing. └ Gasket gap. </p> <p>3) Condensation on liner foam. <ul style="list-style-type: none"> └ Cool air leak and transmitted. <ul style="list-style-type: none"> └ Not fully filled. <ul style="list-style-type: none"> └ Toop table part. └ Out plate R/L part. └ Flange gap. — Not sealed. └ Gasket gap. </p>	

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>6. Condensation and ice formation.</p>	<p>4) Condensation on door.</p> <ul style="list-style-type: none"> Condensation on the duct door. - Duct door heater is cut. Condensation on the dispense recess. <ul style="list-style-type: none"> Recess Heater is cut. Duct door is open. / Foreign material clogging. Condensation on the door surface. <ul style="list-style-type: none"> Not fully filled. <ul style="list-style-type: none"> Surface. Corner. P/U liquid contraction. <ul style="list-style-type: none"> Liquid shortage. Liquid leak. Condensation on the gasket surface. <ul style="list-style-type: none"> Bad wing adhesion. <ul style="list-style-type: none"> Wing sag(lower part). Door liner shape mismatch. Corner. <ul style="list-style-type: none"> Too much notch. Broken. Home Bar heater is cut. <p>5) Water on the floor.</p> <ul style="list-style-type: none"> Condensation in the refrigerator compartment. Defrosted water overflows. — Clogged discharging hose. Discharging hose — Evaporation tray located at wrong place. location. Tray drip. <ul style="list-style-type: none"> Damaged. Breaks, holes. Small Capacity. Position of drain. 	
<p>7. Sounds</p>	<p>1) Compressor compartment operating sounds.</p> <ul style="list-style-type: none"> Compressor sound inserted. <ul style="list-style-type: none"> Sound from machine itself. Sound from vibration. <ul style="list-style-type: none"> Restrainer. Bushing seat. <ul style="list-style-type: none"> Too hard. Distorted. Aged. Burnt. Stopper. — Bad Stopper assembly. <ul style="list-style-type: none"> Not fit (inner diameter of stopper). Tilted. Not Compressor base not connected. Bad welding compressor stand fallen. Foreign materials in the compressor compartment. OLP sound. — Chattering sound. Capacitor noise. — Insulation paper vibration. Pipe sound. <ul style="list-style-type: none"> Pipe contacts each other. – Narrow interval. No vibration damper. <ul style="list-style-type: none"> Damping Bushing-Q. Damping Bushing-S. Capillary tube unattached. 	

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
7. Sounds	<p>1) Compressor compartment operating sounds.</p> <ul style="list-style-type: none"> Transformer sound. <ul style="list-style-type: none"> Its own fault. — Core gap. Bad connection. — Correct screw connection. Drip tray vibration sound. <ul style="list-style-type: none"> Bad assembly. Distortion. Foreign materials inside. Back cover machine sound. <ul style="list-style-type: none"> Bad connection. Partly damaged. Condenser drain sound. <ul style="list-style-type: none"> Not connected. Bad pipe caulking. <p>2) Freezer compartment sounds.</p> <ul style="list-style-type: none"> Fan motor sound. <ul style="list-style-type: none"> Normal operating sound. Vibration sound. <ul style="list-style-type: none"> Aged bushing seat. Bad torque for assembling motor bracket. Sounds from fan contact. <ul style="list-style-type: none"> Fan guide contact. Shroud burr contact. Damping evaporator contact. Residual frost contact. <ul style="list-style-type: none"> Damaged heater cord. Narrow evaporator interval. Unbalance fan sounds. <ul style="list-style-type: none"> Unbalance. <ul style="list-style-type: none"> Surface machining conditions. Fan distortion. Misshappen. Burr. Ice on the fan. — Air intake (opposite to motor bushing assembly.) Motor shaft contact sounds. <ul style="list-style-type: none"> Supporter disorted. Tilted during motor assembly. Resonance. Evaporator noise. <ul style="list-style-type: none"> Evaporator pipe contact. — No damping evaporator. Sound from refrigerant. — Stainless steel pipe shape in accumulator. Sound from fin evaporator and pipe during expansion and contraction. <p>3) Bowls and bottles make contact on top shelf.</p> <p>4) Refrigerator roof contact.</p> <p>5) Refrigerator side contact.</p> <p>6) Insufficient lubricants on door hinge.</p>	

TROUBLE DIAGNOSIS

CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>8. Faulty lamp (freezer and refrigerator compartment).</p>	<p>1) Lamp problem. — Filament blows out. — Glass is broken.</p> <p>2) Bad lamp assembly. — Not inserted. — Loosened by vibration.</p> <p>3) Bad lamp socket.</p> <ul style="list-style-type: none"> — Disconnection. — Bad soldering. — Bad rivet contact. — Short. — Water penetration. — Low water level in tray. — Bad elasticity of contact. — Bad contact corrosion. <p>4) Door switch. — Defective. — Refrigerator and freezer switches are reversed. — Travel distance. — Bad connection. — Bad terminal contact. — P/U liquid leak.</p>	
<p>9. Faulty internal voltage short.</p>	<p>1) Lead wire is damaged.</p> <ul style="list-style-type: none"> — Wire damage when assembling PTC Cover. — Outlet burr in the bottom plate. — Pressed by cord heater, lead wire, evaporator pipe. <p>2) Exposed terminal.</p> <ul style="list-style-type: none"> — Compressor Compartment terminal. - Touching other components. — Freezer compartment terminal. - Touching evaporator pipe. <p>3) Faulty parts.</p> <ul style="list-style-type: none"> — Transformer. — Coil contacts cover. — Welded terminal parts contact cover. — Compressor. — Bad coil insulation. — Plate heater. — Melting fuse. — Sealing is broken. — Moisture penetration. — Cord heater. — Pipe damaged. — Moisture penetration. — Bad sealing. — Sheath heater. 	<p>■ Connect conduction and non-conduction parts and check with tester. Conduction: NG. Resistance∞: OK.</p>

TROUBLE DIAGNOSIS


CLAIMS.	CAUSES AND CHECK POINTS.	HOW TO CHECK
<p>10. Structure, appearance and others.</p>	<p>1) Door foam.</p> <ul style="list-style-type: none"> Sag. <ul style="list-style-type: none"> Hinge loose <ul style="list-style-type: none"> Bolt is loosened during transportation. Not tightly fastened. Screw worn out . Weak gasket adhesion. <ul style="list-style-type: none"> Adhesion surface. Fixed tape. <ul style="list-style-type: none"> Not well fixed. Noise during operation. <ul style="list-style-type: none"> Hinge interference. <ul style="list-style-type: none"> Bigger door foam. Hinge-Pin tilted-Poor flatness. No washer. No grease. Malfunction. <ul style="list-style-type: none"> Not closed Interference between door liner and inner liner. Refrigerator compartment is opened when freezer compartment is closed (faulty stopper). <ul style="list-style-type: none"> Stopper worn out. Bad freezer compartment door assembly. No stopper. <p>2) Odor.</p> <ul style="list-style-type: none"> Temperature of refrigerator compartment. <ul style="list-style-type: none"> High. <ul style="list-style-type: none"> Faulty damper control. Button is set at weak. Door is open (interference by food). Deodorizer. <ul style="list-style-type: none"> No deodorizer. Poor capacity. Food Storage. <ul style="list-style-type: none"> Seal condition. Store special odorous food. Long term storage. Others. <ul style="list-style-type: none"> Odors from chemical products. 	

2. Faults

2-1. Power

Problems	Causes	Checks	Measures	Remarks
No power on outlet.	<ul style="list-style-type: none"> - Power cord cut. - Faulty connector insertion. - Faulty connection between plug and adapter. 	<ul style="list-style-type: none"> - Check the voltage with tester. - Check visually. - Check visually. 	<ul style="list-style-type: none"> - Replace the components. - Reconnect the connecting parts. - Reconnect the connecting parts. 	
Fuse blows out.	<ul style="list-style-type: none"> - Short circuit by wrong connection. - Low voltage products are connected to high voltage. - Short circuit by insects. - Electricity leakage. - High voltage. - Short circuit of components (tracking due to moisture and dust penetration). 	<ul style="list-style-type: none"> - Check the fuse with tester or visually. - Check the input volt are with tester (between power cord and products). - Check the resistance of power cord with testerf (if it is 0Ω, it is shorted). 	<ul style="list-style-type: none"> - Find and remove the cause of problem(ex. short, high voltage, low voltage). - Replace with rated fuse. 	<ul style="list-style-type: none"> - Replace with rated fuse after confirming its specification. ■ If fuse blowns out frequently, confirm the cause and prevent.

2-2. Compressor

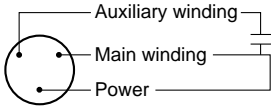Problems	Causes	Checks	Measures	Remarks
Compressor does not operate.	- Faulty PTC.	- Check the resistance. Vlaue:∞ is defective.	<ul style="list-style-type: none"> - If resistance is infinite, replace it with new one. - If it is not infinite, it is normal. - Check other parts. 	
	- Compressor is frozen.	<p>- If compressor assembly parts are normal(capacitor, PTC, OLP), apply power directly to the compressor to force operation.</p>  <p>OLP It starts as soon as it is contacted.</p>	<ul style="list-style-type: none"> - During forced operation: <ul style="list-style-type: none"> - Operates: Check other parts. - Not operate: Replace the frozen compressor with new one, weld, evacuate, and recharge refrigerant. • Refer to weld repair procedures. 	

2-3. Temperature

Problems	Causes	Checks	Measures	Remarks
High temperature in the freezer compartment.	Poor cool air circulation due to faulty fan motor.	<ul style="list-style-type: none"> - Lock — Check resistance with a tester. 0Ω: short. ∞Ω: cut. - Rotate rotor manually and check rotation. - Wire is cut. - Bad terminal contact: Check terminal visually. - Fan constraint. – Fan shroud contact: Confirm visually. – Fan icing: Confirm visually. 	<ul style="list-style-type: none"> - Replace fan motor. - Reconnect and reinsert. - Maintain clearance and remove ice (Repair and/or replace shroud if fan is constrained by shroud deformation). 	
	Faulty fan motor due to faulty door switch operation.	<ul style="list-style-type: none"> - Iced button (faulty) operation: Press button to check - Faulty button pressure and contact: Press button to check operation. - Door cannot press door switch button: Check visually. 	<ul style="list-style-type: none"> - Confirm icing causes and repair. - Replace door switch. - Door sag: fix door. - Door liner bent:replace door or attach sheets. 	
	Bad radiation conditions in compressor compartment.	<ul style="list-style-type: none"> - Check the clearance between the refrigerator and wall (50 mm in minimum). - Check dust on the grill in compressor compartment. - Check dust on the coils condenser. 	<ul style="list-style-type: none"> - Keep clearance between refrigerator and walls (minimum 50mm). - Remove dust and contaminants from grill for easy heat radiation. - Remove the dust with vacuum cleaner from the coils condenser while the refrigerator is off. 	- The fan may be broken if cleaning performs while the refrigerator is on.

2-4. Cooling

Problems	Causes	Checks	Measures	Remarks
High temperature in the freezer compartment.	Refrigerant leak.	<p><u>Check sequence</u></p> <ol style="list-style-type: none"> 1. Check the welded parts of the drier inlet and outlet and drier auxiliary in the compressor compartment (high pressure side). 2. Check the end of compressor sealing pipe (low pressure side). 3. Check silver soldered parts. (Cu + Fe / Fe + Fe). 4. Check bending area of wire condenser pipe in compressor compartment (cracks can happen during bending). 5. Check other parts (compressor compartment and evaporators in freezer compartment). 	Weld the leaking part, recharge the refrigerant.	Drier must be replaced.
	Shortage of refrigerant.	<p>Check frost formation on the surface of evaporator in the freezer compartment.</p> <ul style="list-style-type: none"> - If the frost forms evenly on the surface, it is OK. - If it does not, it is not good. 	<ul style="list-style-type: none"> - Find out the leaking area, repair, evacuate, and recharge the refrigerant. - No leaking, remove the remaining refrigerant, and recharge new refrigerant. 	Drier must be replaced.

Problems	Causes	Checks	Measures	Remarks
High temperature in the freezer compartment.	Cycle pipe is clogged.	<p>Check sequence.</p> <p>1. Check temperature of condenser manually. If it is warm, it is OK. If it is not, compressor discharging joints might be clogged.</p> <p>2. Manually check whether hot line pipe is warm. If it is warm, it's OK. If it is not, condenser outlet weld joints might be colgged.</p>	<p>- Heat up compressor discharging weld joints with touch, disconnect the pipes, and check the clogging. Remove the causes of clogging, weld, evacuate, and recharge the refrigerant.</p> <p>- If it's warm, it's OK. If it's not, condenser discharging line weld joints might be clogged. Disconnect with torch, remove the causes, evacuate, and recharge seal refrigerant.</p>	Drier must be replaced.
	Leak at loop pipe weld joint (discharge) in compressor.	<p>Check sequence.</p> <p>1. Manually check whether condenser is warm, It is not warm and the frost forms partly on the evaporator in the freezer compartment.</p>	Replace the compressor, weld, evacuate, and recharge refrigerant.	Drier must be replaced.
	Faulty cooling fan in the compressor compartment.	<p>Check sequence.</p> <p>1. Check cooling fan operation.</p> <p>2. Check that cooling fan is disconnected from the motor.</p>	<p>- Replace if motor does not operate.</p> <p>- If fan is disconnected, check fan damage and reassemble it.</p> <p>■ Refer to fan motor disassembly and assembly sequence.</p>	

2-5. Defrosting failure

Problems	Causes	Checks	Measures	Remarks
No defrosting.	<p>Heater does not generate heat as the heating wire is cut or the circuit is shorted.</p> <p>1) Heating wire is damaged when inserting into the evaporator.</p> <p>2) Lead wire of heater is cut.</p> <p>3) Heating wire at lead wire contacts is cut.</p>	<p>1. Check the resistance of heater. 0Ω: Short. ∞Ω: Cut. Tens to thousands Ω: OK.</p> <p>2. Check the resistance between housing terminal and heater surface. 0Ω: Short. ∞Ω: Cut. Tens to thousands Ω: Short.</p>	<p>Heating wire is short and wire is cut.</p> <ul style="list-style-type: none"> Parts replacement: Refer to parts explanations. 	<p>Seal the lead wire with insulation tape and heat contraction tube if the cut lead wire is accessible to repair.</p>
	<p>Sucking duct and discharging hole are clogged:</p> <p>1. Impurities.</p> <p>2. Ice.</p>	<p>1. Confirm foreign materials. In case of ice, insert the copper line through the hole to check.</p> <p>2. Put hot water into the drain (check drains outside).</p>	<p>1) Push out impurities by inserting copper wire.(Turn off more than 3hours and pour in hot water if frost is severe.)</p> <p>2) Put in hot water to melt down frost.</p> <p>3) Check the water outlet.</p> <p>4) Push the heater plate to sucking duct manually and assemble the disconnected parts.</p>	
	<p>Gap between Suction duct and Heater plate Ice in the gap.</p>	<p>1. Confirm in the Suction duct.</p>	<p>1) Turn off the power, confirm impurities and ice in the gap, and supply hot water until the ice in the gap melts down.</p> <p>2) Push the Heater plate to drain bottom with hand and assemble the disconnected parts.</p>	
	<p>Wrong heater rating (or wrong assembly).</p>	<p>1. Check heater label.</p> <p>2. Confirm the capacity after substituting the resistance value into the formula.</p> $P = \frac{V^2}{R}$ <p>(V: Rated voltage of user country) (R: Resistance of tester[Ω])</p> <p>Compare P and level capacity. Tolerance: ±7%</p>	<p>Faults:replace.</p> <p>- How to replace: Refer to main parts.</p>	

Problems	Causes	Checks	Measures	Remarks
No defrosting	Melting fuse blows. 1) Lead wire is cut. 2) Bad soldering.	- Check melting fuse with tester. - If 0Ω : OK. If $\infty\Omega$: wire is cut.	Faulty parts: parts replacement. - Check wire color when measuring resistance with a tester.	
	Ice in the Suction duct. 1) Icing by foreign materials in the duct. 2) Icing by cool air inflow through the gap of heater plate. 3) Icing by the gap of heater plate.	1. Check the inner duct with mirror. 2. Check by inserting soft copper wire into the duct (soft and thin copper not to impair heating wire).	1) Turn power off. 2) Raise the front side(door side), support the front side legs, and let the ice melt naturally. (If power is on, melt the frost by forced defrosting.) 3) Reassemble the heater plate.	
	Bad cool air inflow and discharge, and bad defrosting due to faulty contact and insertion (bad connector insertion into housing of heater, melting, fuse and motor fan).	1. Turn on power, open or close the door, check that motor fan operates (If it operates, motor fan is OK). 2. Disconnect parts in the refrigerator compartment, check the connection around the housing visually, defrost, and confirm heat generation on the heater. Do not put hands on the sheath heater. 3. Check the parts which have faults described in 1, 2 (mechanical model: disconnect thermostat from the assembly).	1) Check the faulty connector of housing and reassemble wrongly assembled parts. 2) If the parts are damaged, remove the parts and replace it with a new one.	

2-6. Icing

Problems	Causes	Checks	Measures	Remarks
Icing in the refrigerator compartment. - Damper icing. - Pipe icing. - Discharging pipe icing.	1) Bad circulation of cool air. - Clogged intake port in the refrigerator compartment. - Sealing is not good. - Too much food is stored and clogs the discharge port. - Bad defrosting.	- Check the food is stored properly (check discharge and intake port are clogged). - Check icing on the surface of baffle and cool air path (pipe) after disassembling the container box. - Check icing at intake ports of freezer and refrigerator compartment.	- Be acquainted with how to use. - Sealing on connecting parts. - Check the damper and replace it if it has defects. - Check defrost. (After forced defrosting, check ice in the evaporator and pipes.)	- Check the defrost related parts if problem is caused by faulty defrosting.
	2) Faulty door or refrigerator compartment. - Faulty gasket. - Faulty assembly.	- Check gasket attached conditions. - Check door assembly conditions.	- Correct the gasket attachment conditions and replace it. - Door assembly and replacement.	- Replacement should be done when it cannot be repaired.
	3) Overcooling in the refrigerator compartment. - Faulty damper in the refrigerator compartment. - Faulty MICOM (faulty sensor)	- Check refrigerator compartment is overcooled (when button pressed on weak). - Check parts are faulty.	- Replace faulty parts.	
	4) Bad defrosting - Heater wire is cut. - Defective defrost sensor. - Defrosting cycle.	- Check frost on the evaporator after disassembling shroud and fan grille. - Check ice on intake port of freezer and refrigerator compartment.	- Check parts related to defrosting. - Check defrosting. (Check ice on the evaporator and pipe.)	- Moisture does not Freeze on the evaporator but can be sucked into the refrigerator, where it condenses and freezes. This interferes with cold air circulation and sublimation of the ice.
	5) Customers are not familiar with this machine. - Door opens. - High temperature, high moisture, and high load.	- Check food interferes with door closing. - Check ice on the ceilings.	- Be acquainted with how to use.	

Problems	Causes	Checks	Measures	Remarks
Ice in the freezer compartment. - Surface of fan grille. - Wall of freezer compartment. - Cool air discharging port. - Basket(rack) area. - Food surface. - Icing in the shute.	1) Bad cooling air circulation. - Intake port is clogged in the freezer compartment. - Discharging port is Clogged. - Too much food is stored. - Bad defrosting.	- Check food storage conditions visually.(Check clogging at intake and discharging port of cooling air.) - Check food occupation ratio in volume(Less than 75%). - Check frost on the evaporator after dissembling shroud and fan grille. - Check icing at intake port of refrigerator compartment.	- Be acquainted with how to use. - Check defrost (Check ice on the evaporator and pipes after forced defrosting).	- Check the parts related to defrosting if the problem is caused by the faulty defrosting.
	2) Bad freezer compartment door - Faulty gasket - Faulty assembly	- Check gasket attachment conditions. - Check door assembly conditions.	- Correct the gasket attachment conditions and replace it. - Door assembly and replacement.	- Replace when it can not be repaired.
	3) Over freezing in the freezer compartment. - Faulty MICOM.	- Refrigerator operates pull down. (Check if it is operated intermittently) - The Temperature of freezer compartment is satisfactory, but over freezing happens in the refrigerator compartment even though the notch is set at weak .	-Replace defective parts.	
	4) Bad defrosting. - Heater wire is cut. - Faulty defrost sensor. - Defrosting cycle	- Check frost on the evaporator after dissembling shroud and grille. - Check ice on the intake port in the refrigerator compartment.	- Check parts related to defrosting. - Check defrosting. Check ice on the evaporator and pipes after forced defrosting.	
	5) User is not familiar with how to use. - Door opens. - High moisture food water is stored.	- Check food holds door open. - Check ice on the ice tray.	- Be acquainted with how to use.	

2-7. Sound

Problems	Causes	Checks	Measures	Remarks
Hiss sound	1. Loud sound of compressor operation.	1.1 Check the level of the refrigerator. 1.2 Check the bushing seat conditions (sagging and aging).	1) Maintain horizontal level. 2) Replace bushing and seat if they are sagged and aged. 3) Touch the piping at various place along its route. Install a damper at the point where your touch reduces the noise. 4) Avoid pipe interference. 5) Replace defective fan and fan motor. 6) Adjust fan to be in the center of the fan guide. 7) Leave a clearance between interfering parts and seal gaps in the structures. 8) Reassemble the parts which make sound. 9) Leave a clearance if evaporator pipes and suction pipe touch freezer shroud.	
	2. Pipes resonate sound which is connected to the compressor.	2.1 Check the level of pipes connected to the compressor and their interference. 2.2 Check bushing inserting conditions in pipes. 2.3 Touch pipes with hands or screw-driver (check the change of sound).		
	3. Fan operation sound in the freezer compartment.	3.1 Check fan insertion depth and blade damage. 3.2 Check the interference with structures. 3.3 Check fan motor. 3.4 Check fan motor bushing insertion and aging conditions.		
	4. Fan operation sound in the compressor compartment.	4.1 Same as fan confirmation in the refrigerator. 4.2 Check drip tray leg insertion. 4.3 Check the screw fastening conditions at condenser and drip tray.		

Problems	Causes	Checks	Measures	Remarks
Vibration sound. Cluck	1. Vibration of shelves and foods in the refrigerator. 2. Pipes interference and capillary tube touching in the compressor compartment. 3. Compressor stopper vibration. 4. Moving wheel vibration. 5. Other structure and parts vibration.	1-1. Remove and replace the shelves in the refrigerator 1-2. Check light food and container on the shelves. 2-1. Touch pipes in the compressor compartment with hands. 2-2 Check capillary tube touches cover back. 3-1 Check compressor stopper vibration. 4-1 Check vibration of front and rear moving wheels. 5-1 Touch other structures and parts.	1) Reassemble the vibrating parts and insert foam or cushion where vibration is severe. 2) Leave a clearance where parts interfere with each other. 3) Reduce vibration with bushing and restrainer if it is severe. (especially, compressor and pipe). 4) Replace compressor stopper if it vibrates severely.	
Irregular sound. Click.	1. It is caused by heat expansion and contraction of evaporator, shelves, and pipes in the refrigerator.	1-1 Check time and place of sound sources.	1) Explain the principles of refrigeration and that the temperature difference between operation and defrosting can make sounds. 2) If evaporator pipe contacts with other structures, leave a clearance between them (freezer shroud or inner case).	

Problems	Causes	Checks	Measures	Remarks
Sound Popping (almost the same as animals crying sound).	It happens when refrigerant expands at the end of capillary tube.	<ul style="list-style-type: none"> - Check the sound of refrigerant at the initial installation. - Check the sound when the refrigerator starts operation after forced defrosting. - Check the restrainer attachment conditions on the evaporator and capillary tube weld joints. 	<ul style="list-style-type: none"> - Check the restrainer attached on the evaporator and capillary tube weld joints and attach another restrainer. - If it is continuous and severe, insert capillary tube again (depth 15±3mm) - Fasten the capillary tube to suction pipes or detach in the compressor compartment. - Explain the principles of freezing cycles. 	
Water boiling or flowing sound.	It happens when refrigerant passes orifice in accumulator internal pipes by the pressure difference between condenser and evaporator.	<ul style="list-style-type: none"> - Check the sound when compressor is turned on. - Check the sound when compressor is turned off. 	<ul style="list-style-type: none"> - Explain the principles of freezing cycles and refrigerant flowing phenomenon by internal pressure difference. - If sound is severe, wrap the accumulator with foam and restrainer. 	
Sound of whistle when door closes.	When door closes, the internal pressure of the refrigerator decreases sharply below atmosphere and sucks air into the refrigerator, making the whistle sound.	<ul style="list-style-type: none"> - Check the sound by opening and closing the refrigerator or freezer doors. 	<ul style="list-style-type: none"> - Broaden the cap of discharge hose for defrosting in the compressor compartment. - Seal the gap with sealant between out and inner cases of hinge in door. 	

2-8. Odor

Problems	Causes	Checks	Measures	Remarks
Food Odor.	Food (garlic, kimchi, etc)	<ul style="list-style-type: none"> - Check the food is not wrapped. - Check the shelves or inner wall are stained with food juice. - Check the food in the vinyl wraps. - Check food cleanliness. 	<ul style="list-style-type: none"> - Dry the deodorizer in a sunny place with adequate ventilation. - Store the food in the closed container instead of vinyl wraps. - Clean the refrigerator and set button at strong. 	
Plastic Odor.	Odors of mixed food and plastic odors.	<ul style="list-style-type: none"> - Check wet food is wrapped with plastic bowl and bag. - It happens in the new refrigerator. 	<ul style="list-style-type: none"> - Clean the refrigerator. - Persuade customers not to use plastic bag or wraps with wet food or odorous foods. 	
Odor from the deodorizer.	Odor from the old deodorizer.	<ul style="list-style-type: none"> - Check the deodorizer odors. 	<ul style="list-style-type: none"> - Dry the deodorizer with dryer and then in the shiny and windy place. - Remove and replace the deodorants. 	*Deodorizer : option

2-9. Micom

Problems	Symptom	Causes		Checks	Measures	Remarks
Bad PCB electric power.	All display LCD are off.	Bad connection between Main PCB and display circuit.	Bad connector connection from main PCB to display PCB.	Visual check on connector connection.	Reconnect connector.	
		Defective PCB transformer.	PCB transformer winding is cut.	Check resistance of PCB transformer input and output terminals with a tester. (If resistance is infinity, trans winding is cut).	Replace PCB transformer or PCB.	Applicable to model without dispenser.
	PCB transformer temperature fuse is burnt out.					
	Defective PCB electric circuit parts.	Defective regulator IC (7812, 7805).	Check voltage at input/output terminals.	Replace regulator.	Refer to electric circuit in circuit explanation.	
		PCB electric terminal fuse is burnt out.	Check fuse in PCB electric terminal with a tester.	Replace PCB fuse.		
		STR Parts are damaged.	Check if STR No. 2 and 3 pins are cut when power is off.	Replace parts.	Applicable to model with dispenser.	
		Bad connection between Main PCB and display circuit.	Lead Wire connecting main PCB and display PCB is cut or connector terminal connection is bad.	Check Lead Wire terminals connecting Main PCB and display PCB with a tester.	Reconnect Lead Wire and directly connect defective contact terminal to Lead Wire.	
		Defective LCD.	Defective LCD.	Check if all LCD are on when Main PCB Test switch is pressed (or when both freezer key and power freezer key are pressed at the same time for more than one second.)	Replace display PCB.	Refer to display circuit in circuit explanation.

Problems	Symptom	Causes		Checks	Measures	Remarks
Bad cooling.	Freezer temperature is high.	Compressor does not start.	Compressor Lead Wire is cut.	Check compressor Lead Wire with a tester.	Reconnect Lead Wire.	
			Defective compressor driving relay.	Measure voltage at PCB CON2 (3&9) after pressing main PCB test switch once. It is OK if voltage is normal.	Replace relay RY1 and RY2 or PCB.	Refer to load driving circuit in circuit explanation.
		Defective freezer sensor.	Defective Freezer sensor parts.	Check resistance of freezer sensor with a tester.	Replace freezer sensor.	Refer to resistance characteristics table of sensor in circuit
			Freezer sensor is substituted for other sensor.	Confirm the color of sensor in circuits (main PCB sensor housing).	Repair main PCB sensor housing	explanation.
		Defective freezer fan motor.	Fan motor lead wire is cut.	Check fan motor lead wire with a tester.	Reconnect lead wire.	
			<ul style="list-style-type: none"> • Defective door switch (freezer, refrigerator, home bar). • Defective fan motor. • Defective fan motor driving relay. 	Measure the voltage between PCB power blue line and fan motor after pressing test switch of Main PCB. If the voltage is normal, it is OK.	<ul style="list-style-type: none"> • Replace door switch (freezer, refrigerator and home bar). • Replace fan motor. • Replace relay RY5 & RY6 or PCB. 	Refer to load driving circuits in circuit explanation.
			Faulty defrost.	Refer to faulty defrost items in trouble diagnosis functions.		Refer to trouble diagnosis function.

Problems	Symptom	Causes		Checks	Measures	Remarks
Bad cooling	Wrong Refrigerator temperature.	Defective Step Motor Damper.	Check Step Motor damper motor and reed switch and lead wire are cut. Check Step Motor damper part.	Check if Step Motor damper motor and reed switch lead wire are cut with a tester.	Reconnect lead wire.	
				Refer to Step Motor damper in parts repair guide.	Replace Step Motor damper or refrigerator control box Assembly.	
			Check Step Motor damper Motor driving relay in PCB.	Refer to Step Motor damper in parts repair guide.	Replace relay or PCB.	Refer to single motor damper driving circuits in circuit explanation.
			Foreign materials in Step Motor damper baffles.	Check Step Motor damper baffle visually.	Remove foreign materials.	
			Ice formation on Step Motor damper baffles.	Check if Step Motor damper Heater wire is cut with a tester.	Replace Step Motor damper or refrigerator control Box Assembly.	
		Defective refrigerator sensor	Defective refrigerator sensor parts.	Check the resistance of refrigerator sensor with a tester.	Replace refrigerator sensor.	Refer to sensor resistance characteristic table in circuit explanation.
			Refrigerator sensor is substituted for other sensor.	Check the sensor color in the circuit. (main PCB sensor housing.)	Repair main PCB sensor housing.	
			Defective refrigerator sensor assembly condition.	Check if refrigerator sensor is not fixed at cover sensor but inner case visually.	Fix again the refrigerator sensor.	

Problems	Symptom	Causes	Checks	Measures	Remarks
Bad defrost.	Defrost is not working.	Defrost lead wire is cut.	Check if defrost lead wire is cut with a tester.	Reconnect Lead Wire.	
		Defective defrost driving relay.	Check the voltage of CON2 (1 and 7) with a tester after pressing main PCB test switch twice. If the voltage is normal then it is OK.	Replace relay (RY 7 and RY 3) or PCB.	Refer to load driving conditions check in circuit explanation.
		Defective defrost sensor parts.	Check the resistance of defrost sensor with a tester.	Replace defrost sensor.	Refer to sensor resistance characteristic table of circuit explanation.
Defective buzzer	Buzzer continuously rings or door opening alarm does not work.	Defective connecting lead wire from main PCB to door switch.	Check lead wire related to door switch with a tester.	Repair lead wire.	
		Defective door switch parts.	Refer to door switch in parts repair guide.	Replace door switch.	
Defective display button	Buzzer does not ring and key does not sense even button is pressed.	Key input wire is cut or bad connector terminal contact in main PCB and display PCB connecting lead wire.	Check input wire with a tester.	Reconnect lead wire and replace or directly connect bad contact terminal to lead wire.	Refer to display circuit in circuit explanation.
		Key is continuously depressed due to structural interference.	Disassemble frame display and confirm visually.	Adjust or replace interfering structures.	

TROUBLE DIAGNOSIS

Problems	Symptom	Causes	Checks	Measures	Remarks
Defective display button.	Buzzer rings but key does not sense even button is pressed.	Trouble mode indication.	Check trouble diagnosis function.	Repair troubles	Refer to mode indication in function explanations.
Door Buzzer	Buzzer continuously rings or door opening alarm does not work.	Defective connecting lead wire from main PCB to door switch.	Check lead wire associated with door switch.	Repair lead wire.	Check model with dispenser.
		Defective freezer compartment door switch parts.	Refer to door switch in parts repair guide.	Replace Freezer compartment door switch.	
Bad water/ice dispenser.	Ice and water are not dispensed.	Defective connecting lead wire from Main PCB to lever switch.	Check Lead Wire associated with lever switch with a tester.	Repair lead wire.	
		Defective lever switch parts	Refer to door switch in parts repair guide.	Replace lever switch.	
		Defective photo coupler IC parts.	Check voltage change at photo coupler output terminals with lever switch pressed. It is OK if voltage change is between 0V - 5V.	Replace photo coupler IC or PCB.	
		Defective relay associated with ice dispense (geared motor, cube and dispenser solenoid).	Check relay (RY4, RY5, RY12) with a tester.	Replace defective relay.	
		Defective parts associated with ice dispense (geared motor, cube and dispenser solenoid).	Check resistance of parts with a tester.	Replace defective parts.	
		Defective relay associated with water dispense.	Check relay (RY7) with a tester	Replace defective relay.	
		Defective parts associated with water dispenser.	Check resistance of parts with a tester.	Replace defective parts.	

TROUBLE DIAGNOSIS

3. Cooling Cycle Heavy Repair









3-1. The Heavy Repair Standards for Refrigerator with R134a Refrigerant

NO.	Items	Unit	Standards	Purposes	Remarks	
1	Pipe and piping system opening time.	Min.	Pipe:within 1 hour. Comp:within 10 minutes. Drier:within 20 minutes.	To protect Moisture Penetration.	The opening time should be reduced to a half of the standards during rain and rainy seasons (the penetration of water into the pipe is dangerous).	
2	Welding.	Nitrogen Pressure.	Weld under Nitrogen atmosphere (N ₂ pressure: 0.1~0.2 kg/cm ²)	To protect oxide scale formation.	- Refet to repair note in each part. - R134a refrigerant is more susceptible to leaks than R12 and requires more care during welding. - Do not apply force to pipes before and after welding to protect pipe from cracking.	
3	N ₂ sealed parts.	Confirm N ₂ leak.	Confirm air leaking sounds when removing bushing cap. Sound:usable No sound:not usable	To protect moisture penetration.	- In case of evaporator parts, if it doesn't make noise when removing bushing cap blow dry air or N ₂ gas for more than 1 min use the parts.	
4	Refrigeration Cycle.	Evacuation time	Min.	More than 40 minutes.	To remove moisture.	Note:Only applicable to the model equipped with reverse flow protect plate. Vaccum efficiency can be improved by operating compressor during evacuation.
		Vacuum degree	Torr	Below 0.03(ref)		
		Vacuum	EA	High and low Pressure sides are evacuated at the same time for models above 200ℓ		
		Vacuum piping	EA	Use R134a exclusive manifold.	To protect mixing of mineral and ester oils.	The bushing pipes for R12 refrigerant shall be melted when they are used for R134a refrigerant causes of leak.
		Pipe coupler	EA	Use R134a cxclusive.	To protect R12 Refri-gerant mixing.	
		Outlet (Socket) Plug		R134a exclusive. R134a exclusive	" "	
5	Refrigerant weighing.	EA	Use R134a exclusively. Weighing allowance:±5g Note:Winter:-5g Summer:+5g	Do not mix with R12 refrigerant.	- Do not weigh the refrigerant at too hot or too cold an area.(25°C[77°F] is adequate.) - Use copper charging canister Socket:2SV Plug: 2PV R134a Note:Do not burn O-ring (rubber) during welding.	
6	Drier replacement.		-Use R134a exclusively for R134a refrigerator -Use R12 exclusively for R12 refrigerator -Replace drier whenever repairing refrigerator cycle piping.	To remove the moisture from pipe.		
7	Leak check.		-Do not use soapy water for check. it may be sucked into the pipe.	Detect refrigerant leak area.	-Check oil leak at refrigerant leak area. Use electronic leak detector if oil leak is not found. -The electronic leak detector is very sensitive to halogen gas in the air. It also can detect R141b in urethane. Please practice, the refore, many times before use.	

NOTE) Please contact Songso company on +82-53-554-2067 if you have inquiry on heavy repair special facility.

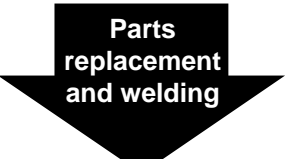
TROUBLE DIAGNOSIS

3-2. Summary Of Heavy Repair

Process	Contents	Tools
		
	<ul style="list-style-type: none"> - Cut charging pipe ends and discharge refrigerant from drier and compressor. 	Filter, side cutters
	<ul style="list-style-type: none"> - Use R134a oil and refrigerant for compressor and drier - Confirm N₂ sealing and packing conditions before use. Use good one for welding and assembly. - Weld under nitrogen gas atmosphere.(N₂ gas pressure: 0.1-0.2kg/cm²). - Repair in a clean and dry place. 	Pipe Cutter, Gas welder, N ₂ gas
	<ul style="list-style-type: none"> - Evacuate for more than forty minutes after connecting manifold gauge hose and vacuum pump to high (drier) and low (compressor refrigerant discharging parts) pressure sides. - Evacuation Speed:113liters/minute. 	Vacuum pump R134a exclusively, Manifold gauge.
	<ul style="list-style-type: none"> - Weigh and control the allowance of R134a charging canister in a vacuum conditions to be ±5 g with electronic scales and charge through compressor inlet (Charge while compressor operates). - Weld carefully after pinching off the inlet pipe. 	R134a exclusive charging canister (mass cylinder), refrigerant R134a manifold gauge, electronic scales, punching off flier, gas welding machine
	<ul style="list-style-type: none"> - Check leak at weld joints. <ul style="list-style-type: none"> □ Minute leak: Use electronic leak detector □ Big leak: Check visually. Note:Do not use soapy water for check. - Check cooling capacity <ol style="list-style-type: none"> ① Check radiator manually to see if warm. ② Check hot line pipe manually to see if warm. ③ Check frost formation on the whole surface of the evaporator. 	Electronic Leak Detector, Driver(Ruler).
	<ul style="list-style-type: none"> - Remove flux from the silver weld joints with soft brush or wet rag. Flux may be the cause of corrosion and leaks. - Clean R134a exclusive tools and store them in a clean tool box or in their place. 	Copper brush, Rag, Tool box
	<ul style="list-style-type: none"> - Installation should be conducted in accordance with the standard installation procedure. Leave space of more than 5 cm from the wall for compressor compartment cooling fan mounted model. 	




TROUBLE DIAGNOSIS

3-3. Precautions During Heavy Repair


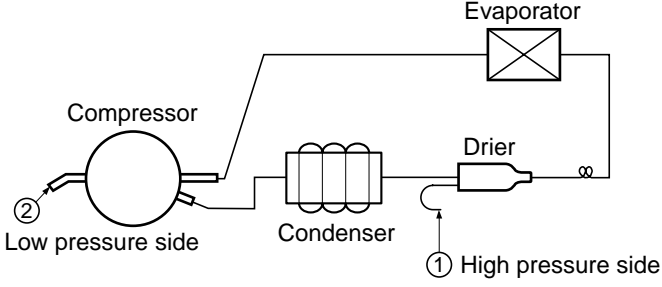
Items	Precautions
1. Use of tools.	1) Use special parts and tools for R134a.
2. Removal of retained refrigerant.	<p>1) Remove retained refrigerant more than 5 minutes after turning off a refrigerator. (If not, oil will leak inside.)</p> <p>2) Remove retained refrigerant by cutting first high pressure side (drier part) with a nipper and then cut low pressure side. (If the order is not observed, oil will leak.)</p>  <p>The diagram illustrates a refrigeration cycle with four main components: a Compressor on the left, a Condenser in the middle, a Drier on the right, and an Evaporator at the top right. The low pressure side is indicated by a circled '2' at the compressor's inlet, and the high pressure side is indicated by a circled '1' at the drier's inlet. The pipes connect these components in a closed loop.</p>
3. Replacement of drier.	1) Be sure to replace drier with R134a only when repairing pipes and injecting refrigerant.
4. Nitrogen blowing welding.	1) Weld under nitrogen atmosphere in order to prevent oxidation inside a pipe. (Nitrogen pressure : 0.1~0.2 kg/cm ² .)
5. Others.	<p>1) Nitrogen or refrigerant R134a only should be used when cleaning inside of cycle pipes inside and sealing.</p> <p>2) Check leakage with an electronic leakage tester.</p> <p>3) Be sure to use a pipe cutter when cutting pipes.</p> <p>4) Be careful not the water let intrude into the inside of the cycle.</p>

TROUBLE DIAGNOSIS



3-4. Practical Work For Heavy Repair

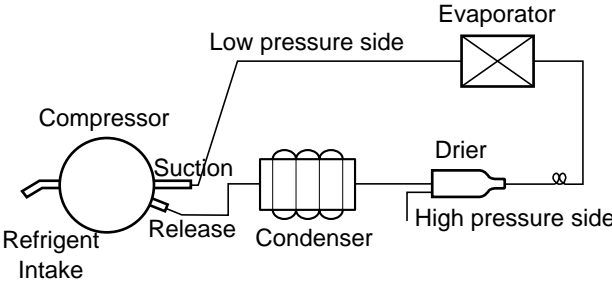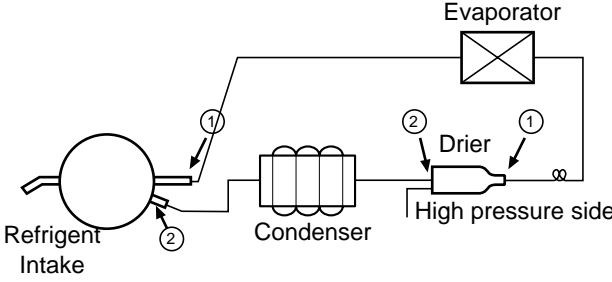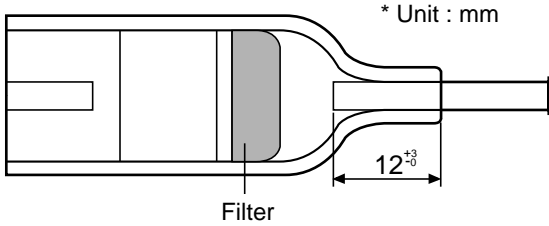Items	Precautions
<p>1. Removal of residual refrigerant.</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="flex: 1;">  <p>1) Remove residual refrigerant more than 5 minutes later after turning off the refrigerator. (If not, compressor oil may leak inside.)</p> <p>2) Remove retained refrigerant slowly by cutting first high pressure side (drier part) with a nipper and then cut low pressure side.</p> </div> <div style="flex: 0.5;"> <p>KEYPOINTING Observe the sequence for removal of refrigerant. (If not, compressor oil may leak.)</p> </div> </div>
<p>2. Nitrogen blowing welding.</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="flex: 1;">  <p>When replacing a drier: Weld ① and ② parts by blowing nitrogen(0.1~0.2kg/cm²) to high pressure side after assembling a drier.</p> <p>When replacing a compressor: Weld ① and ② parts by blowing nitrogen to the low pressure side.</p> <p>Note) For other parts, nitrogen blowing is not necessary because it does not produce oxidized scales inside pipe because of its short welding time.</p> </div> <div style="flex: 0.5;"> <p>KEYPOINTING Welding without nitrogen blowing produces oxidized scales inside a pipe, which affect on performance and reliability of a product.</p> </div> </div>
<p>3. Replacement of drier.</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="flex: 1;">  <p>Inserting a capillary tube Measure distance with a ruler and put a mark(12^{+3/-0})on the capillary tube. Insert tube to the mark and weld it</p> </div> <div style="flex: 0.5;"> <p>KEYPOINTING Be sure to check the inserted length of capillary tube when it is inserted. (If too much inserted a capillary tube is blocked by a filter.)</p> </div> </div>

TROUBLE DIAGNOSIS

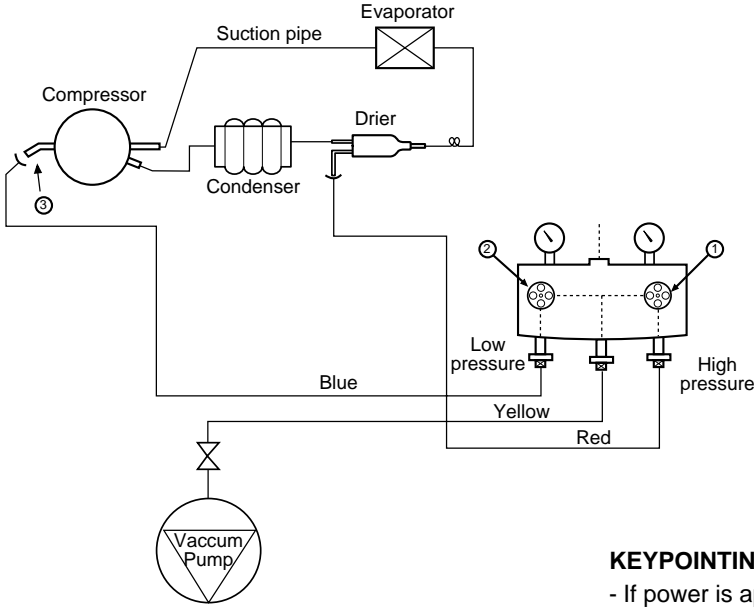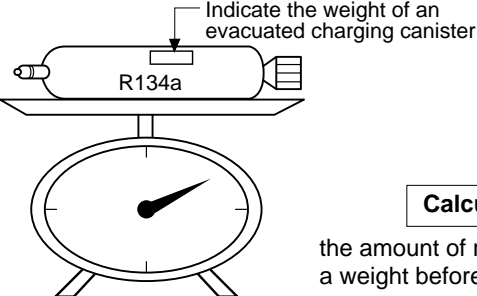
Items	Precautions
<p>4.Vacuum degassing.</p>	<div style="text-align: center;">  </div> <p>KEYPOINTING</p> <ul style="list-style-type: none"> - If power is applied during vacuum degassing, vacuum degassing shall be more effective. - Operate compressor while charging refrigerant. (It is easier and more certain to do like this.) <p>Pipe Connection Connect a red hose to the high pressure side and a blue hose to the low pressure side.</p> <p>Vacuum Sequence Open valves ① and ② and evacuate for 40 minutes. Close valve ①.</p>
<p>5.Refrigerant charging.</p>	<p>Charging sequence</p> <ol style="list-style-type: none"> 1) Check the amount of refrigerant supplied to each model after completing vacuum degassing. 2) Evacuate charging canister with a vacuum pump. 3) Measure the amount of refrigerant charged. <ul style="list-style-type: none"> - Measure the weight of an evacuated charging canister with an electronic scale. - Charge refrigerant into a charging canister and measure the weight. Calculate the weight of refrigerant charged into the charging canister by subtracting the weight of an evacuated charging canister. <div style="text-align: center;">  </div> <p>KEYPOINTING</p> <ul style="list-style-type: none"> - Be sure to charge the refrigerant at around 25°C [77°F]. - Be sure to keep -5g in the winter and +5g in summer <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 10px 0;"> <p>Calculation of amount of refrigerant charged</p> </div> <p>the amount of refrigerant charged= a weight after charging - a weight before charging (weight of an evacuated cylinder)</p>

TROUBLE DIAGNOSIS

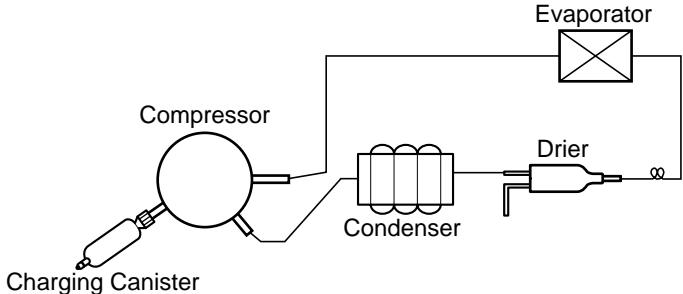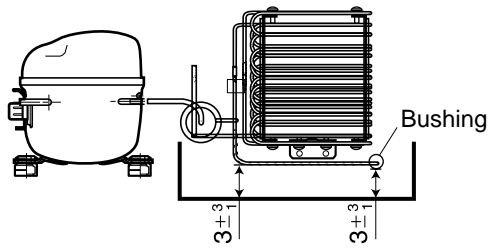Items	Precautions
	 <p>4) Refrigerant Charging Charge refrigerant while operating a compressor as shown above.</p> <p>5) Pinch a charging pipe with a pinch-off plier after completion of charging.</p> <p>6) Braze the end of a pinched charging pipe with copper brazer and take a gas leakage test on the welded parts.</p>
6. Gas-leakage test	* Take for leaks on the welded or suspicious area with an electronic leakage tester.
7. Pipe arrangement in each cycle	<p>Check each pipe is placed in its original place before closing a cover back-M/C after completion of work. Particularly control the size of Joint Drain Pipe</p> 

3-5. Standard Regulations For Heavy Repair


- 1) Observe the safety precautions for gas handling.
- 2) Use JIG (or wet towel) in order to prevent electric wires from burning during welding. (In order to prevent insulation break and accident.)
- 3) The inner case will melt and the insulation will burn.
- 4) The copper piping will oxidize.
- 5) Do not allow aluminum and copper pipes to touch. (In order to prevent corrosion.)
- 6) Observe that the inserted length of a capillary tube into a drier should be 12^{+3} mm.

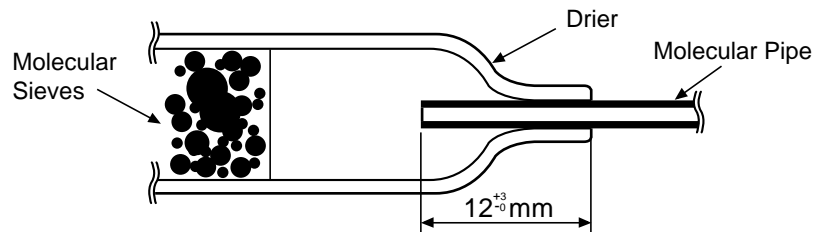

- 7) Make sure that the inner diameter should not be distorted while cutting a capillary tube.
- 8) Be sure that a suction pipe and a filling tube should not be substituted each other during welding. (High efficiency pump.)

TROUBLE DIAGNOSIS

3-6. Brazing Reference Drawings

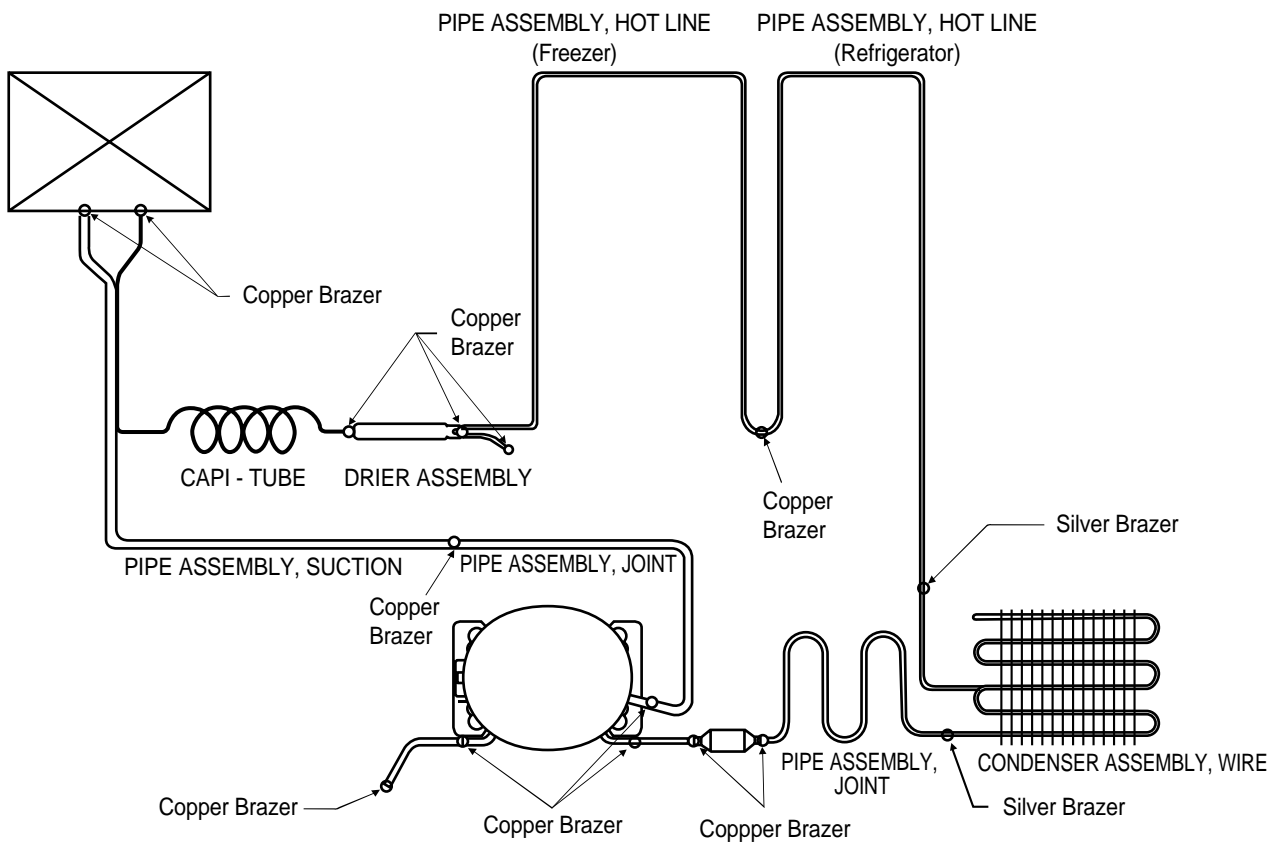

TROUBLE DIAGNOSIS

4. HOW TO DEAL WITH CLAIMS

4-1. Sound

Problems	Checks and Measures
Hiss sounds	<p>■ Explain general principles of sounds.</p> <ul style="list-style-type: none"> • All refrigerator when functioning properly have normal operating sound. The compressor and fan produce sounds. There is a fan in the freezer compartment which blows cool air to freezer and refrigerator compartments. Hiss sounds are heard when the air passes through the narrow holes into the freezer and refrigerator compartments. <p>■ Cooling Fan sound in the compressor compartment.</p> <ul style="list-style-type: none"> • There is a fan on the back of the refrigerator, which cools the compressor compartment. If there is a small space between the refrigerator and the wall, the air circulation sounds may be noticeable. <p>■ Noise of Compressor.</p> <ul style="list-style-type: none"> • This operating sound happens when the compressor compresses the refrigerant. The compressor rotates at 3600RPM. The sound of compressor operation becomes louder as the refrigerator capacity increases.
Click sounds	<p>■ Explain the principles of temperature change.</p> <ul style="list-style-type: none"> • The sounds happens when pipes and internal evaporator in the refrigerator compartment expand and contract as the temperature changes during the refrigerator operation. This sound also happens during defrosting, twice a day, when the ice on the evaporator melts.
Clunk sound	<p>■ Explain that it comes from the compressor when the refrigerator starts.</p> <ul style="list-style-type: none"> • When the refrigerator operates, the piston and motor in the compressor rotate at 3600RPM. This sound is caused by the vibration of motor and piston when they start and finish their operation. This phenomena can be compared with that of cars. When an automobile engine starts, it is loud at first but quiets down quickly. When the engine stops, so does the vibration.
Vibration sound	<p>■ Check the sound whether it comes from the pipes vibration and friction.</p> <ul style="list-style-type: none"> • Insert bushing or leave a space between pipes to avoid the noise. • Fix the fan blade if the noise is due to the collision of fan and shroud. • Fix the drip tray if it is loosened. <p>■ Sound depends on the installation location.</p> <ul style="list-style-type: none"> • Sound becomes louder if the refrigerator is installed on a wooden floor or near a wooden wall. Move it to the another location. • If the refrigerator is not leveled properly, a small vibration can make a loud sound. Please adjust the level of the refrigerator.

TROUBLE DIAGNOSIS

Problems	Checks and Measures
<p>Sounds of water flowing</p>	<p>■ Explain the flow of refrigerant.</p> <ul style="list-style-type: none"> • When the refrigerator stops, the water flowing sound happens. This sound happens when the liquid or vapor refrigerant flows from the evaporator to compressor.
<p>Click sounds</p>	<p>■ Explain the characteristics of moving parts.</p> <ul style="list-style-type: none"> • This noise comes from the MICOM controller's switch on the top of the refrigerator when it is turned on and off.
<p>Noise of icemaker operation (applicable to model with icemaker).</p> <ul style="list-style-type: none"> - Noise produced by ice dropping and hitting ice bin. - Noise from motor sounds Hiss. 	<p>■ Explain the procedure and principles of Icemaker operation.</p> <ul style="list-style-type: none"> • Automatic icemaker repeats the cycle of water supplying → icemaking → ice ejection. When water is supplied, the water supply valve in the machine room makes sounds like Hiss and water flowing also makes sound. When water freezes clicking sounds are heard. When ice is being ejected, sounds like Hiss produced by a motor to rotate an ice tray and ice dropping and hitting ice bin sounds are also heard.
<p>Noise when supplying water.</p>	<p>■ Explain the principles of water supplied to dispenser.</p> <ul style="list-style-type: none"> • When the water supply button in the dispenser is pressed, the water supply valve in the compressor compartment opens and let the water flow to the water tank in the lower part of the refrigerator compartment. The water is dispensed by this pressure. When this happens, motor sound and water flowing sound are heard.
<p>Noise when supplying ice.</p>	<p>■ Explain the principles of ice supply and procedure of crushed icemaking in a dispenser.</p> <ul style="list-style-type: none"> • When ice cube button is pressed, ice stored in the ice bin is moved by a Helix Pusher and dispensed. If crushed ice button is pressed, the cube ice is crushed. When this happens, ice crushing and hitting ice bin sounds are heard.

TROUBLE DIAGNOSIS

4-2. Measures for Symptoms on Temperature

Problems	Checks and Measures
Refrigeration is weak.	<p>■ Check temperature set in the temperature control knob.</p> <ul style="list-style-type: none"> • Refrigerator is generally delivered with the button set at normal use (MID). But customer can adjust the temperature set depending on their habit and taste. If you feel the refrigeration is weak, then set the temperature control button at strong position. If you adjust the button in the freezer compartment as well, the refrigeration is stronger than adjusting refrigerator only.
The food in the chilled drawer is not frozen but defrosted	<p>■ The chilled drawer does not freeze food.</p> <ul style="list-style-type: none"> • Use chilled drawer for storing fresh meat or fish for short periods. For storing for a long periods or freezing food, use a freezer compartment. It is normal that frozen foods thaw above the freezing temperature (in the chilled drawer).
Refrigerator water is not cool.	<p>■ Check the water storage location.</p> <ul style="list-style-type: none"> • If water is kept in the door rack, move it to a refrigerator self. It will then become cooler.
Ice cream softens.	<p>■ Explain the characteristics of ice cream.</p> <ul style="list-style-type: none"> • The freezing point of ice cream is below -15°C[5°F]. Therefore ice cream may melt if it is stored in the door rack. • Store ice cream in a cold place or set the temperature control button of a freezer at strong position.
Refrigeration is too strong.	<p>■ Check the position of temperature control button.</p> <ul style="list-style-type: none"> • Check if refrigeration is strong in whole area of the refrigerator or partly near the outlet of the cooling air. If it is strong in whole area, set the control button at weak. If it is strong only near the outlet of cool air, keep food (particularly wet and easy to frozen such as bean curd and vegetables) away from the outlet.
Vegetables are frozen.	<p>■ Check the vegetables storage.</p> <ul style="list-style-type: none"> • If vegetables are stored in the refrigerator shelf or chilled drawer instead of vegetable drawer, they will be frozen. Set the control button at weak if they are also frozen in the vegetable drawer.
The food stored at inside of the shelf freezes even the control button is set at MID .	<p>■ Check if food is stored near the outlet of the cooling air.</p> <ul style="list-style-type: none"> • The temperature at cooling air outlet is always below the freezing point. Do not store food near the outlet of the cooling air as it block the air circulation. Do not block the outlet. If the outlet of the cooling air is blocked, the refrigerator compartment will not be cooled.


TROUBLE DIAGNOSIS

4-3. Odor and Frost

Problems	Checks and Measures
Odor in the refrigerator compartment.	<p>■ Explain the basic principles of food odor.</p> <ul style="list-style-type: none"> • Each food has its own particular odor. Therefore it is impossible to prevent or avoid food odor completely when food is stored in the completely sealed refrigerator compartment. The deodorizer can absorb some portions of the odor but not completely. The intensity of odor depends on refrigerator conditions and environments. <p>■ Check the temperature control button and set at strong.</p> <ul style="list-style-type: none"> • Clean inside of the refrigerator with detergent and remove moisture. Dry inside the refrigerator by opening the door for about 3 or 4 hours and then set the temperature control button at strong.
Frost in the freezer compartment	<p>■ Explain the basic principles of frost formation.</p> <ul style="list-style-type: none"> • The main causes for frosting: <ul style="list-style-type: none"> - Door was left open. - Air penetration through the gasket - Too frequent door opening. (parties. etc.) - Hot foods are stored before they are cooled down. The temperature of freezer is -19°C[-2.2°F]. if temperature is set at MID. If hot air comes into the refrigerator, fine frost forms as cold air mixes with hot air. If this happens quite often, much frost forms inside of the refrigerator. If the door is left open in Summer, ice may form inside of the refrigerator.
Frost in ice tray.	<p>■ Explain basic principles of frost formation.</p> <ul style="list-style-type: none"> • When ice tray with full of water is put into a freezer compartment, the water evaporates. If cool air fan operates, the moisture attached to the jaw (protruded part) of ice mold will freeze and form frost. If warm water was put into the ice mold, the situation will become worse.

TROUBLE DIAGNOSIS

4-5. Others

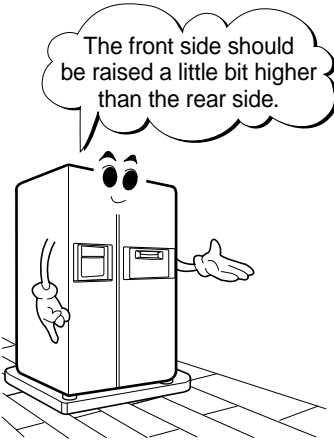
Problems	Checks and Measures
The refrigerator case is hot.	<ul style="list-style-type: none"> ■ Explain the principles of radiator. <ul style="list-style-type: none"> • The radiator pipes are installed in the refrigerator case and partition plate between the refrigerator and the freezer compartment in order to prevent condensation formation. Particularly in summer or after installation of refrigerator, it may feel hot but it is normal. If there is no enough space to dissipate heat, it can be hotter due to lack of heat radiation. Please install a refrigerator in a well-ventilated place and leave a clearance between refrigerator and wall:
Small holes in a door liner	<ul style="list-style-type: none"> ■ Explain that the hole is for releasing gas. <ul style="list-style-type: none"> • A small hole in the door liner is for releasing gas during insulation materials lining work. With a releasing hole, forming can be easily done .
Electric bills are too much.	<ul style="list-style-type: none"> ■ Check the use conditions. <ul style="list-style-type: none"> • Too frequent door opening and hot food storing cause the compressor to operate continuously and increase the electric consumption and bills.
Condensation on the inside wall of the refrigerator compartment and the cover of properly vegetable drawer.	<ul style="list-style-type: none"> ■ Explain how to store foods <ul style="list-style-type: none"> • Condensation forms when refrigerator is installed at damp area, door is frequently opened, and wet foods are not stored in the air tight container or wrapped. Be sure to store wet foods in the air tight container or in the wrap.
When is the power connected?	<ul style="list-style-type: none"> ■ When should the power be connected ? <ul style="list-style-type: none"> • You can connect the power right after the installation. But if the refrigerator was laid flat during transportation for a long period of time and the refrigerant and compressor oils are mixed up, then this will affect badly the performance of a refrigerator. Be sure to connect the power 2~3 hours after refrigerator is installed.
Door does not open properly. <div style="text-align: center; margin-top: 20px;">  </div>	<ul style="list-style-type: none"> ■ Refrigerator compartment door does not open properly. <ul style="list-style-type: none"> • When the door is open, warm open air comes into the compartment and is mixed up with cool air. This mixed air shall be compressed and increase the internal pressure when door is closed. This causes the door stucked closely to the refrigerator in a moment. (If the refrigerator is used for a long time, it will then open smoothly.) ■ When the refrigerator compartment door is open and close, the freezer compartment door moves up and down. <ul style="list-style-type: none"> • When the refrigerator compartment door is open and close, fresh air comes into the freezer compartment and moves up and down the freezer compartment door. ■ Door opens too easily. <ul style="list-style-type: none"> • There is a magnet in the gasket bushing so that it is. if door is securely closed without a gap. It can be open easily if the foods in the refrigerator or freezer compartments hold the door open. ■ A door does not close properly. <ul style="list-style-type: none"> • If the rear side of the refrigerator is raised higher than front side, door shall not be easily closed. Adjust the level of refrigerator with levelling screws.

HOW TO DISASSEMBLE AND ASSEMBLE


1. DOOR

1) Remove lower cover and then disconnect water supply tube in the lower part of freezer door.

- Pull a water supply tube ② forward while pressing ① part to disconnect water supply tube as shown below.

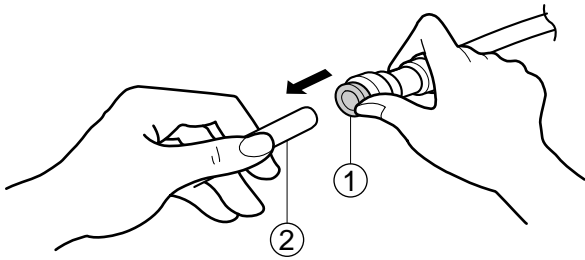


- (3) Disconnect upper hinge ① from a hinge supporter ② by grasping the front part of upper hinge and lifting up (Hinge Assembly, U) in arrow direction ① and pull forward in arrow ② direction. Be careful as the door may be fallen down.

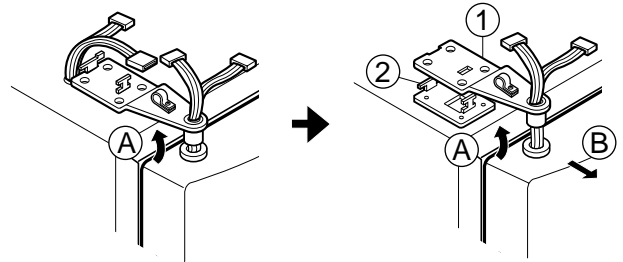


2) Remove a freezer door.


- (1) Loosen hinge cover screw of freezer door and remove cover. Disconnect all connecting lines except earthing cord.

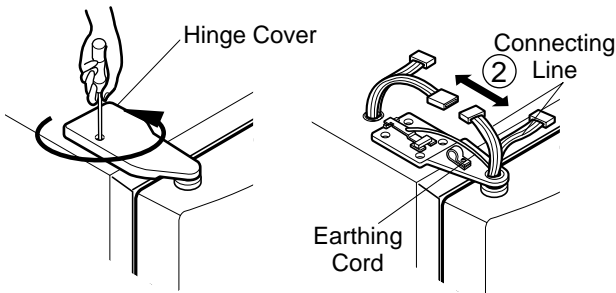

- (4) Lift up the freezer door ① in arrow direction and disconnect the door from the lower hinge ②. Don't pull a door forward.

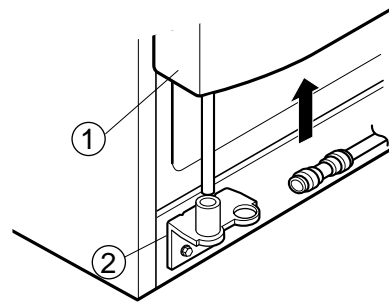

- (2) Turn hinge lever in arrow ① direction until it is loosened and take it out in arrow ② direction.

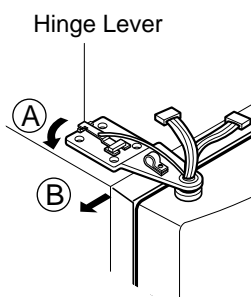

Note : • Lift up a freezer door until a water supply tube is fully taken out.

- (5) Assembly is the reverse order of disassembly


Note : • When disconnecting refrigerator door, turn hinge lever counterclockwise.

- If hinge lever or bracket hinge pin is deformed during assembling freezer and refrigerator doors, attach two screws (Tap Tite Screw, M6: Hinge, L fixing screw) in the hole of upper hinge.

HOW TO DISASSEMBLE AND ASSEMBLE

2. HANDLE

- 1) Unscrew ①
- 2) Disassemble ② from the door
- 3) Unscrew ③
- 4) Disassemble ④ from the door
- 5) Unscrew three of ⑤
- 6) Disassemble ⑥
- 7) Unscrew three of ⑦
- 8) Disassemble ⑧ from the door
- 9) ⑨ can be easily disassembled from the ⑥ by unscrewing

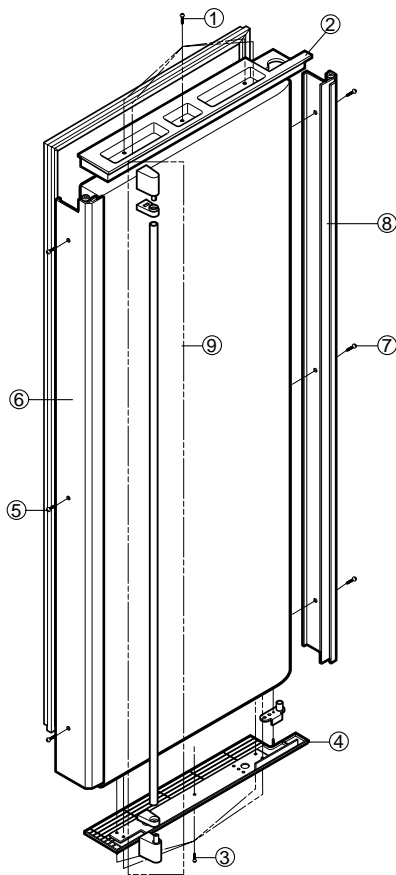

3. SHROUD, GRILLE FAN


- 1) Loosen two screws after disconnecting a cap screw of a grille fan(U) with a screwdriver blade.
- 2) Disassembly of a grille fan(U) : Pull forward after opening hook at → part with a screwdriver blade.
- 3) Disconnect housing A of a grille fan (L) from the main body.

- 4) Disassembly of a grille fan (L) : Hold upper part of a grille fan(L) and pull forward carefully.
- 5) Loosen two screws.
- 6) Disassembly of shroud. F(U) : Disconnect housing of B after removing two rail guides with a screwdriver blade.
- 7) Disassembly of shroud. F(U) : Hold upper part and pull forward.
- 8) Check foam PU sticking conditions around a shroud, F(U) and F(L) during assembling. If damaged, torn or badly stuck, assemble with a new one after sealing well.

4. ICEMAKER ASSEMBLY

1. Dispenser Model

- 1) How to disassemble:
 - (1) Remove ice bin from the freezer compartment.
 - (2) Loosen two screws on the upper part of icemaker bracket.
 - (3) Disconnect icemaker Bracket so that it can slide forward.
 - (4) Disconnect icemaker housing and sensor housing.
 - (5) Disconnect icemaker horizontally by pressing bracket hook part. (Don't disassemble further. The set value may be changed.)
- 2) How to assemble : The assembly is the reverse order of the above disassembly.

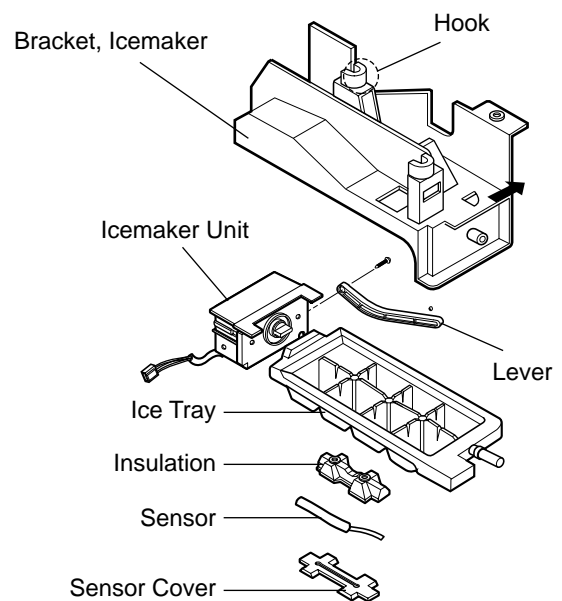


Note : When the ice tray is not horizontal after assembly, assembly must be wrong. Check and assemble again.


HOW TO DISASSEMBLE AND ASSEMBLE

5. DISPENSER


- 1) Disconnect button assembly by pulling down until it stops and then pulling forward.

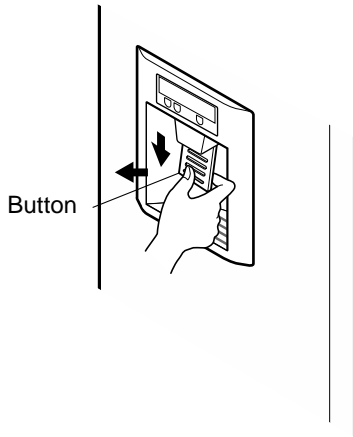


- 2) Remove display frame Assembly by making a gap between a display frame Assembly, and funnel Assembly, with a blade screwdriver and pulling it forward. The cover dispenser is fixed with a hook.

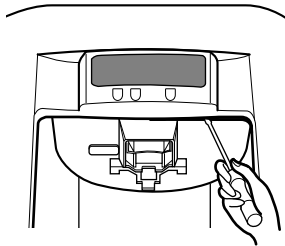


- 3) Display Assembly can be disconnected by pressing the upper part of a cover dispenser and pushing a display Assembly, after disconnecting display frame Assembly, housing.

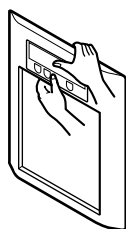


- 4) Loosen four screws with a phillips screwdriver and pull the funnel Assembly to disconnect.

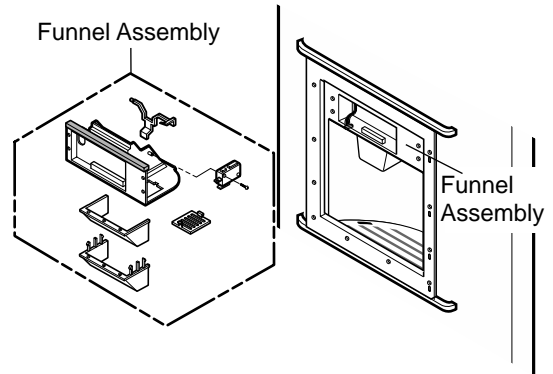

- 5) Duct cap Assembly is disconnected if hold lever connecting screw is loosened with a phillips screwdriver.

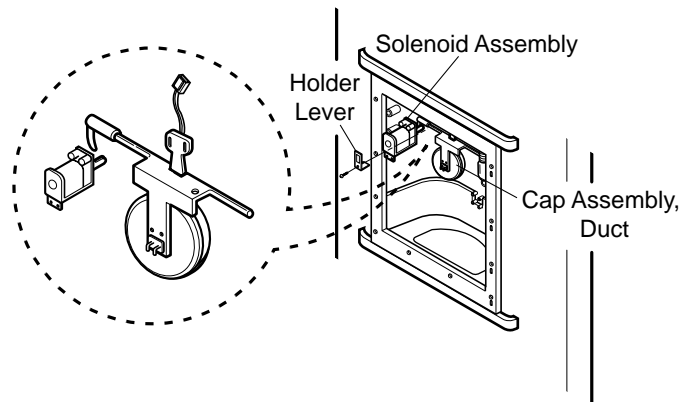


- 6) For assembling a duct cap Assembly, insert one end of a spring into the right hole of dispenser lever, and insert the other end into the right hole in upper part of dispenser. Then assemble a holder lever after fixing a holder at a solenoid Assembly working part.

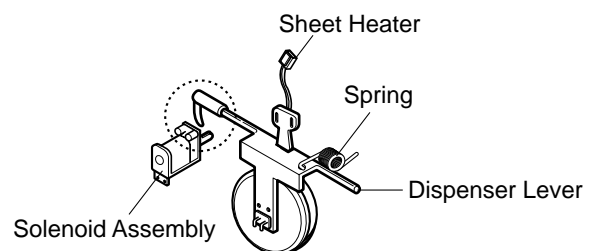

HOW TO DISASSEMBLE AND ASSEMBLE

7) Dispenser Related Parts

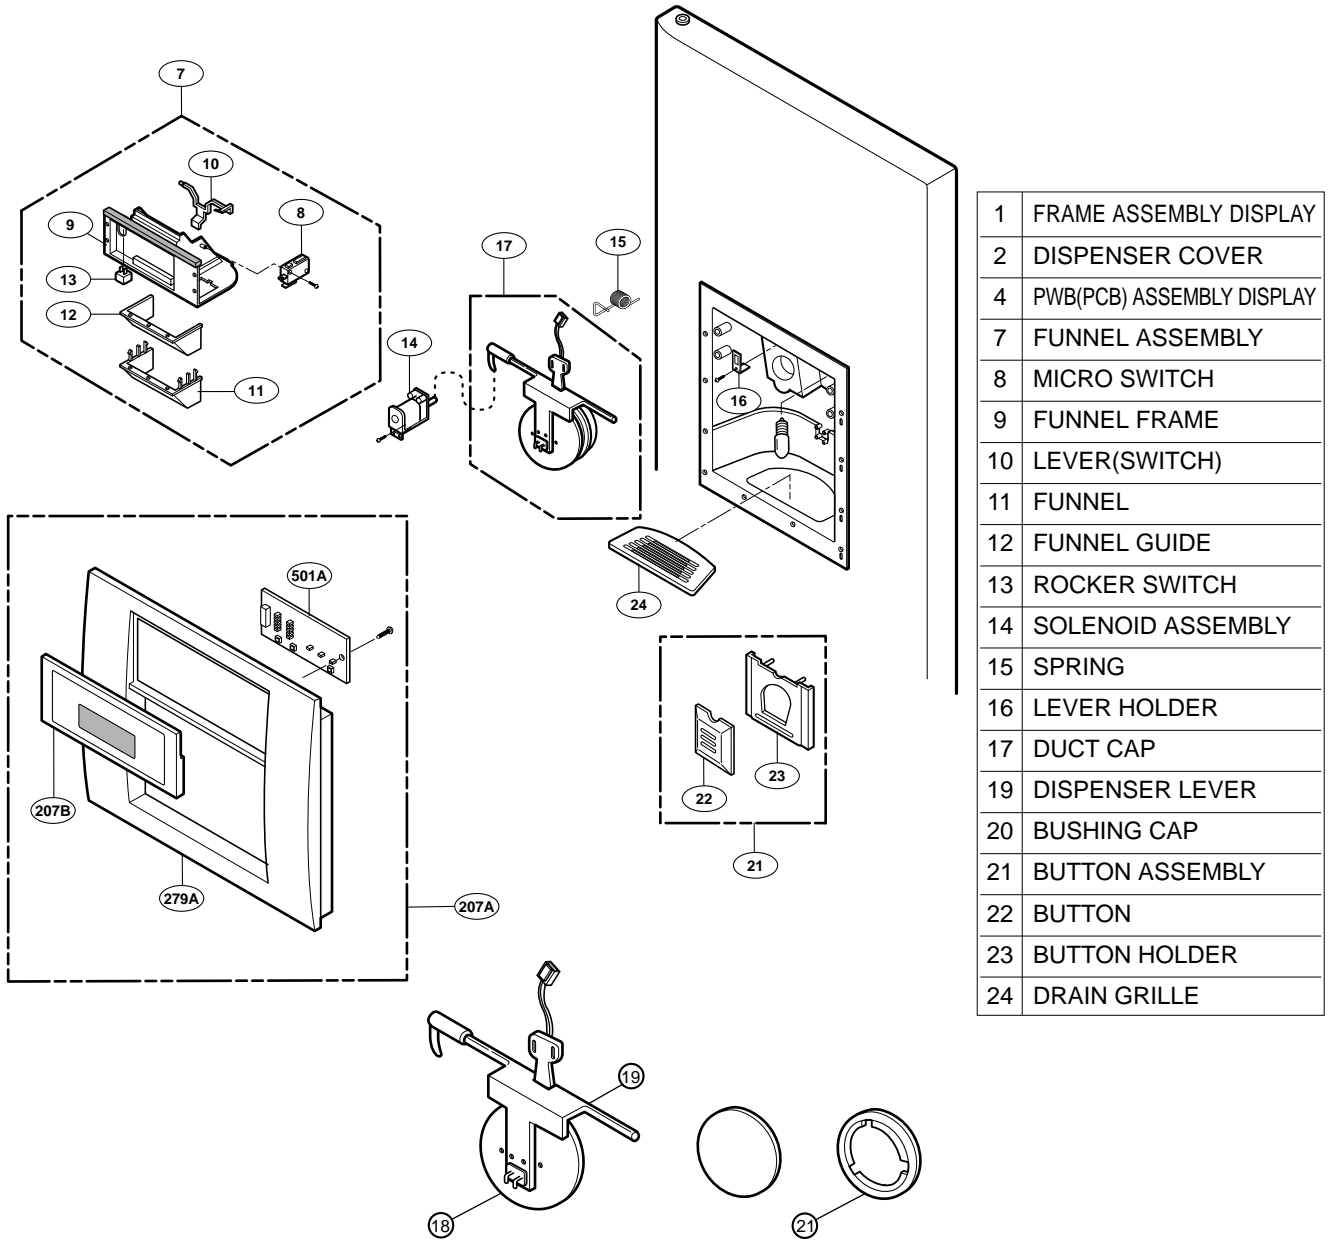

<17> Cap Assembly, Duct Detailed Drawings>


HOW TO DISASSEMBLE AND ASSEMBLE

6. WATER TANK AND WATER LINE

- ▶ The water tank at back and lower part of a refrigerator is fixed by one screw and has a capacity containing 7 glasses (180cc per glass) of cold water. It will take time to make more cold water in the tank.
- * The first portion of dispensed water is not cold even though the refrigerator is working. In this case, dispense ice first in the cup and then water to make a cold water.

7. HOME BAR

7-1. Home Bar related parts

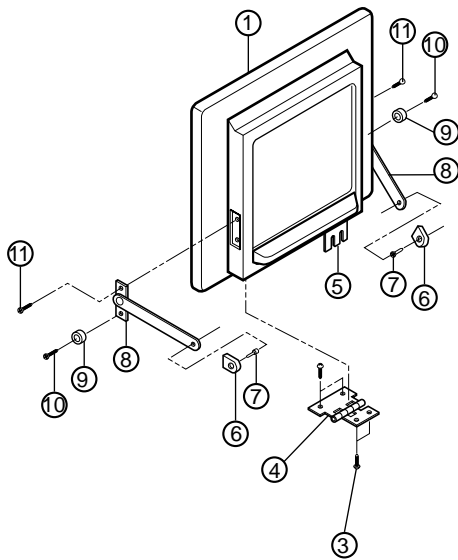


1 DOOR ASSEMBLY H/BAR	7 SCREW TAP TITE(ARM)
2 SEREW TAP TITE(HINGE-H/B)	8 ARM ASSEMBLY
3 SCREW MACHINE(HINGE-H/B)	9 STOPPER
4 HINGE ASSEMBLY H/BAR	10 SCREW MACHINE(STOP ARM-H/B)
5 HINGE ASSEMBLY H/BAR	11 SCREW MACHINE(HINGE-H/B)
6 ARM CAP	

7-2. Home Bar parts disassembly and assembly


- 1) Disconnect H/Bar Door Assembly ①.
- 2) Loosen two screws ⑦ attached on the refrigerator compartment door with a phillips screwdriver. And loosen 4 screws ② and two screws ③. Pull H/Bar door Assembly ①. forward to disassemble.
- 3) Loosen two screws ⑩, ⑨ fixed on H/Bar door Assembly. and two screws ⑪ with a phillips driver to disassemble arm Assembly.
- 4) Assemble parts by performing the disassembly in reverse order.

- Note :
- Assemble carefully parts ⑦, ⑩, ⑪ until they are attached firmly when assembling them.
 - Adjust exterior gap by adjusting parts ②, ⑦ and when assembling.

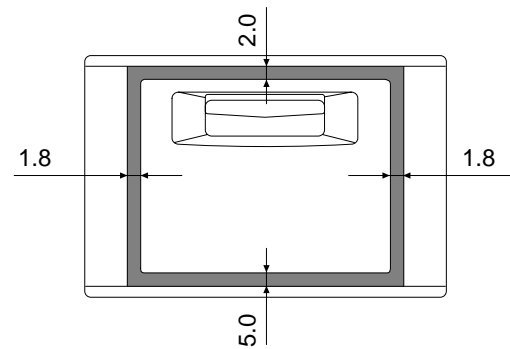


EXPLODED VIEW

FREEZER DOOR PART: GR-P247, GR-P207, GR-L247, GR-L207

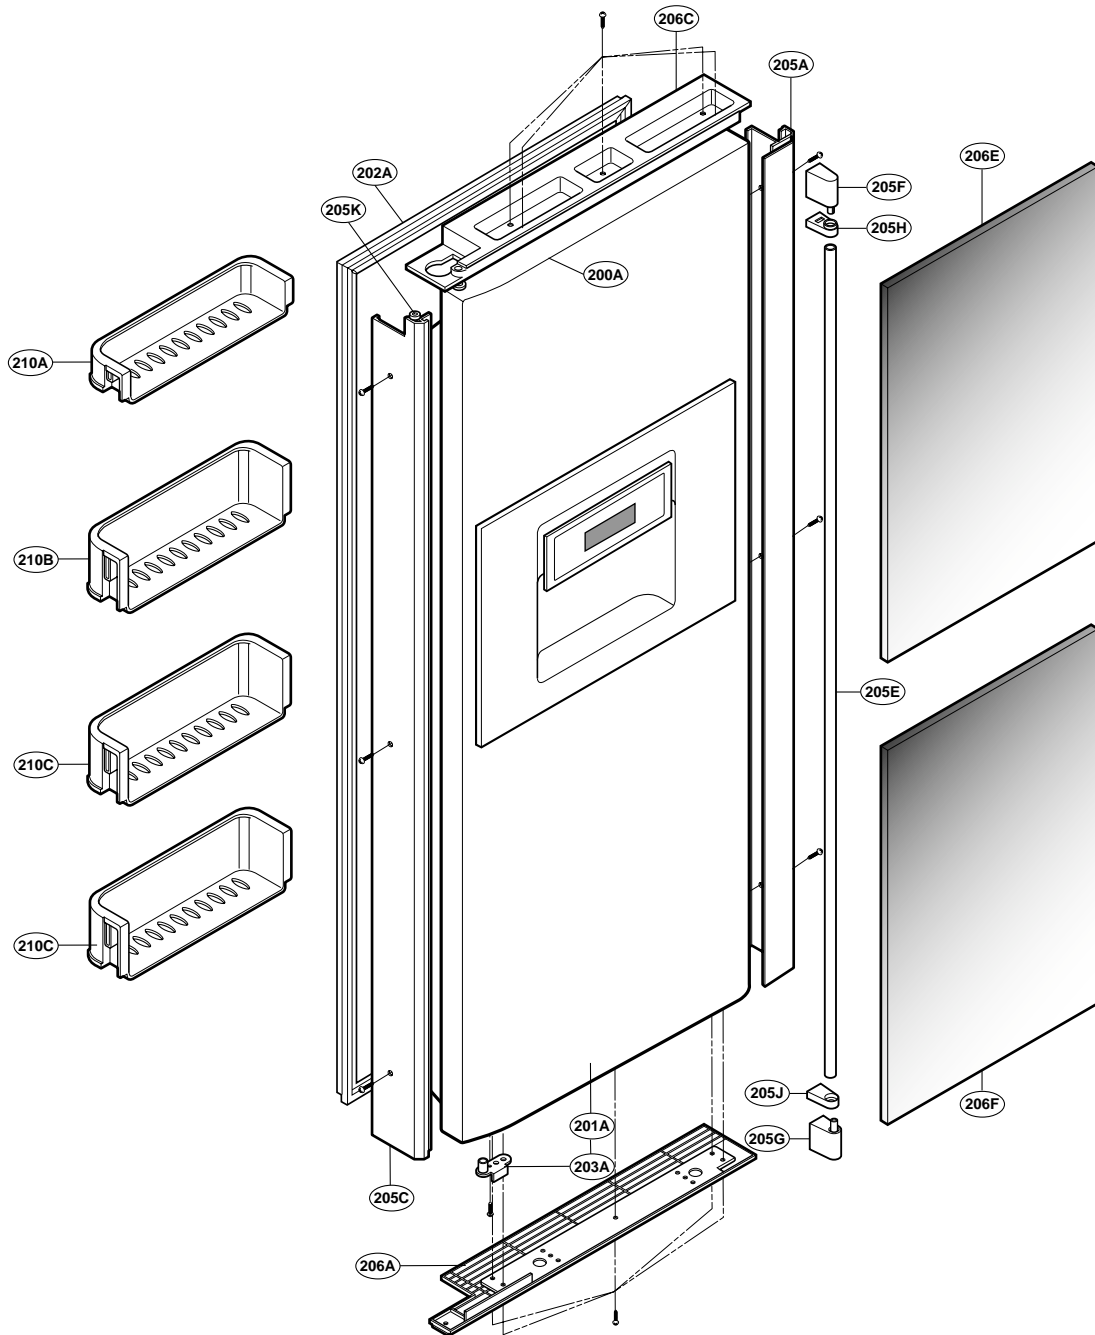

EXPLODED VIEW

FREEZER DOOR PART: GR-C247, GR-C207, GR-B247, GR-B207

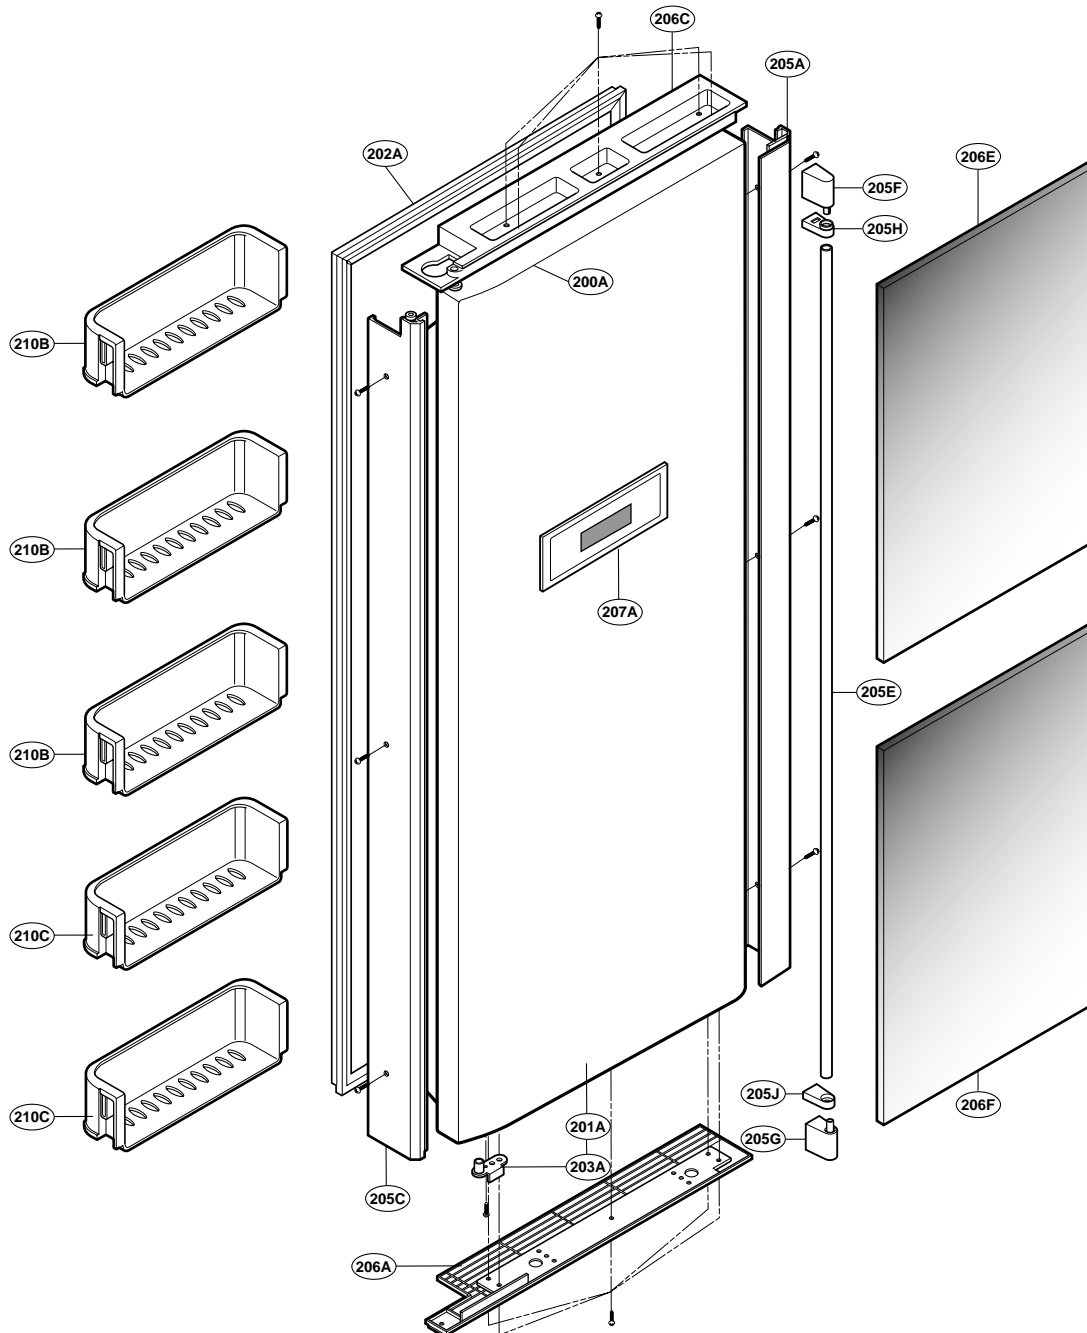


EXPLODED VIEW

Ref No. : GR-P247, GR-P207, GR-C247, GR-C207

REFRIGERATOR DOOR PART

* : Optional part

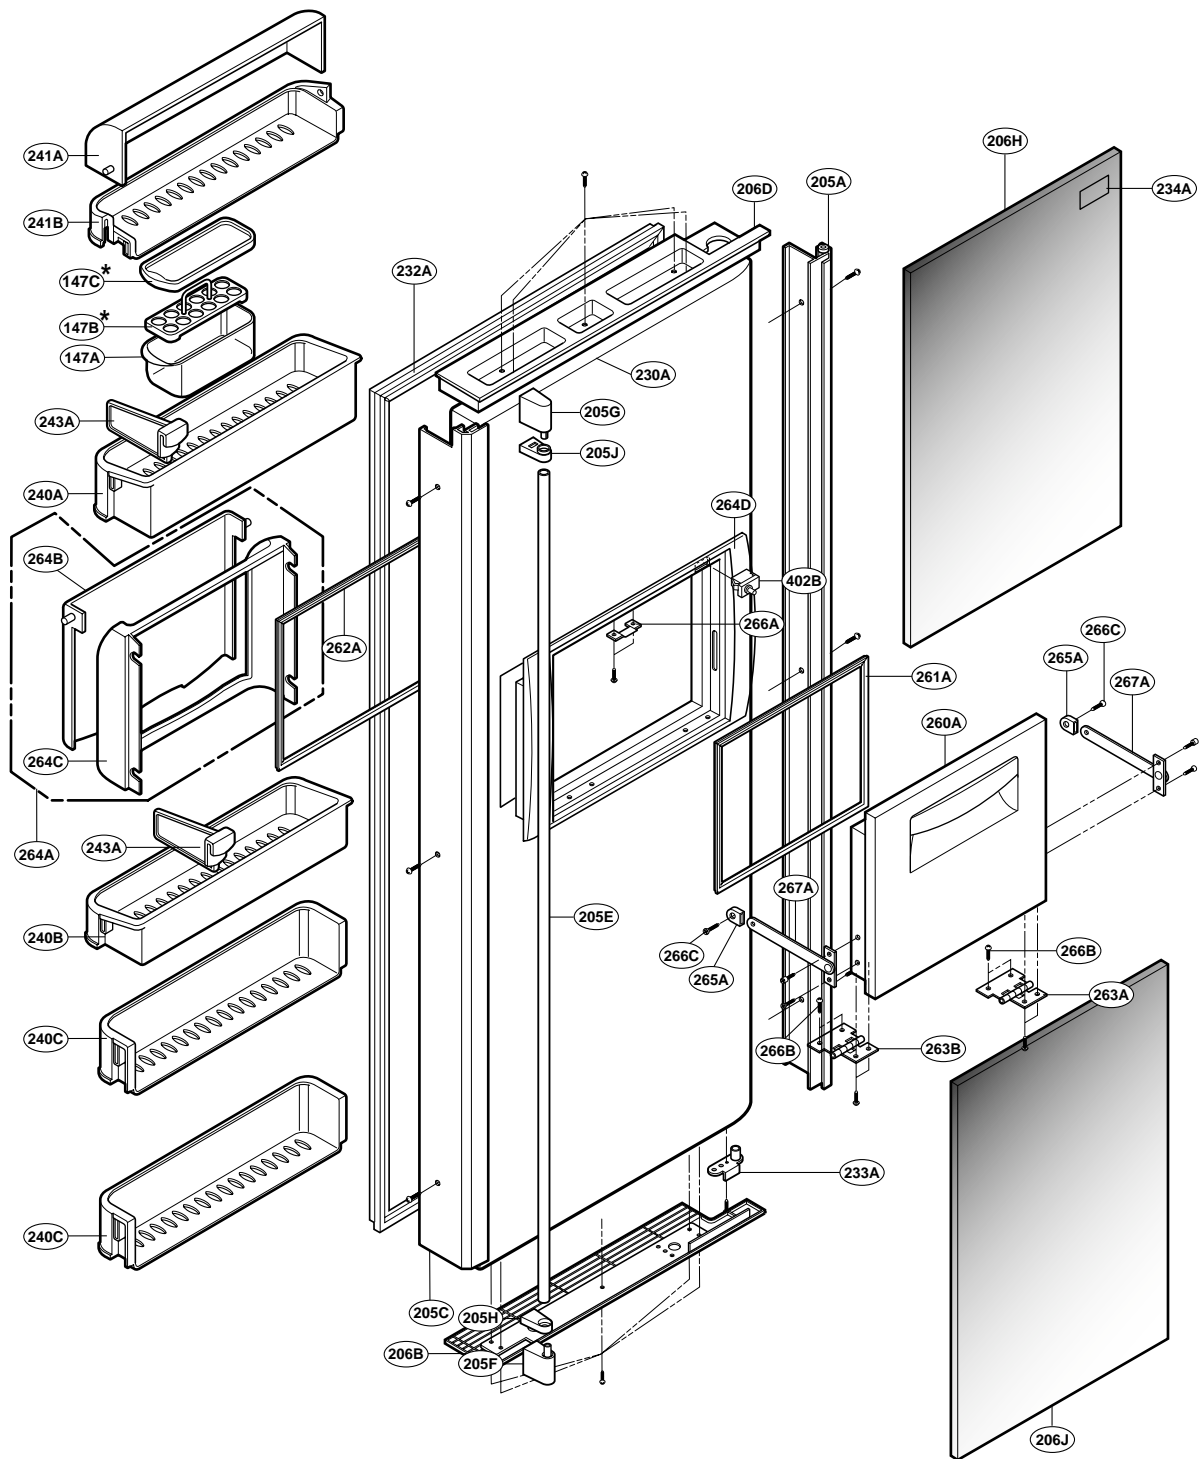


EXPLODED VIEW

Ref No. : GR-L247, GR-L207, GR-B247, GR-B207

REFRIGERATOR DOOR PART


* : Optional part

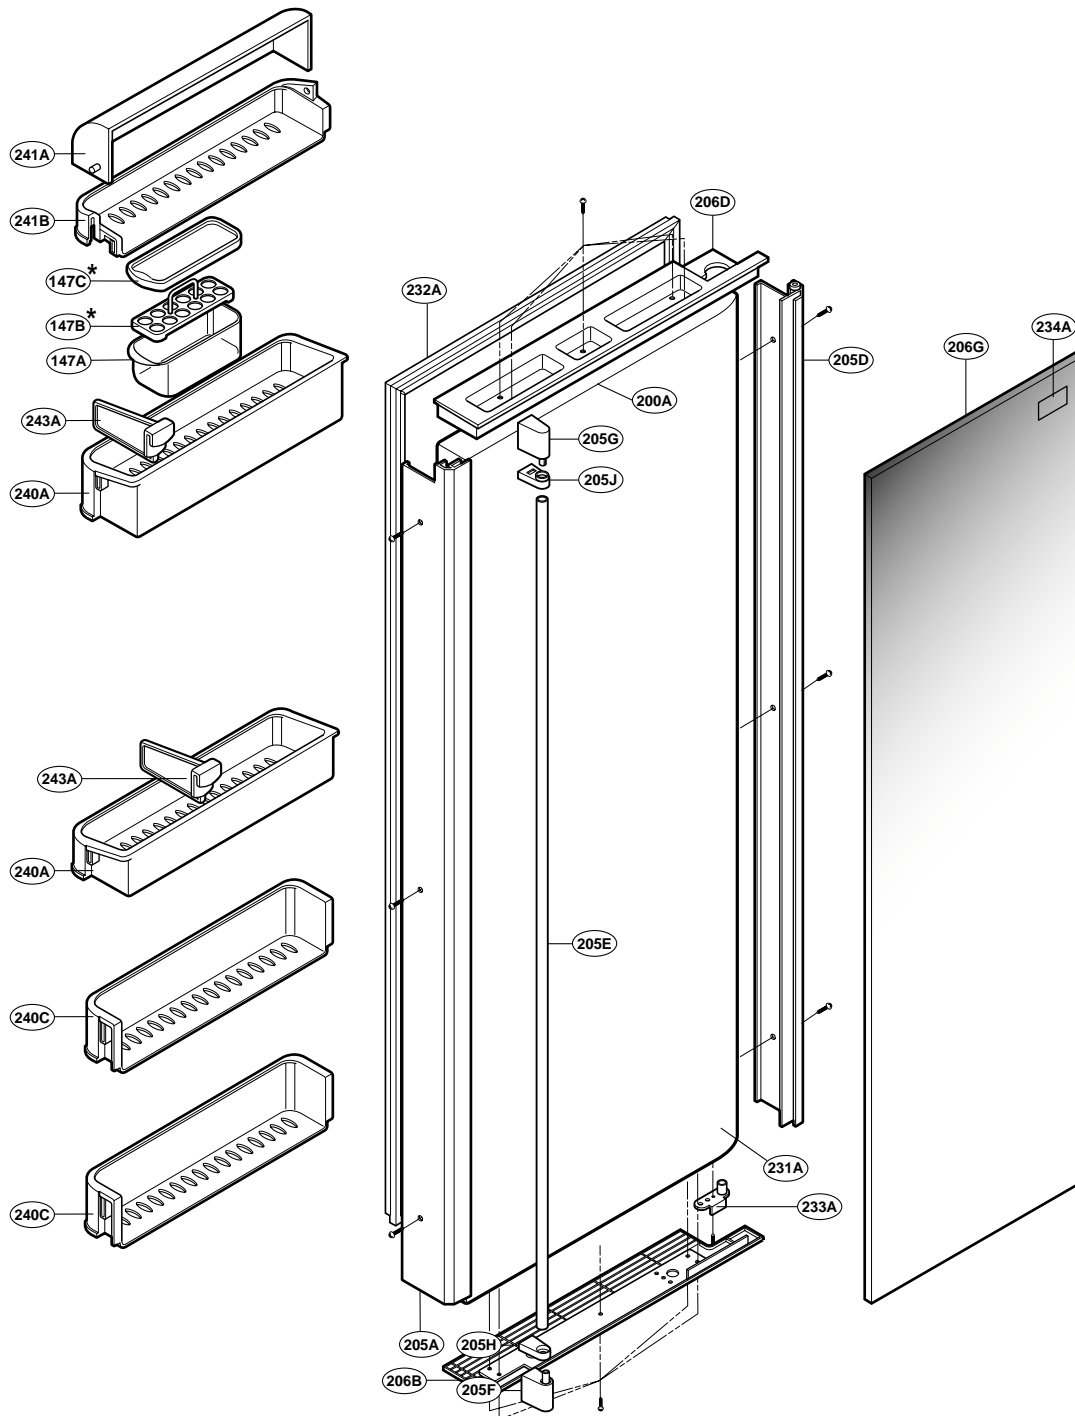

EXPLODED VIEW

FREEZER COMPARTMENT


* : Optional part

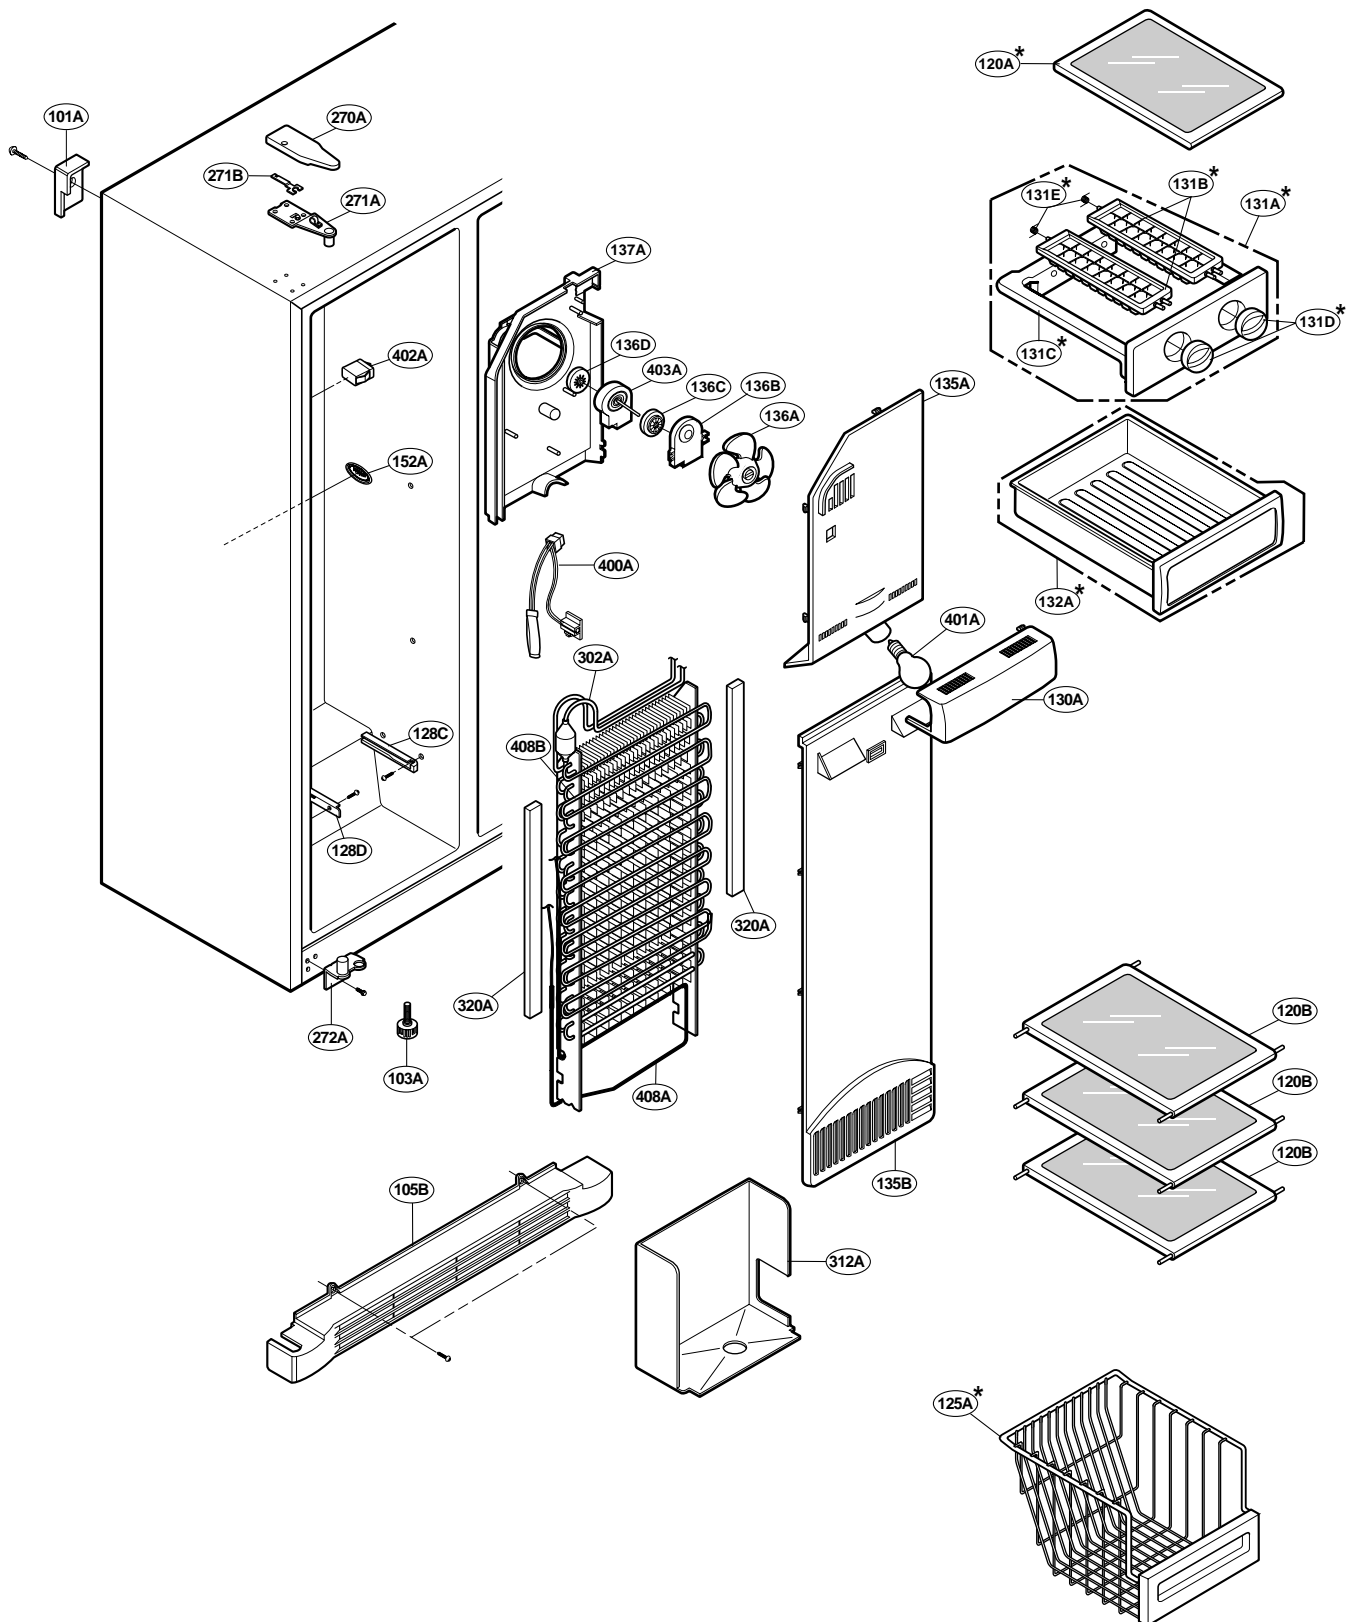

EXPLODED VIEW

REFRIGERATOR COMPARTMENT


* : Optional part

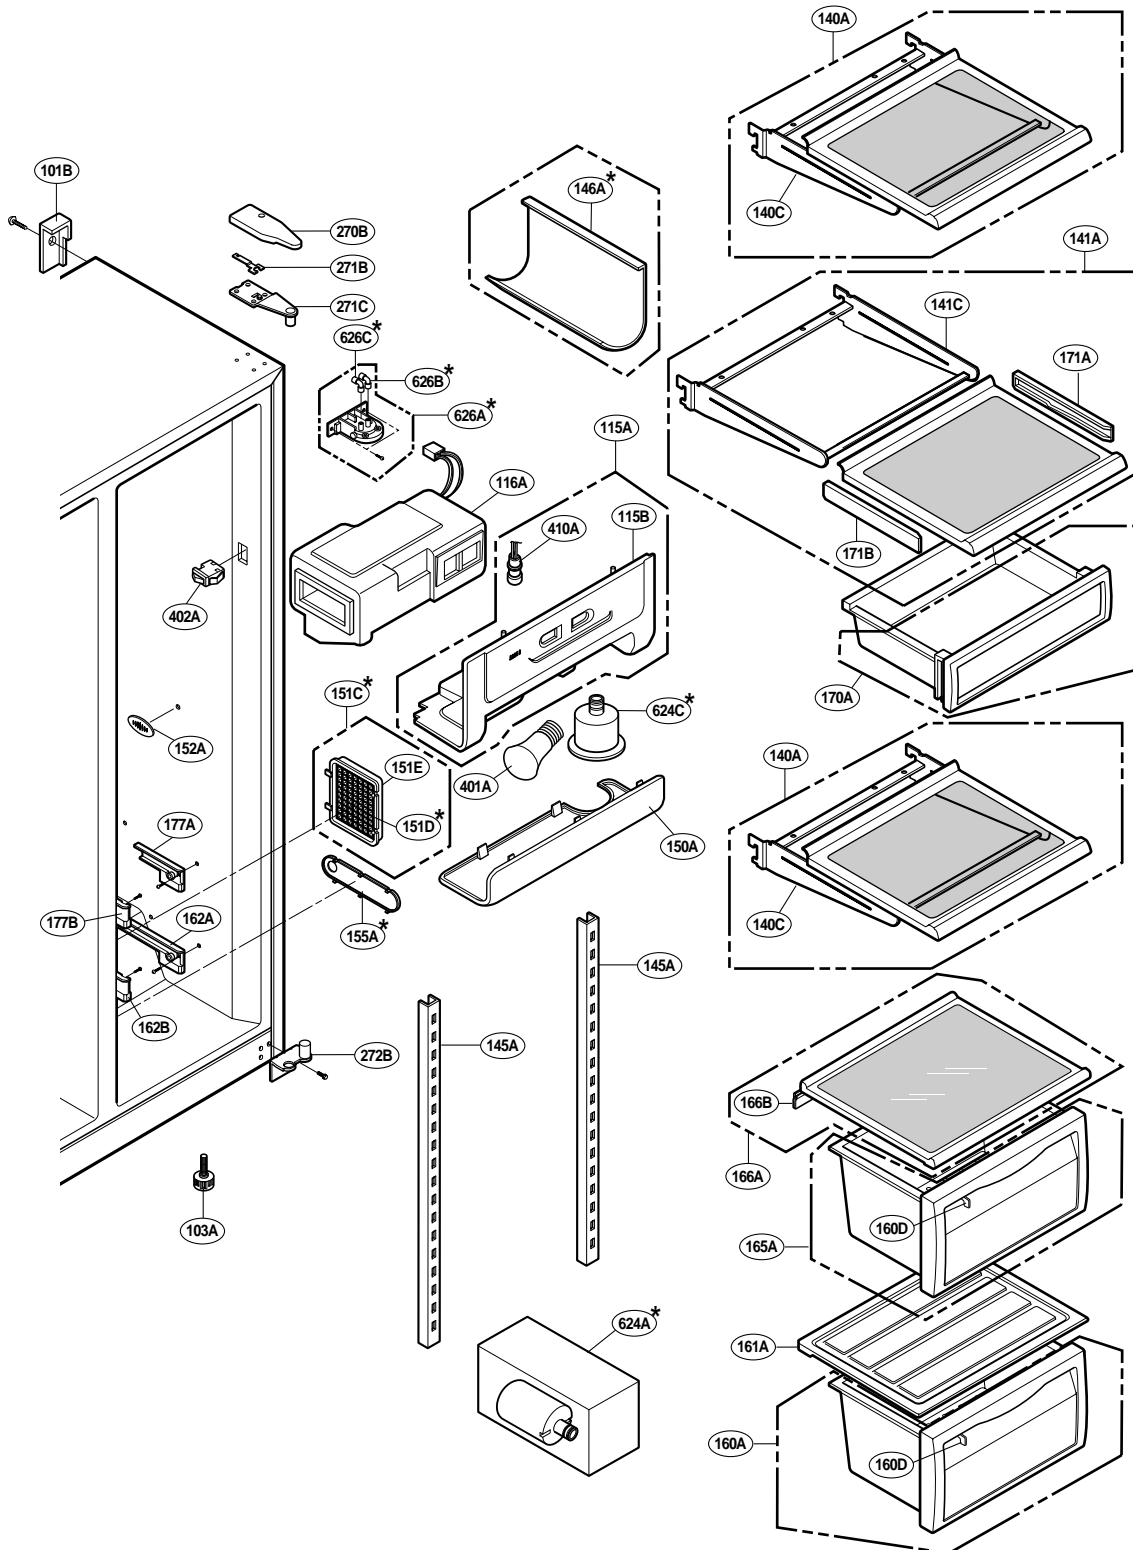

EXPLODED VIEW


MACHINE COMPARTMENT

* : Optional part

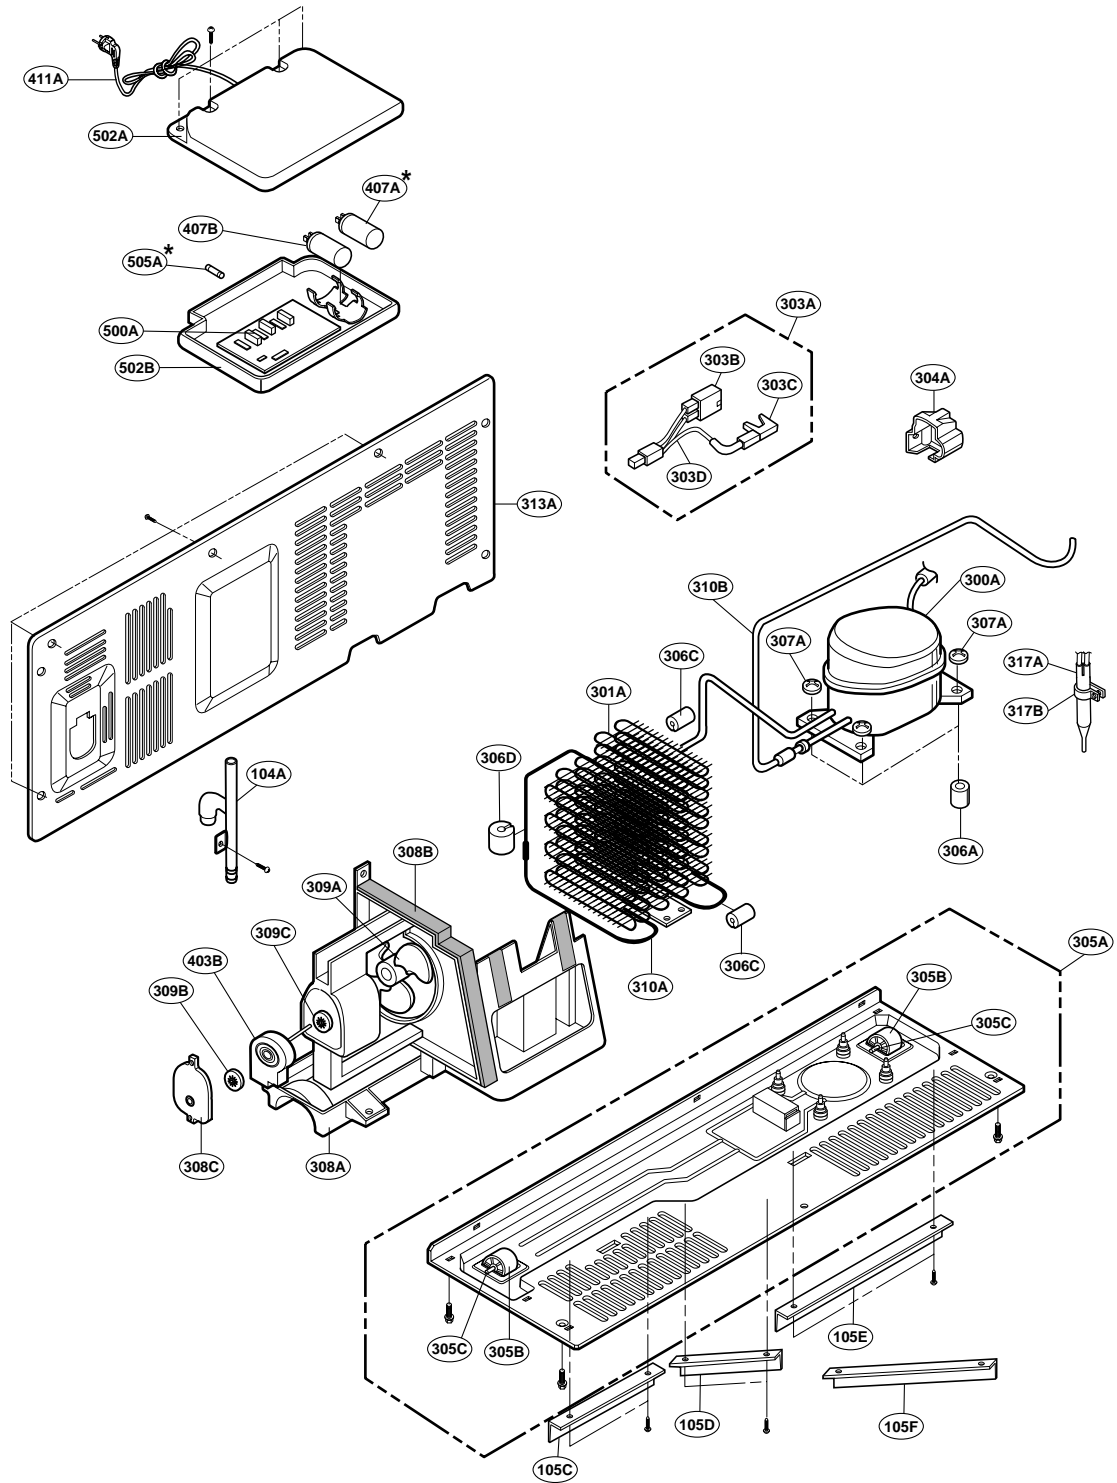

EXPLODED VIEW

DISPENSER PART

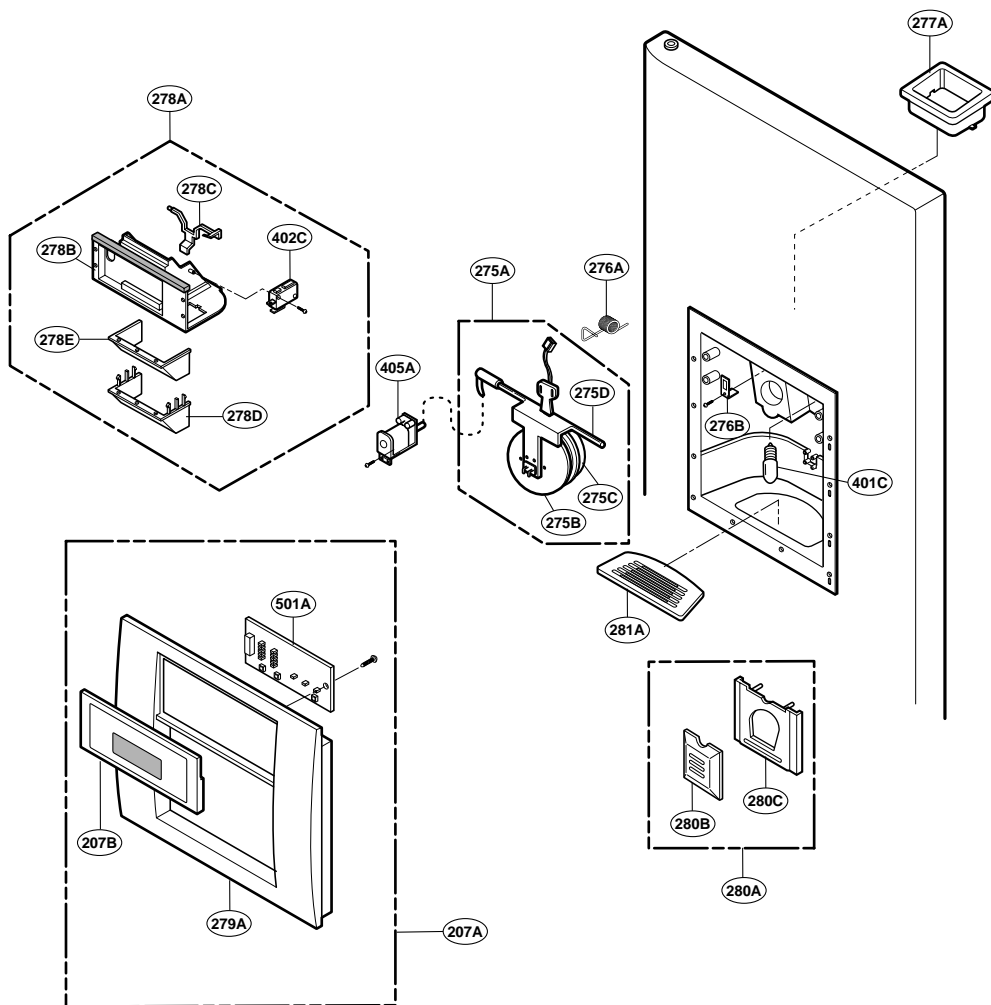



LG Electronics Inc.

P/No. 3828JD8471K

SEP., 2002 Printed in Korea

