

SERVICE AND WIRING SHEET

2220104REL



WARNING

ELECTRICAL SHOCK HAZARD

Disconnect electrical power before servicing


Failure to do so can result in death or electrical shock

PERFORMANCE DATA
(NORMAL OPERATING CONDITIONS)

AMB	WATTS	(PSIG)	
		HIGH SIDE	LOW SIDE
70°	140 ± 20	95 ± 20	-7 TO 3
90°	150 ± 20	135 ± 20	-4 TO 3
110°	170 ± 20	185 ± 20	-2 TO 4

* Normal operating conditions are viewed when the air and temperature controls are at mid-setting, freezer section 0 to -5°F and unit is cycling.

NOTE: Watt and pressure readings will vary and are influenced by the existing condition of the appliance, such as iced-up evaporator, condition of condenser, defrost cycle, pull-down time and customer use.

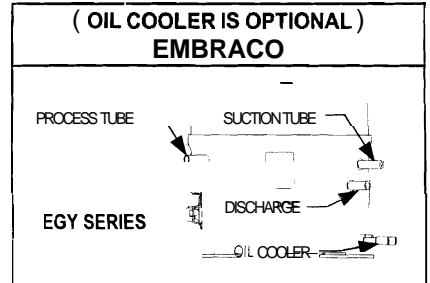

SERVICE INFORMATION (2216658REL)

- COMPRESSOR SUCTION AND PROCESS S TUBS MAY NOT BE INTERCHANGED UNLESS INDICATED BY **
- REFRIGERANT CHARGE MUST BE APPLIED TO HIGH SIDE ONLY
- ICE MAKER AND WATER VALVE NOT ORIGINAL EQUIPMENT ON ALL MODELS
- CAUTION ICE MAKER CYCLE MUST BE INITIATED ELECTRICALLY DO NOT TRY TO MANUALLY START CYCLE
- SERVICE DEFROST BIMETALS - 50°F OPEN
- DEFROST TIMER MAY CONTAIN A CAPACITOR IN SERIES WITH MOTOR DO NOT CONTINUITY TEST WHEN CHECKING FOR FAILED TIMER MOTOR INSTEAD, ENERGIZE TIMER AND LISTEN FOR GEAR MOVEMENT
- PART NUMBER CAN BE FOUND ON THE COMPONENT

SERVICEABLE ELECTRICAL PARTS MATRIX (COMPONENTS BY CUBIC FOOT SIZE)

SERVICEABLE PARTS	20 AND 22 CUBIC FOOT		25, 26 AND 27 CUBIC FT		WATTAGE		RESISTANCE	
	120V	220-240V	120V	220-240V	120V	220-240V	120V	220-240V
COMPRESSOR	2212191		2212192					
RUN WINDINGS	*		*				1-5	
START WINDINGS	*		*				3-11	
4SP (RELAY, OVERLOAD)	2212193		2212194					
RUN CAPACITOR ** (OPT)	2169373		2169373					
THERMOSTAT	see note 7		see note 7					
BAFFLE MODULE (OPT)	2161467		2161467					
DEFROST TIMER (OPT)	see note 7		see note 7					
ADAPTIVE DEFROST ** (OPT)	2188159		2188159					
ADC / FILTER INDICATOR (OPT)	see note 7		see note 7					
DEFROST HEATER	2188174		2188175		550-650		27-21	
DEFROST BI-METAL	2196155		2196155					
EVAPORATOR FAN	see note 7		see note 7		2-9			
CONDENSER FAN	see note 7		see note 7		3-12			

** PRIMARY SOURCE PART NUMBER

STEPS TO ENTER ELECTRONIC DEFROST CONTROL TEST MODE (IF APPLICABLE)

OPTION #1 (EI-METAL CLOSED)

STEPS

- POWER OFF TO REFRIGERATOR FOR AT LEAST 30 SECONDS
- THERMOSTAT OFF
- POWER ON TO REFRIGERATOR

ENTER TEST MODE

IN 3.8 SECONDS, CONTROL WILL TURN ON DEFROST HEATER. DEFROST HEATER WILL TURN ON FOR 21 MINUTES OR UNTIL BI-METAL OPENS. TO TERMINATE TEST EARLY, REMOVE POWER FROM REFRIGERATOR.

NOTE: IF OPTION #2 DOES NOT WORK, TRY OPTION #1 BEFORE REPLACING CONTROL. ALWAYS CHECK CONNECTIONS BEFORE REPLACING CONTROL.

HELPFUL HINT: UPON ENTERING TEST MODE, A RELAY TURNS OFF THE COMPRESSOR AND TURNS ON THE DEFROST HEATER. LISTEN FOR THE RELAY TO CLICK. IF RELAY CLICKS ONCE UPON ENTERING TEST MODE, CHECK FOR DEFROST HEAT. IF RELAY CLICKS TWICE (ALLOW UP TO 30 SEC BETWEEN CLICKS), CHECK FOR BI-METAL OPEN.

OPTION #2 (EI-METAL CLOSED)

STEPS

- THERMOSTAT OFF 15 SECONDS
- THERMOSTAT ON 5 SECONDS
(REPEAT STEPS 1 AND 2 TWO MORE TIMES)
- THERMOSTAT OFF

IF BI-METAL IS BY-PASSED FOR TESTING (IF APPLICABLE), DO NOT OVERHEAT EVAPORATOR AREA.

BAFFLE MODULE DIAGNOSTIC TEST (IF APPLICABLE)

The diagnostic steps given below are for evaluating the Baffle Module. Steps 4 and 5 include the settings and results. If the results listed do not occur after putting the controls in the given settings, then further in-depth diagnosis of the product is required. Possible areas to evaluate include wiring connections to all electrical components, freezer thermostat, defrost timer, baffle module, evaporator fan, condenser fan, and compressor.

STEP

- VERIFY THAT THE PRODUCT IS NOT IN DEFROST.
- OPEN THE REFRIGERATOR AND FREEZER DOORS SO THAT THE PRODUCT WARMS UP ENOUGH TO TRIP THE THERMOSTATS.
- NOTE THE THERMOSTAT SETTINGS AND REMOVE THE CONTROL BOX FRONT COVER.
- SET BOTH CONTROLS IN THE FOLLOWING MANNER, THEN CHECK FOR THE GIVEN RESULTS,

CONTROL	SETTING
FREEZER THERMOSTAT.....	COLDER (FAR RIGHT)
REFRIGERATOR THERMOSTAT.....	OFF (FAR LEFT)

COMPONENT	RESULTS
BAFFLE DOOR.....	10 SECONDS - CLOSED
COMPRESSOR.....	ON
CONDENSER FAN.....	ON
EVAPORATOR FAN.....	ON

- SET BOTH CONTROLS IN THE FOLLOWING MANNER, THEN CHECK FOR THE GIVEN RESULTS:

CONTROL	SETTING
FREEZER THERMOSTAT.....	COLDER (FAR RIGHT)
REFRIGERATOR THERMOSTAT.....	COLDER (FAR RIGHT)

COMPONENT	RESULTS
BAFFLE DOOR.....	10 SECONDS - OPEN
COMPRESSOR.....	ON
CONDENSER FAN.....	ON
EVAPORATOR FAN.....	ON

- TEST COMPLETE - BAFFLE MODULE GOOD. SET CONTROLS AT MID SETTINGS AND REPLACE CONTROL BOX FRONT COVER

SERVICE & WIRING SHEET NO.

SERVICE & WIRING SHEET NO.

2220104REL


2220104REL

- GROUND COMPRESSOR THROUGH CONDENSER.
- IM SOLENOID GROUNDED THROUGH MOUNTING.
- EVAP COVER GROUNDED HEAT SHIELD.
- THE DISPENSER HAS A BUILT IN INVERTER BOARD WHICH CONVERTS THE AC VOLTAGE TO 120V DC. THE OR/BU WIRE IS THE POSITIVE SIDE OF THE DC SIGNAL AND AND THE PR/WH WIRE IS THE NEGATIVE SIDE. THE BR/WH AND RD/WH WIRES SWITCH POLARITY DEPENDING ON CRUSH/CUBE POSITION. SET TABLE BELOW:


CRUSH	BR/WH	RD/WH
CUBE	OR/BU	PR/WH

WARNING

Electrical Shock Hazard
Disconnect power before servicing.
Replace all panels before operating.
Failure to do so can result in death or electrical shock.

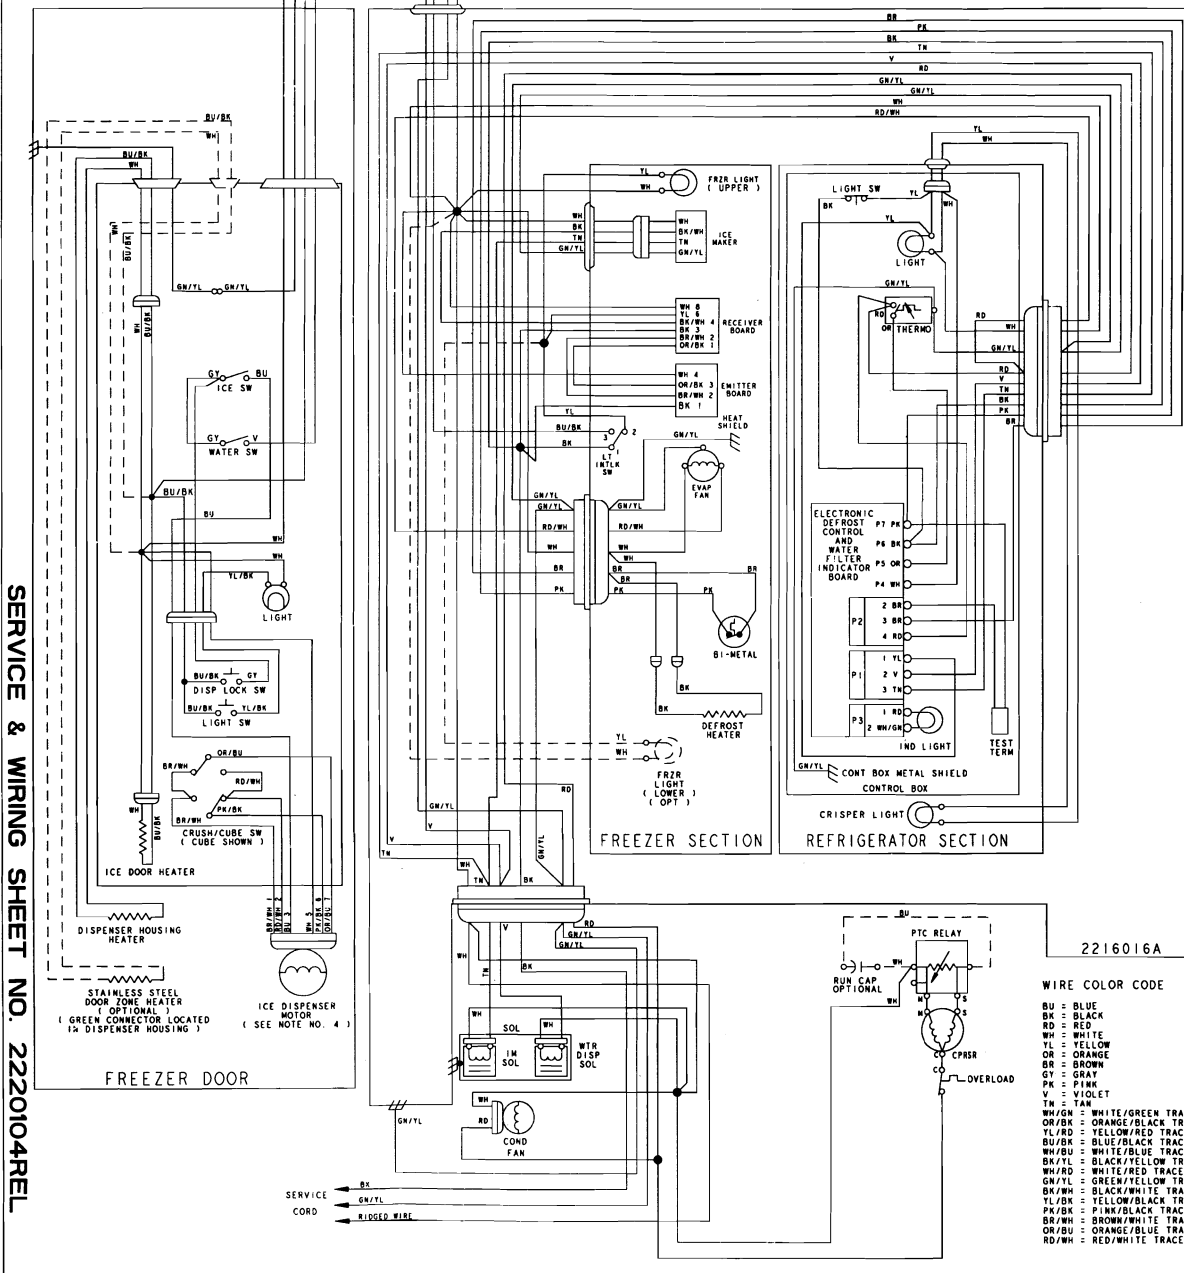

WIRING DIAGRAM

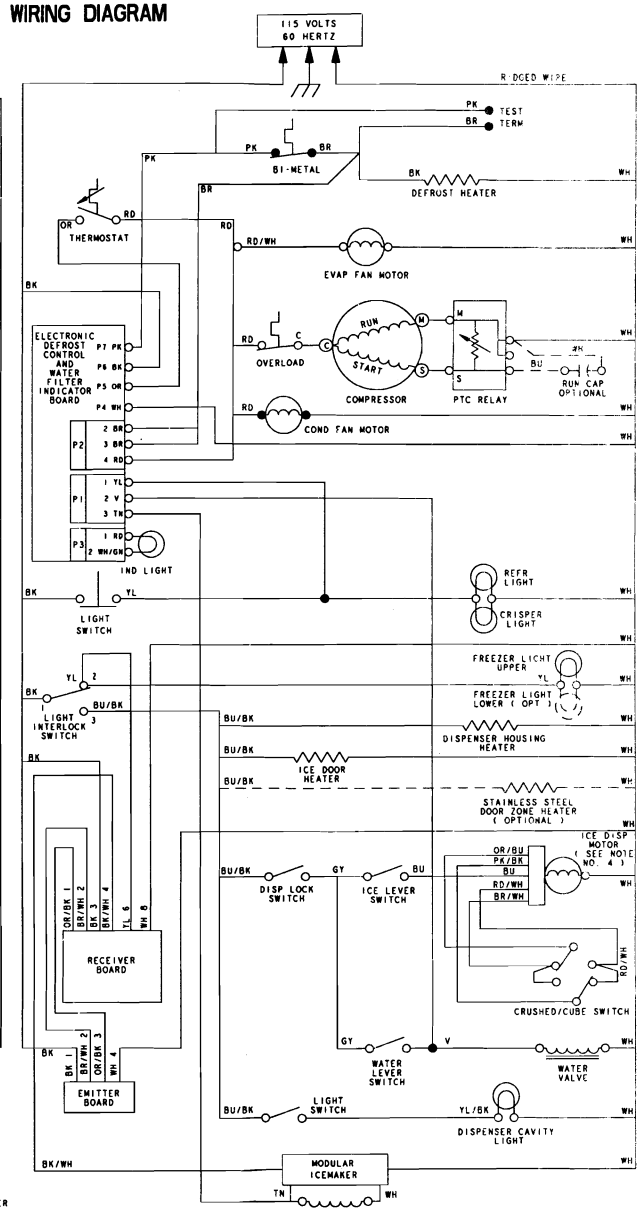

WIRE COLOR CODE

- BU = BLUE
- BK = BLACK
- RD = RED
- WH = WHITE
- YL = YELLOW
- OR = ORANGE
- BR = BROWN
- GY = GRAY
- PK = PINK
- V = VIOLET
- TR = TAN
- WH/GN = WHITE/GREEN TRACER
- OR/BK = ORANGE/BLACK TRACER
- YL/RD = YELLOW/RED TRACER
- BU/BK = BLUE/BLACK TRACER
- WH/BU = WHITE/BLUE TRACER
- BK/YL = BLACK/YELLOW TRACER
- WH/RD = WHITE/RED TRACER
- GN/YL = GREEN/YELLOW TRACER
- BK/WH = BLACK/WHITE TRACER
- YL/BK = YELLOW/BLACK TRACER
- PK/BK = PINK/BLACK TRACER
- BR/WH = BROWN/WHITE TRACER
- OR/BU = ORANGE/BLUE TRACER
- RD/WH = RED/WHITE TRACER

MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING UNITED STATES PATENTS

3,960,631	4,659,157	4,765,696	4,908,544	5,011,101
4,084,725	4,665,708	4,767,896	4,811,508	5,033,182
4,090,841	4,694,553	4,766,353	4,814,928	5,033,213
4,102,860	4,706,169	4,776,176	4,820,758	5,042,390
4,327,557	4,707,401	4,787,216	4,824,680	5,044,704
4,330,310	4,709,536	4,789,362	4,834,541	5,050,777
4,640,437	4,715,612	4,800,335	4,836,641	5,070,706
4,649,712	4,728,759	4,801,181	4,844,586	5,077,905
4,649,717	4,745,656	4,833,894	4,898,890	5,099,461
4,649,718	4,745,775	4,862,577	4,896,648	

SYMBOL CODE

- (●) = CONNECTOR - SCREW ON
- (○) = CONNECTOR - CLOSED END
- = DISCONNECT TERMINAL
- = PERMANENT TERMINAL
- = PLUG CONNECTOR
- ⎓ = GROUND (CHASSIS)

SERVICE & WIRING SHEET NO. 2220104REL

2220104REL